

Part Number:	KS0005
Product Description:	CARGO/PET BARRIER
Suited to Vehicle/s:	TOYOTA FJ CRUISER


NOTICE	PLEASE NOTE THIS BARRIER IS DESIGNED AS A PET BARRIER OR AS A LIGHT CARGO BARRIER FOR USE DURING OFF ROAD ACTIVITIES
---------------	--

Contents

- | | |
|---------------------------------|--------------------------------|
| 1 x Barrier | 2 x M6 Flanged Bolts |
| 3 x Head Rest Brackets | 4 x M6 Washers |
| 2 x Barrier Brackets | 3 x M10 Button Head Cap Screws |
| 2 x Black M6 Adjustable Handles | 3 x M10 Washers |
| 1 x Black M10 Plastic Knob | |

Preparation

Remove headrests.
Remove the hooks in the rear cargo area.
Pry open the plastic covers and remove the M6 bolts with a 10mm socket wrench.

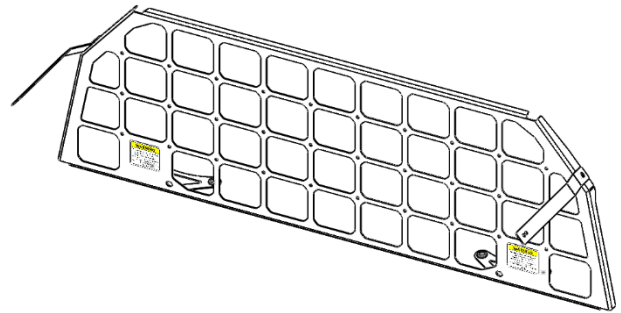

Slide the Headrest brackets onto the headrests.
Position the bracket so that the M10 tab points up and towards the back of the head rest.

Installation

Position the barrier behind the headrests and loosely secure with the M10 dome head bolts and M10 washers.



Secure the barrier bracket to the barrier with M6 bolts and M6 washers.

The Barrier bracket is then secured to the M6 hole in the vehicle using the M6 adjustable handle.

Once the barrier is in the desired position, tighten all bolts and knobs securely.



M10 knob is provided if you would like the option of easily folding down the 40-split seat.

BOLT TORQUE	Dia. (mm)	5mm dia	6mm dia.	8mm dia.	10mm dia.	12mm dia.
	(Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm