

FITTING INSTRUCTIONS FOR


Light Cargo Barrier

SKU

COMPATIBILITY

KS0007

Toyota LandCruiser LC80

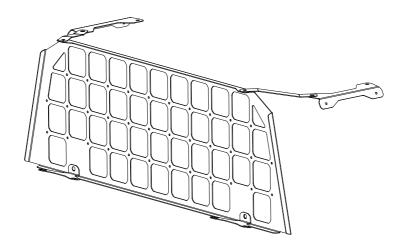

Included contents						
QTY	COMPONENT	QTY	COMPONENT			
1	Light Cargo Barrier	2	M6 Flanged Bolts			
2	Handle Brackets	2	M6 Washers			
2	Barrier Brackets	2	M10 Button Head Cap Screws			
2	Head Rest Brackets	2	M10 Washers			
2	Black Plastic M10 Knobs					

Time 30

30 minutes / Half a beer

Bolt Torque					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.


Preparation

- 1. Remove rear handles.
- Position the bracket under the handle and re-attach using the original bolts. Ensure the bracket is in the correct orientation, as pictured.



Installation

- Remove the head rests and slide on the head rest brackets. Reinstall the head rests with brackets in place.
- Position the main barrier and loosely secure to the head rest brackets using the M10 Button Head Cap Screws and M10 Washer.
- Attach the upper brackets to the barrier using the supplied M6 Bolts and M6 Washer.
- 4. Attach the Barrier Bracket to the flat Handle Bracket using the M10 Knob.
- The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.

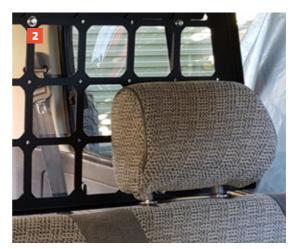





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.