



FITTING INSTRUCTIONS FOR


# Fuel Tank Guard

SKU

**KS0011**

COMPATIBILITY

**Toyota Prado 120**

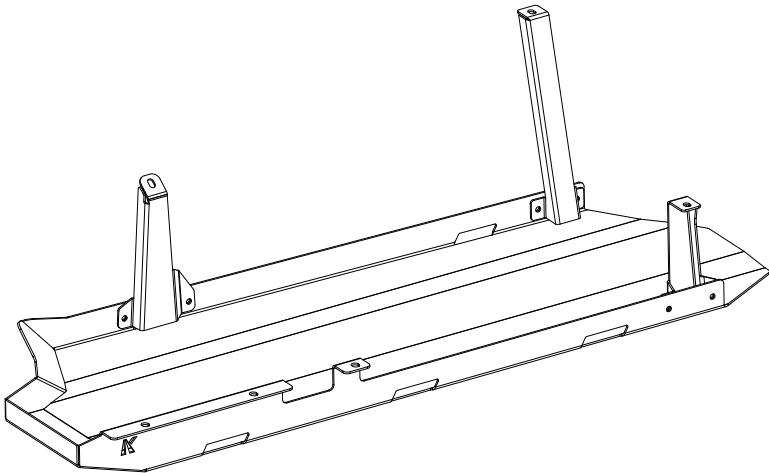

## Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Fuel Tank Guard	6	M8x16 Flanged Bolts
1	Short Bracket (for the rear)	6	M8x25 Flanged Bolts
1	Medium Bracket (for the front)	6	M8 Flanged Nuts
1	Long Bracket (for the rear)	6	M8 DIN Washers



**Time**

30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or [info@kaon.com.au](mailto:info@kaon.com.au)


Bolt Torque					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

# Let's get to work.

---

## Preparation

- 1. Remove existing guard and clean all surfaces of debris and dirt.
- 2. Use the M8 bolts and nuts to attach the short and long size brackets to the rear of the guard and the medium size bracket (etched FTG120-04D) to the front of the guard, as shown.

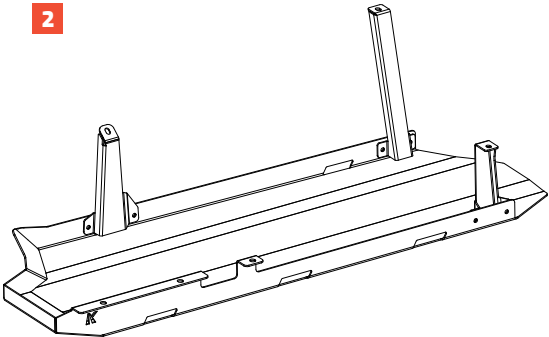

---

## Installation

1. Prepare six M8 bolts & washers by lubricating the threads using Copper Eze or similar lubricant.
2. Loosely install the fuel tank guard to the existing mounting points using the six M8 bolts.
3. Tighten all bolts, and you're done!





### **Local Knowledge & Assistance**

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

**For further information call 07 3180 1470 or email [info@kaon.com.au](mailto:info@kaon.com.au)**

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.