



FITTING INSTRUCTIONS FOR


Rear Shock Guards

PART NUMBER

KS0014

COMPATIBILITY

Toyota Prado 150 & FJ Cruiser

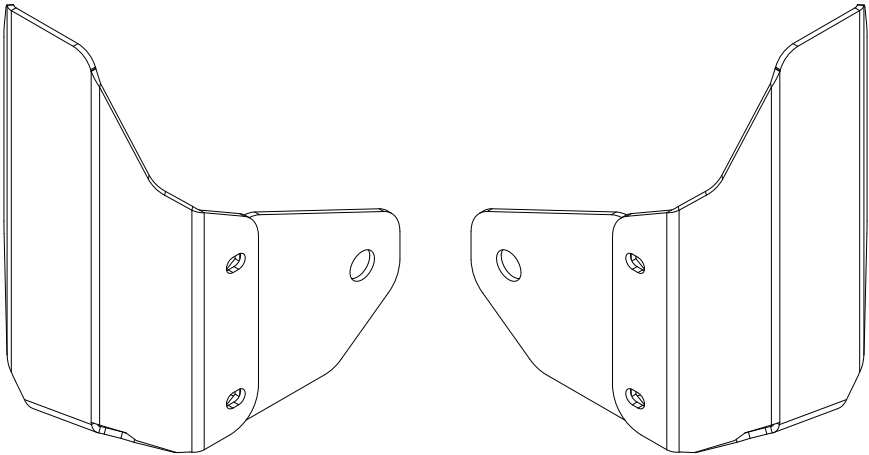

Included contents

QTY	COMPONENT	QTY	COMPONENT
2	Rear Shock Guards (LHS and RHS)	2	H6 Hex Bolts
2	Bottom Brackets (LHS and RHS)	2	M6 DIN Washers
2	M10 Unistrut Nuts	2	M10 DIN Washers
2	M10 Hex Bolts		



Time

30 minutes / Half a beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or **info@kaon.com.au**



Bolt Torque					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm


Let's get to work.

Preparation

1. We want a nice clean starting surface, so remove any dirt and debris from the mounting surfaces on the shock absorber mount.
-

Installation of Bottom Brackets

1. Attach the bottom bracket using the existing lower shock bolt.
2. Secure the other hole using the provided M10 bolt, unistrut nut and washer.
3. Tighten all bolts to required torque as per table.

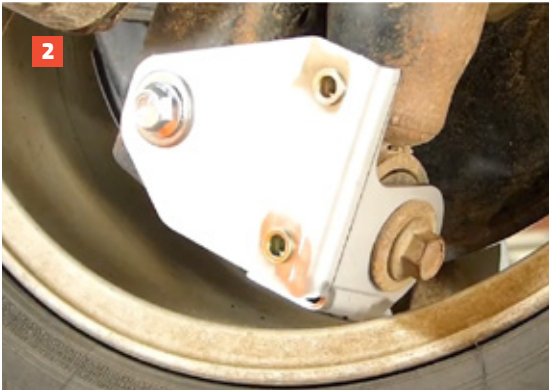

Installation of Shock Guard

1. Attach the front guard using the M6 bolts and washers.
2. Check position of the guard, and then tighten all bolts to required torque as per table.
3. Repeat for the opposite side.





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.