



FITTING INSTRUCTIONS FOR


Light Cargo Barrier

SKU

KS0015

COMPATIBILITY

Nissan Patrol Y61 GU

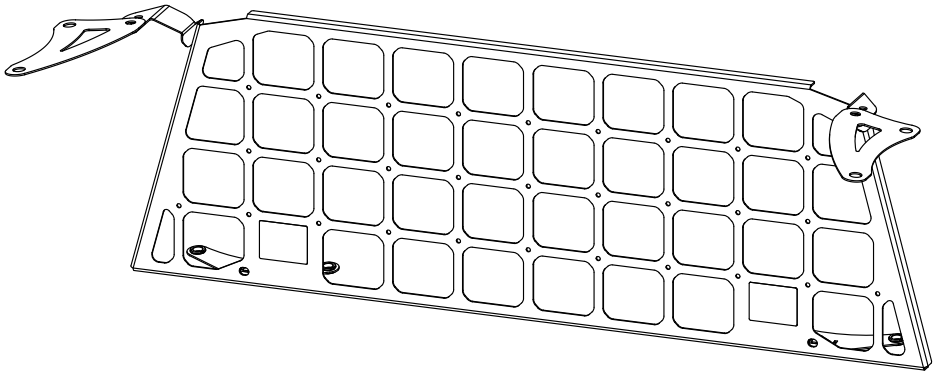

Included contents

| QTY | COMPONENT | QTY | COMPONENT |
|-----|----------------------------------|-----|---------------------------------|
| 1 | Light Cargo Barrier | 2 | M6 DIN Washers |
| 2 | Head Rest Brackets (LHS and RHS) | 2 | M6 x 16 Flanged Bolts |
| 2 | Barrier Brackets (LHS and RHS) | 2 | M10 x 20 Button Head Cap Screws |
| 2 | M10 x 20 Black Plastic Knob | 2 | M10 DIN Washers |





Time

30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

It all works together.

All our storage products work together, but there is a certain order to installing. Let's work out the best order for your setup, shall we?

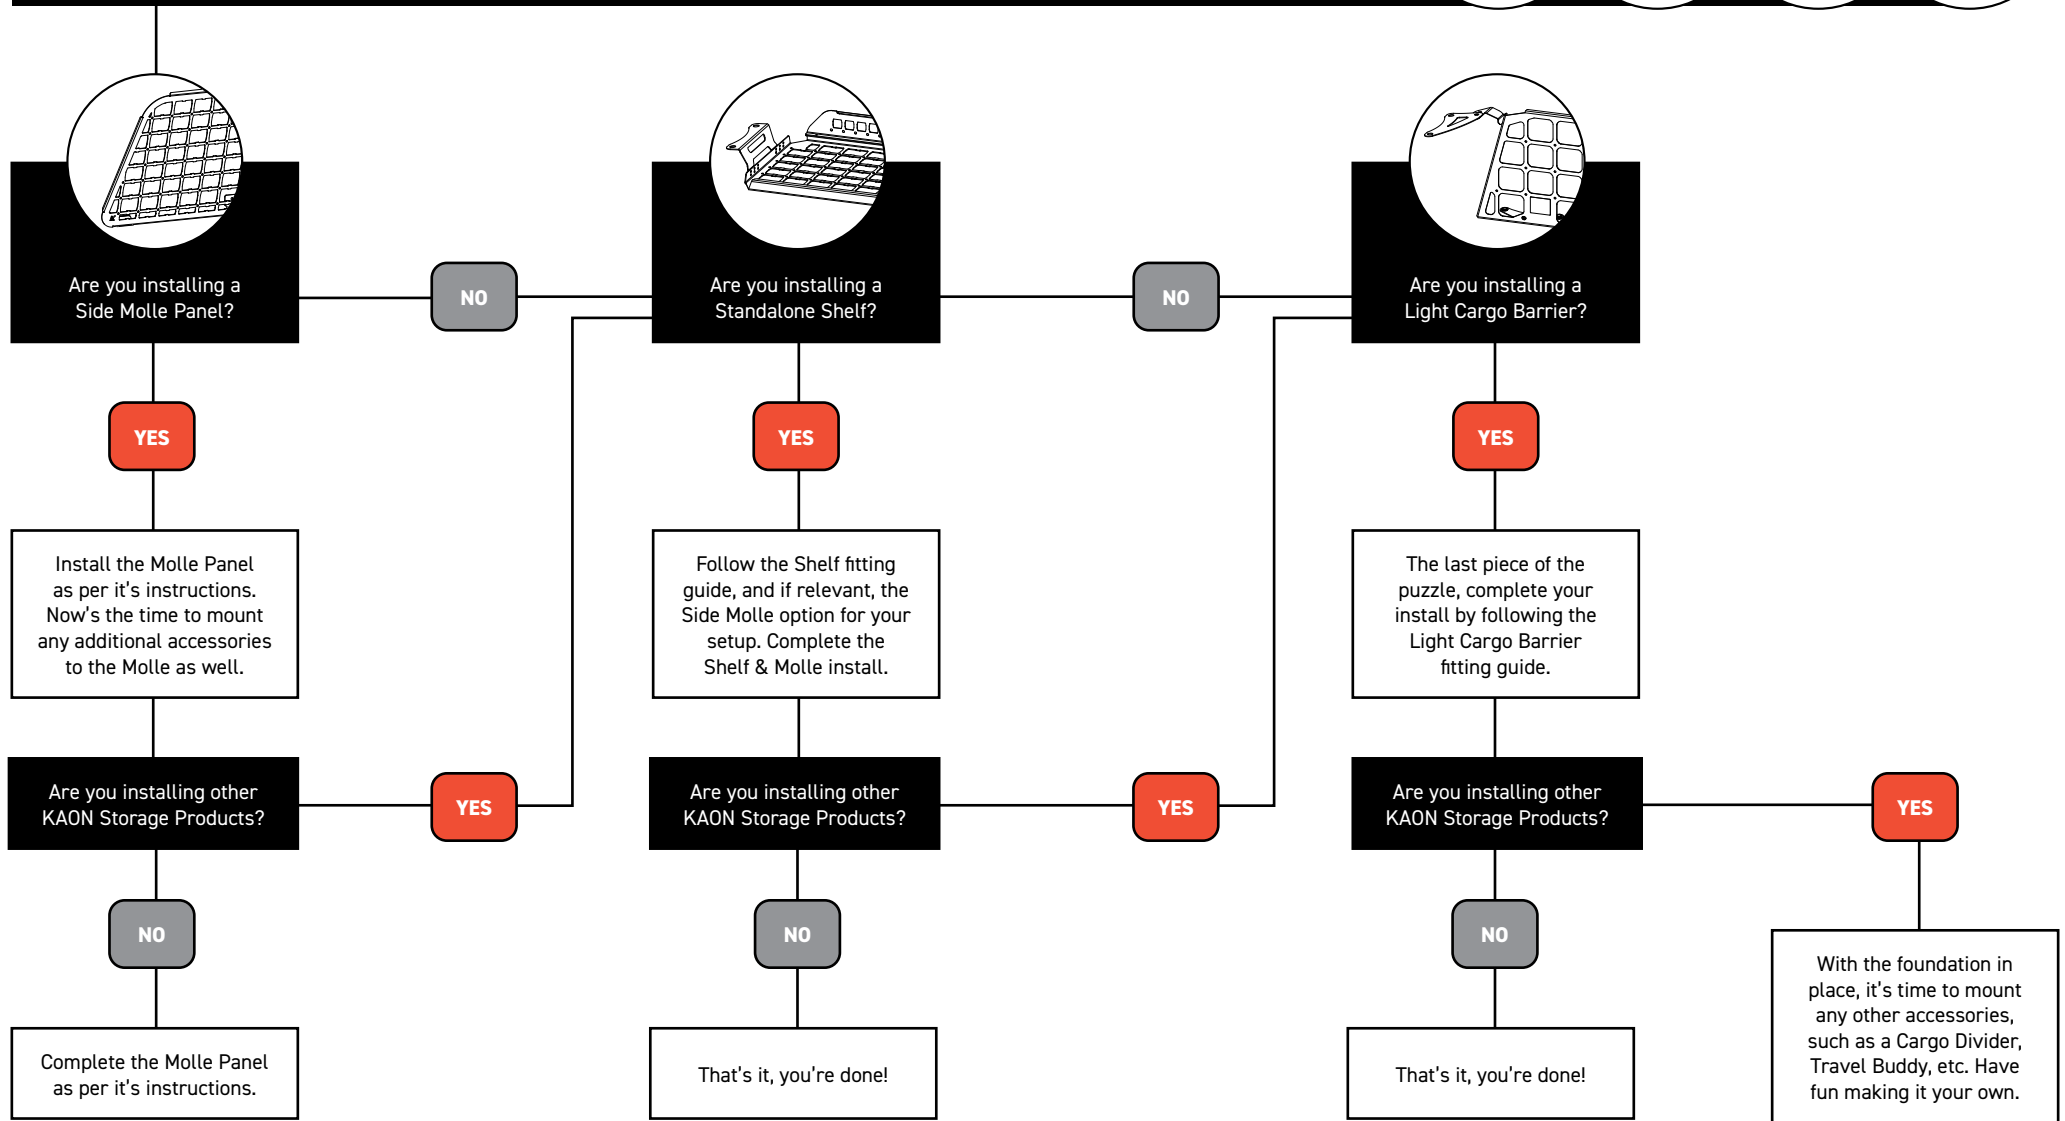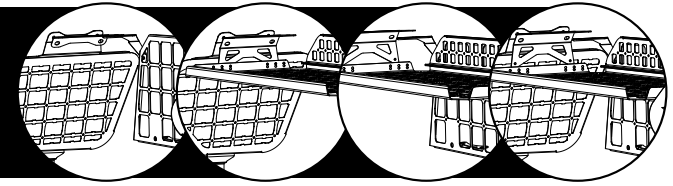

With your setup order sorted, let's get to the good part: installing. →

Let's get to work.

Preparation

If you are installing with the Side Molle Panels or Standalone Shelf, complete their instructions first, then skip to step 3.

1. Pry open the plastic covers on the rear grab handles with a small flat-blade screwdriver or trim tool.



Installing the Brackets

2. Position the flat brackets under the handle and re-attach using the original bolts. Ensure the bracket is in the correct orientation, as pictured.



Assembling the Barrier

3. Attach the Barrier Brackets to the Barrier using the supplied M6 bolts and washer.



Installing the Barrier

4. Secure the Barrier Bracket to the Handle Bracket nutsert using the M10 knob.
Adjust the position of the barrier by selecting the most suitable hole in the barrier bracket.
5. Remove the Head Rests and slide on the Head Rest Brackets. Re-install the head rests with brackets in place.
6. Position the main Barrier and loosely secure it to the Head Rest Brackets using the M10 domed head bolts and M10 washer.
7. Once the barrier is in the desired position, tighten all bolts and knobs securely.
8. That's it, you're done! The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.



NOTICE

This barrier has not been tested to Australian Standards, and is intended as a pet barrier or for use when off-road.

Bolt Torque

| | | | | | |
|--------------------|------|------|-------|-------|-------|
| DIAMETER (mm) | 5mm | 6mm | 8mm | 10mm | 12mm |
| NEWTON-METRES (Nm) | 5 Nm | 9 Nm | 22 Nm | 44 Nm | 77 Nm |



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.