



FITTING INSTRUCTIONS FOR


Light Cargo Barrier

SKU

KS0018

COMPATIBILITY

Toyota Prado 120 / Lexus GX 470

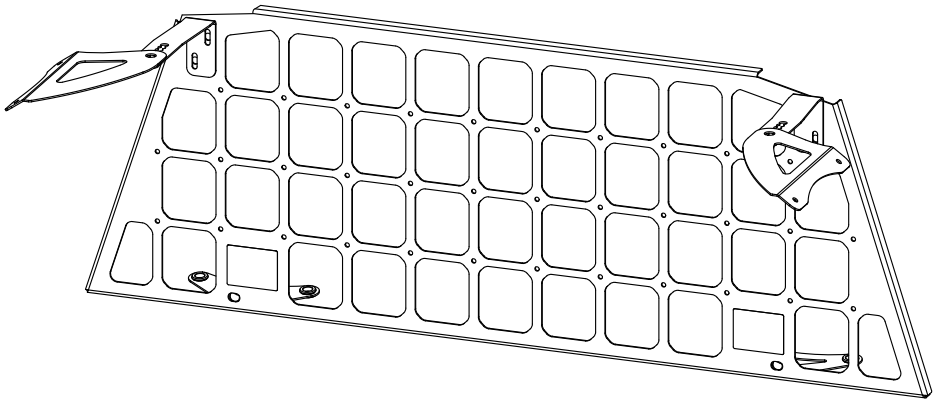

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Light Cargo Barrier	4	M6 X 18 X 1.6 DIN Flat Washer
2	Head Rest Bracket	4	M6 x 16 Flanged Hex Bolt G8.8
2	Handle Bracket (LHS & RHS)	2	M10 x 20 Button Head Socket Screw
2	Barrier Bracket (LHS & RHS)	2	M10 x 30 x 2.5 DIN Flat Washer
2	M10 x 20 Black Plastic Knob		



Time



30 minutes / Half a beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or **info@kaon.com.au**



It all works together.

All our storage products work together, but there is a certain order to installing.
Let's work out the best order for your setup, shall we?

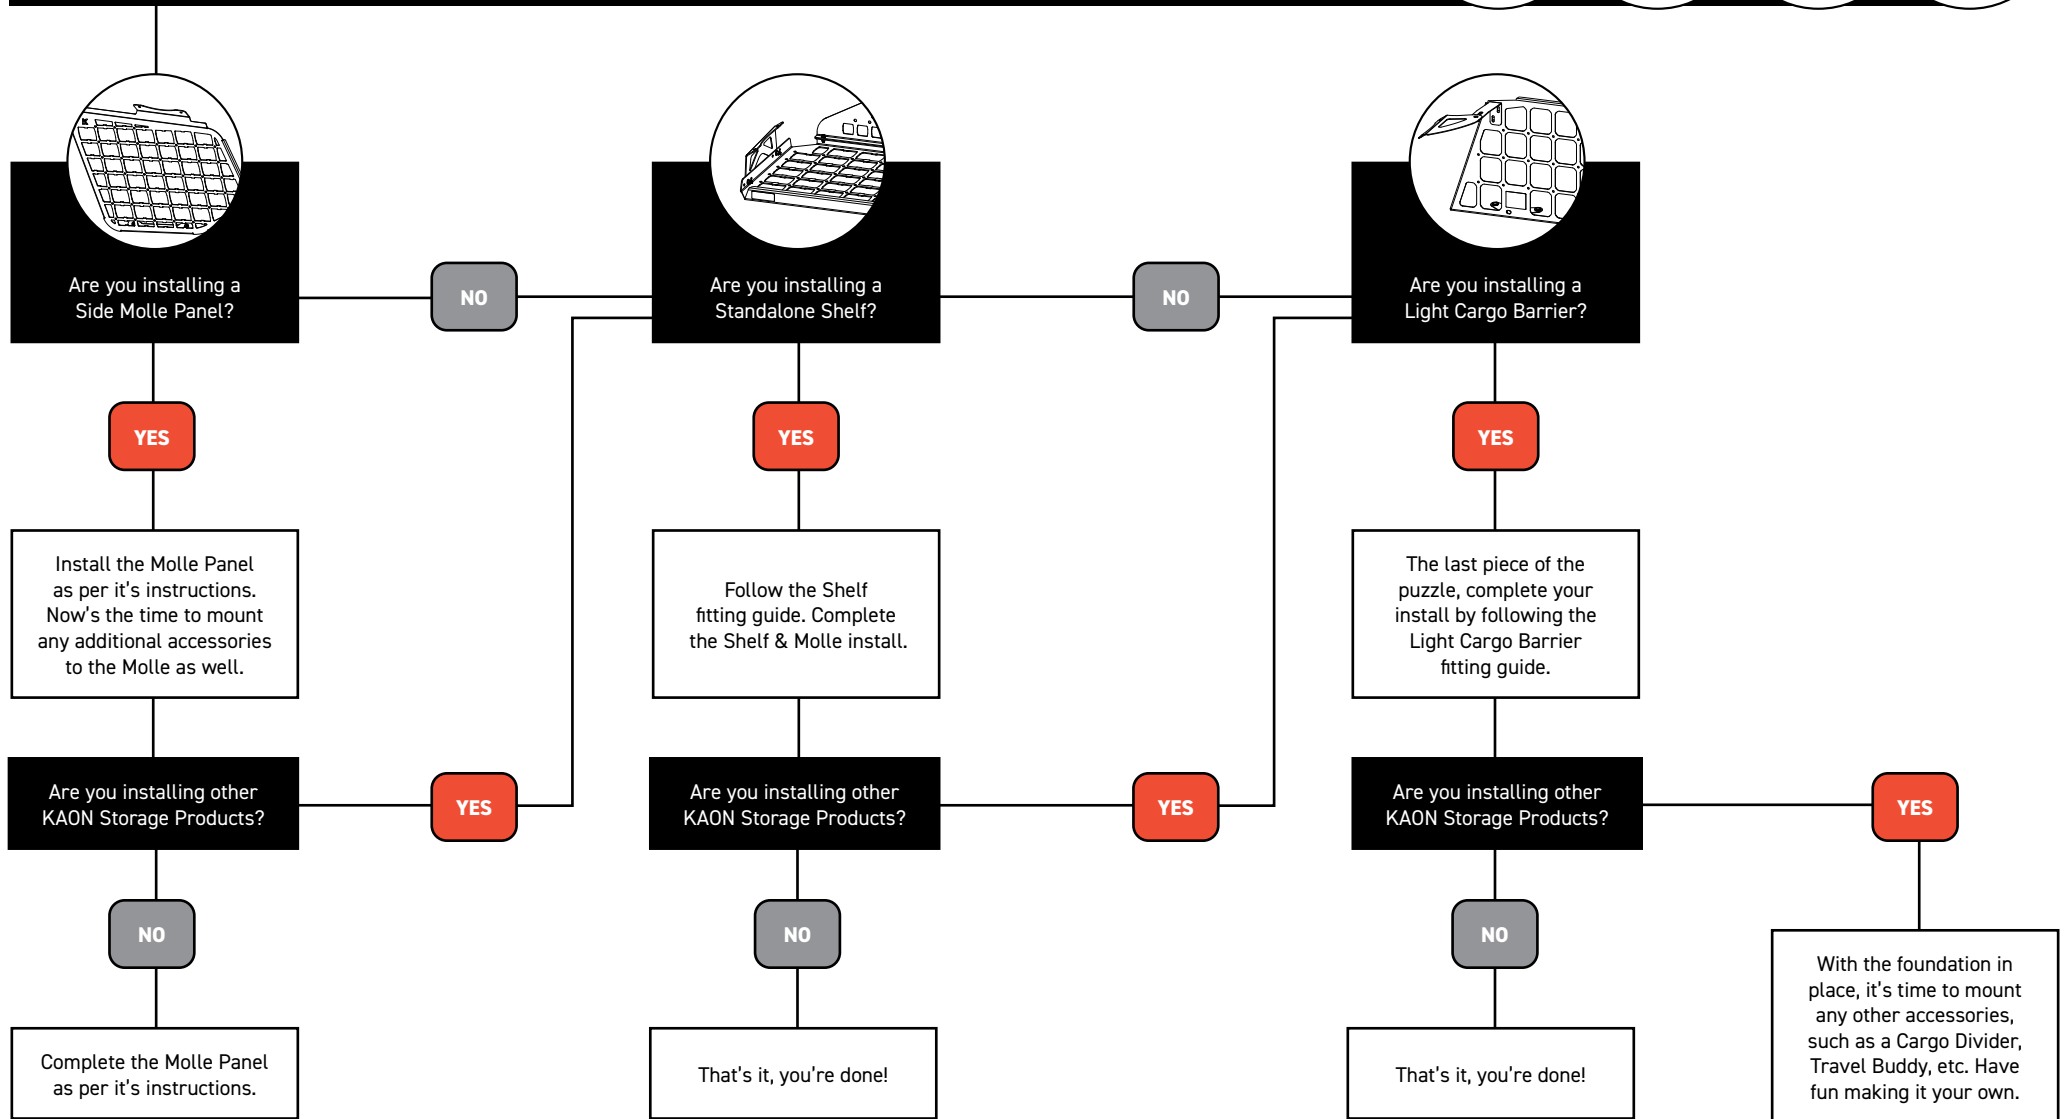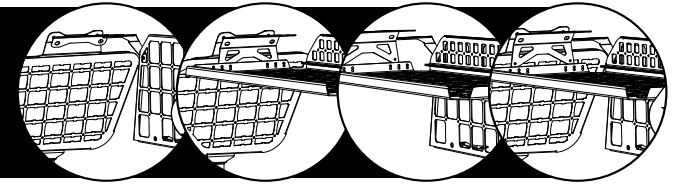


With your setup order sorted, let's get to the good part: installing. →

Let's get to work.

Preparing the Vehicle

1. Whether you're starting from a factory rear, or with existing KAON accessories, we need to remove the rear row grab handles.

Remove the grab handles by prying open the plastic cover and removing the bolts with a socket.

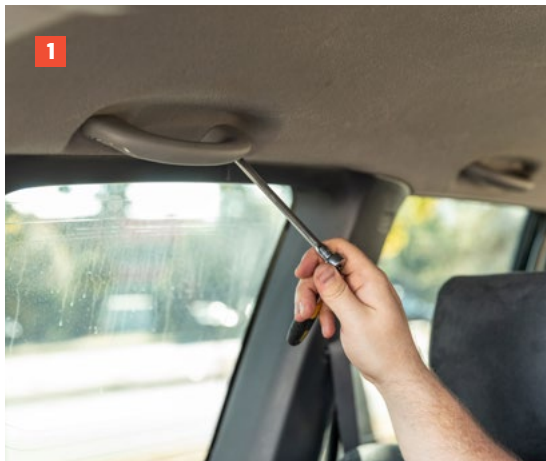


Installing the Brackets

2. Thread the Handle Brackets over the rear grab handles, ensuring the orientation as pictured. Ensuring the nutsert is towards the front of the vehicle, tighten to secure.

To install with the Standalone Shelf and/or Side Molle Panels:

Follow the installation order on page 3. Their Handle Brackets should be sandwiched under the Barrier Handle Brackets at this stage.

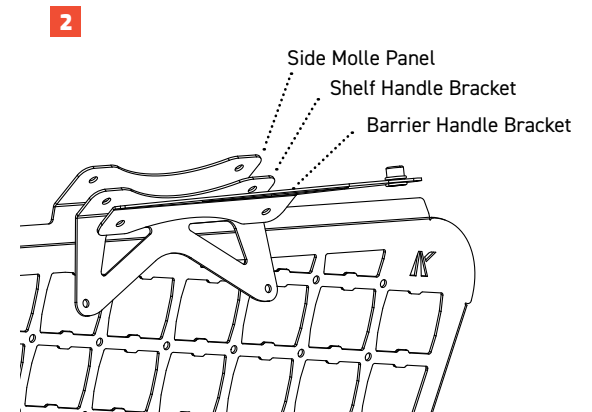



Assembling the Barrier

3. Attach the barrier brackets to the barrier using the supplied M6 bolts, ensuring that the barrier brackets are attached in the correct orientation.



Installing the Barrier

4. Remove the head rests and slide on the head rest brackets. Re-install the head rests with brackets in place.
5. Position the main barrier against the head rests. The flanged edge on the barrier should be directed forwards, and the warning stickers should be visible from the rear of the vehicle.
6. Loosely secure it to the head rest brackets using the M10 domed head bolts and M10 washer.
7. Attach the barrier bracket to the handle bracket nutsert using the M10 knob. You can adjust the position of the barrier by selecting the most suitable hole in the barrier bracket.
8. Once the barrier is in the desired position, tighten all bolts and knobs securely. That's it, you're done! The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.

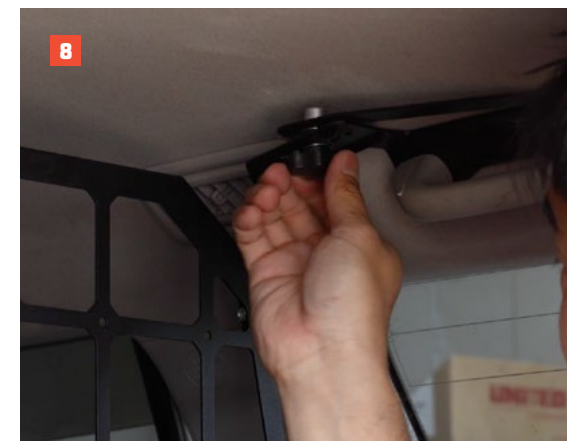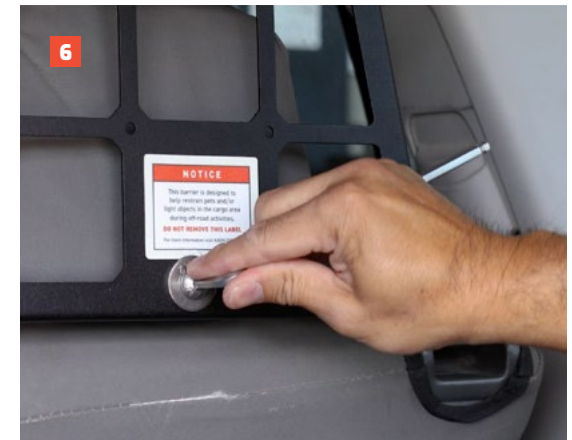

Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

NOTICE

This barrier has not been tested to Australian Standards, and is intended as a pet barrier or for use when off-road. We cannot confirm compatible fitment of the this barrier with child restraints, due to the number of possible variations. Whilst it may work with your configuration, we recommend the use of a seat belt protector where any contact occurs between any seat belt or restraint and the barrier.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.