



FITTING INSTRUCTIONS FOR


Light Cargo Barrier

SKU

KS0020

COMPATIBILITY

Toyota LandCruiser LC76

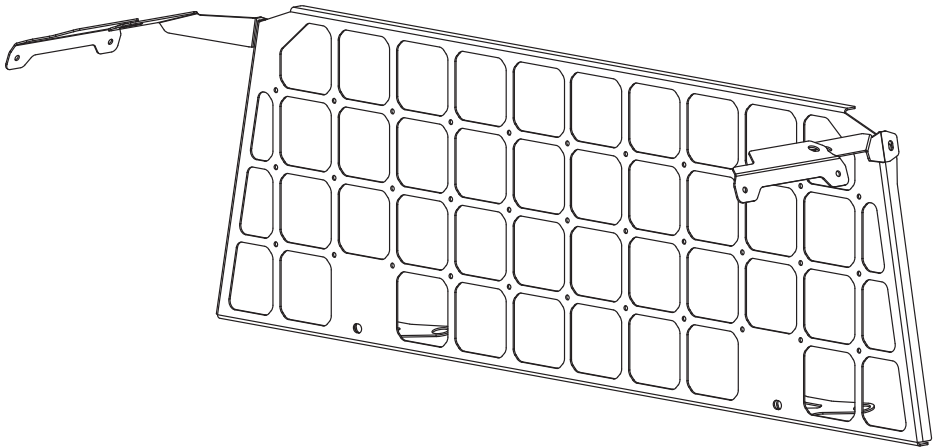

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Light Cargo Barrier	2	M6 X 18 X 1.6 DIN Flat Washer
2	Head Rest Bracket	2	M10 x 20 Button Head Socket Screw
2	Mounting Bracket (LHS & RHS)	2	M10 x 30 x 2.5 DIN Flat Washer
2	Barrier Bracket (LHS & RHS)	2	M10 x 20 Black Plastic Knob
6	M6 x 16 Flanged Hex Bolt G8.8		




Time



30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

It all works together.

All our storage products work together, but there is a certain order to installing.
Let's work out the best order for your setup, shall we?

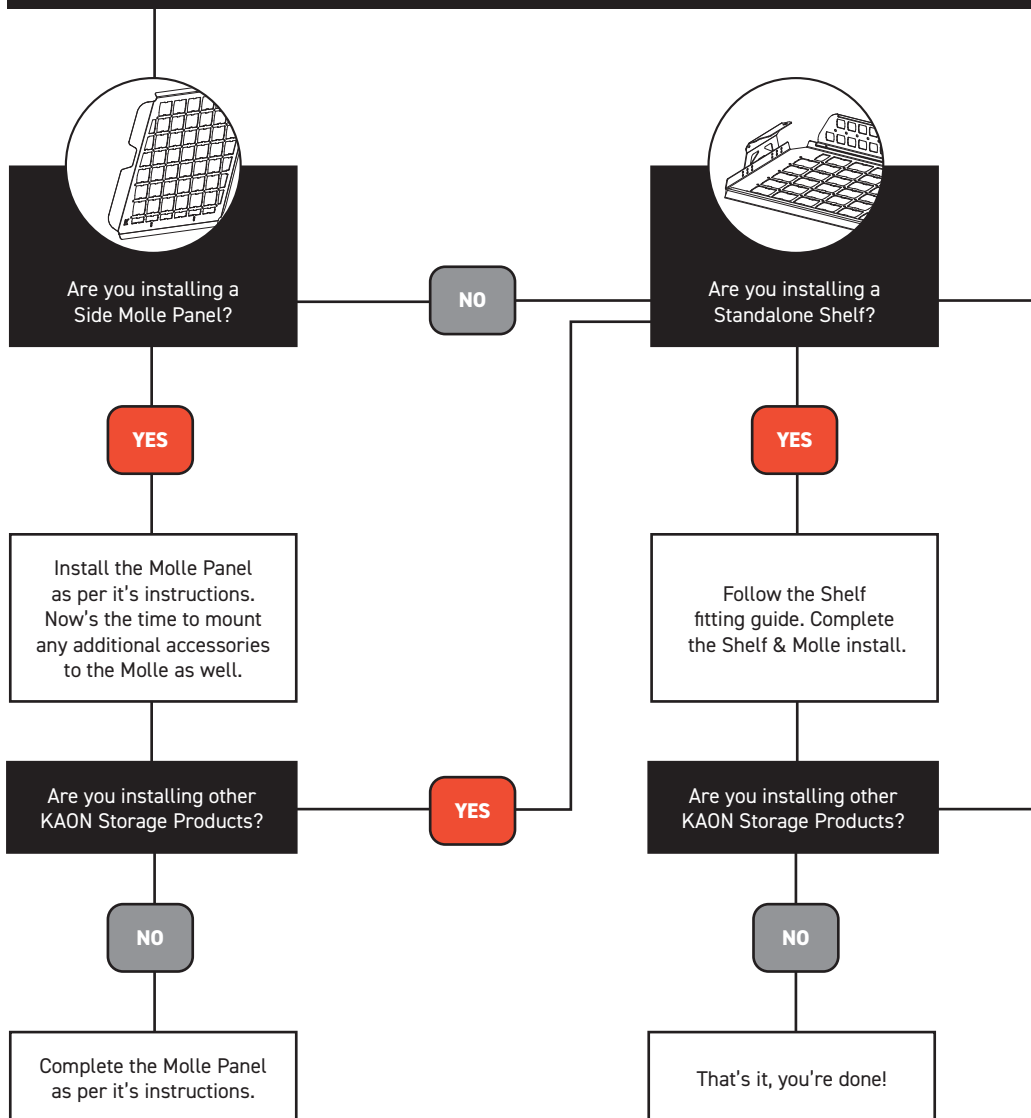

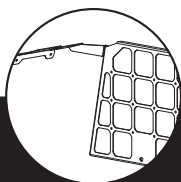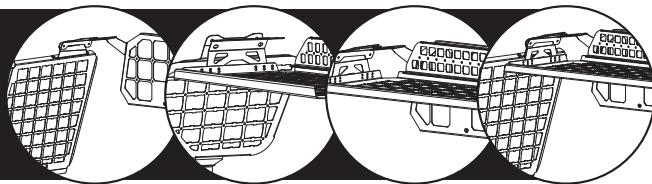

Are you installing a
Light Cargo Barrier?

NO

YES

The last piece of the
puzzle, complete your
install by following the
Light Cargo Barrier
fitting guide.

Are you installing other
KAON Storage Products?

YES

NO

That's it, you're done!

YES

With the foundation in
place, it's time to mount
any other accessories,
such as a Cargo Divider,
Travel Buddy, etc. Have
fun making it your own.

With your setup order sorted, let's get to the good part: installing. →

NOTICE

This barrier has not been tested to Australian Standards, and is intended as a pet barrier or for use when off-road.

Let's get to work.

Preparing the Vehicle

1. Our mounting brackets affix to two points, the first of which is under the plastic cap, above the third window, just behind the C pillar. Pry this cap off using a knife or screwdriver.
2. Our second mounting point is a captive nut hidden under the roof lining, and so it isn't visible. To locate it, take your mounting bracket, and secur it using an M6 bolt in the hole under the cap you just removed.
3. Running your hand along the lining towards the front of the car, you should be able to feel the second hole as a small depression under the lining. Move the bracket into position, and ensuring it's straight, use a screwdriver to poke a hole through the lining into the depression.



Bracket Installation

- 4. If you're installing the Light Cargo Barrier on its own:** Following on from step 3, slip an M6 bolt through the hole made in the lining and tighten to hold the bracket in place. Repeat on the other side.

If you're installing with Side Mole Panels: this rear interior storage product will need to be installed first. Follow the installation order in the flowchart on page 2 before proceeding.

If you're installing with a Standalone Shelf: You will notice that the mounting brackets for the shelf include a nutsert mounting point for the cargo barrier, as pictured. Due to this, this bracket will need to be installed prior to the cargo barrier. Follow the installation order in the flowchart on page 2 before proceeding.

Please note: If you have an older version of the shelf that does not include a mounting point, simply proceed with the Cargo Barrier instructions until completion. After this, install the Standalone shelf, layering the mounting brackets for this product on top of the cargo barrier's.



**STANDALONE SHELF
MOUNTING BRACKET**

Assembling the Barrier

5. Attach the barrier brackets to the barrier using the supplied M6 bolts and washers.



Installing the Barrier

6. Remove the head rests and slide on the head rest brackets. Re-install the head rests with brackets in place.
7. Position the main barrier against the head rests. The flanged edge on the barrier should be directed forwards, and the warning stickers should be visible from the rear of the vehicle.
8. Loosely secure it to the head rest brackets using the M10 domed head bolts and M10 washer.
9. Attach the barrier bracket to the mounting bracket nutsert using the M10 knob. You can adjust the position of the barrier by selecting the most suitable hole in the barrier bracket.
10. Once the barrier is in the desired position, tighten all bolts and knobs securely.
11. That's it, you're done!
The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.

Please note: If you have the older version of the Standalone Shelf that you are installing in conjunction with the cargo barrier, you may now complete the install of that product as per it's instructions.





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.