



FITTING INSTRUCTIONS FOR


Light Cargo Barrier

PART NUMBER

KS0048

COMPATIBILITY

Mitsubishi Pajero Sport QE/QF & Challenger PB

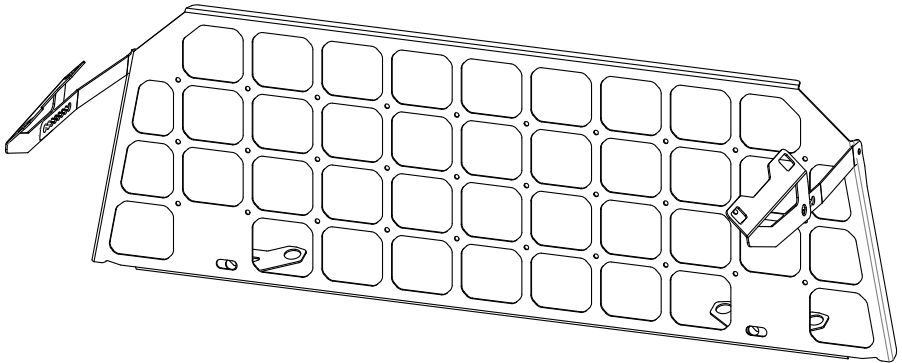

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Light Cargo Barrier	2	M6 Flanged Bolts
2	Head Rest Bracket	2	M6 DIN Washers
2	Handle Bracket (LHS & RHS)	2	M10 Button Head Cap Screws
2	Barrier Bracket	2	M10 DIN Washers
2	Black Plastic M10 Knobs		



Time

30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

NOTICE

This barrier has not been tested to Australian Standards, and is intended as a pet barrier or for use when off-road. We cannot confirm compatible fitment of this barrier with child restraints, due to the number of possible variations. Whilst it may work with your configuration, we recommend the use of a seat belt protector where any contact occurs between any seat belt or restraint and the barrier.

Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.



Preparation

1. Remove the rear handles.
2. Position the flat brackets under the handle and re-attach using the original bolts. Ensure the bracket is in the correct orientation as shown in the photo.
3. For 5-Seater Pajero Sport models with no grab handles, use the supplied fitting kit.
4. Remove the head rests and slide on the head rest brackets. Re-install the head rests with brackets in place.



Installation

1. Position the main barrier and loosely secure it to the head rest brackets using the M10 domed head bolts and M10 washer.
2. Attach the upper brackets to the barrier using the supplied M6 bolts and washer as shown.
3. Attach the bracket to the flat handle bracket using the M10 knob.
4. Adjust the position of the barrier by selecting the most suitable hole in the barrier bracket.
5. Once the barrier is in the desired position, tighten all bolts and knobs securely.
6. That's it, you're ready to go! The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.

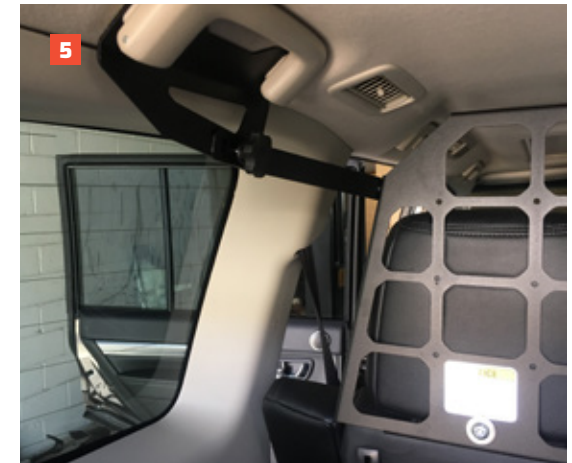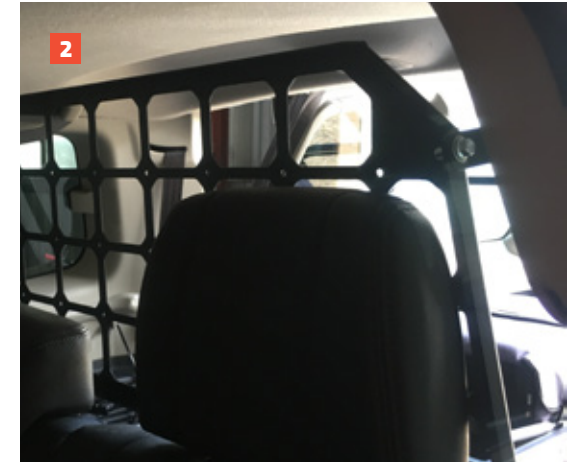



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.