

FITTING INSTRUCTIONS FOR


Light Cargo Barrier

SKU

COMPATIBILITY

KS0050

Toyota Fortuner AN150/160

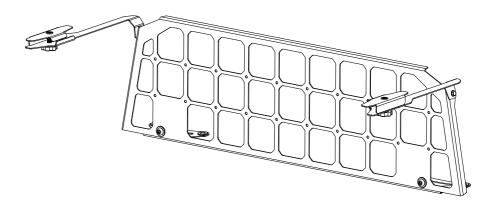

| Included contents | | | | | | |
|-------------------|-----------------------------|-----|-----------------------------------|--|--|--|
| Q Τ Υ | COMPONENT | QTY | COMPONENT | | | |
| 1 | Light Cargo Barrier | 2 | M6 x 16 Flanged Hex Bolt G8.8 | | | |
| 2 | Head Rest Bracket | 2 | M6 X 18 X 1.6 DIN Flat Washer | | | |
| 2 | Handle Bracket (LHS & RHS) | 2 | M10 x 30 x 2.5 DIN Flat Washer | | | |
| 2 | Barrier Bracket | 2 | M10 x 20 Button Head Socket Screw | | | |
| 2 | M10 x 20 Black Plastic Knob | | | | | |

؇ Time

30 minutes / Half a beer

For further information contact KAON on 07 3180 1470 or info@kaon.com.au

NOTICE

This barrier has not been tested to Australian Standards, and is intended as a pet barrier or for use when off-road.

| Bolt Torque | | | | | | | |
|--------------------|------|------|-------|-------|-------|--|--|
| DIAMETER (mm) | 5mm | 6mm | 8mm | 10mm | 12mm | | |
| NEWTON-METRES (Nm) | 5 Nm | 9 Nm | 22 Nm | 44 Nm | 77 Nm | | |

Let's get to work.

Preparation

- 1. Remove the second-row head rests.
- Slide the head rest brackets onto the head rests. Position the bracket so that the M10 tab points up and towards the back of the vehicle.
- 3. Re-install the head rests with brackets in place.





Installation

- Position the main barrier and loosely secure it to the head rest brackets using the M10 domed head bolts and M10 washer.
- 5. Attach the barrier brackets to the barrier using the supplied M6 bolts and washer as shown.
- 6. Attach the bracket to the handle using handle bracket and M10 knob.
- Once the barrier is in the desired position, tighten all bolts and knobs securely.
- That's it, you're ready to go! The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.











Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.