



FITTING INSTRUCTIONS FOR


Rear Door Drop Down Table

SKU

KS0052/511

COMPATIBILITY

Toyota Prado 120, Lexus GX 470

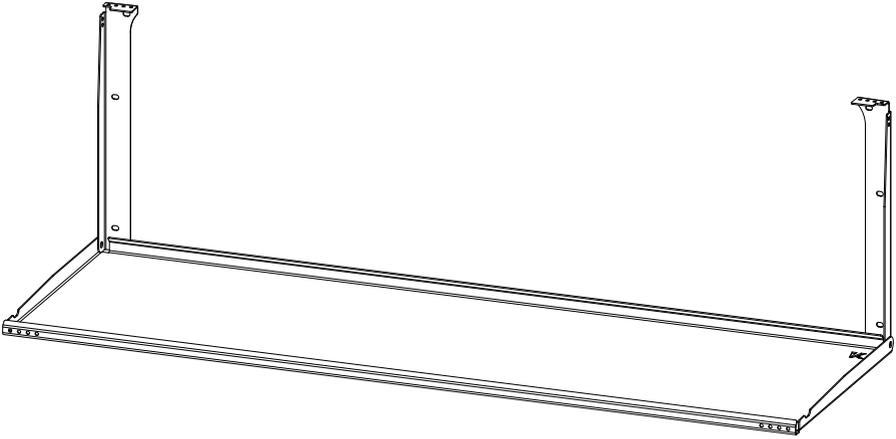

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Rear Door Table	2	M8 Nyloc Nuts
2	Mounting Brackets	2	Plastic Cord Buttons
2	Paracord 670mm	8	M5 x 16 Button Head Socket Screws
6	Self Tapping Screws	12	M5 x 15 DIN Washers
2	M8 x 16 Flat Round Washer	8	M5 Nyloc Nuts
2	M8 x 16 Button Socket Head Screws		



Time



30 minutes / Half a beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or info@kaon.com.au



It all works together.

All our rear door products work together, but there is a certain order to installing. Installing multiple products? Here's the the best way for your configuration.

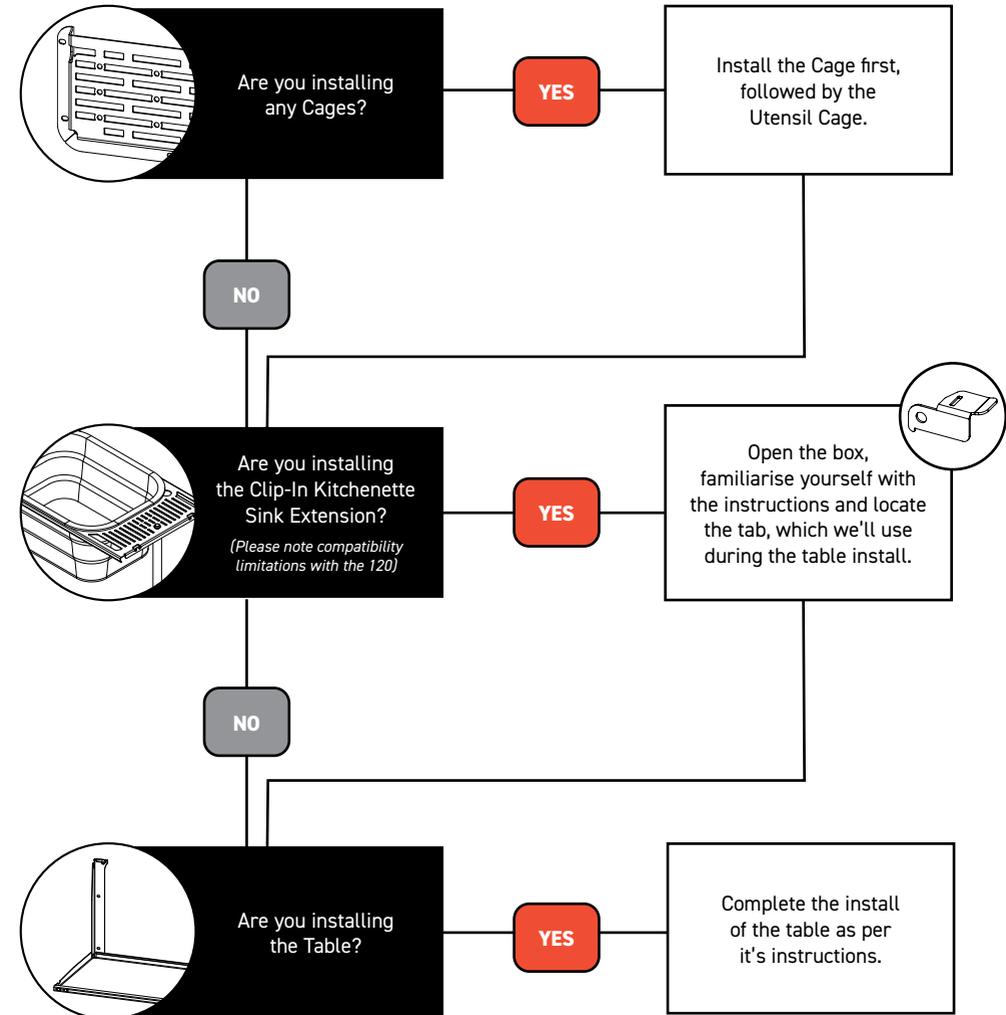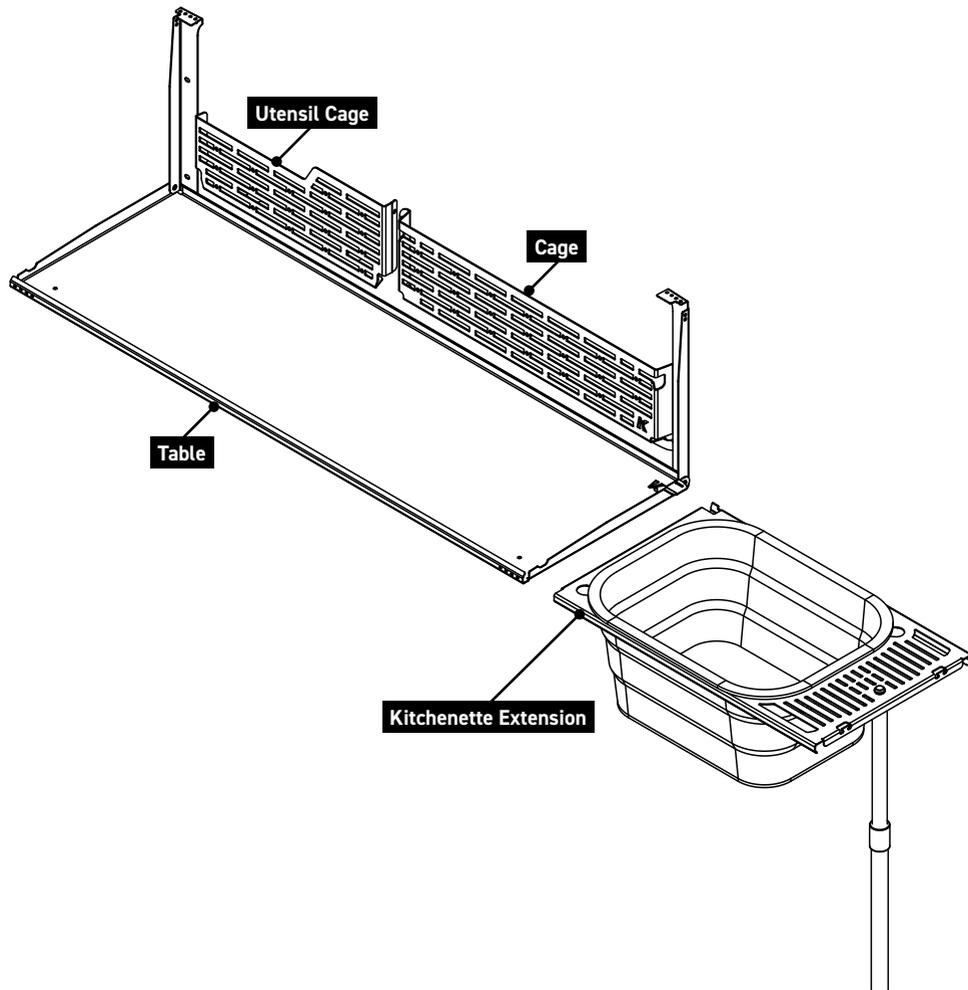

With the order sorted, let's get to the good part: installing. →

Let's get to work.

Bracket Installation

1. Ensure you are following the install order on page 3. If you are also installing any Cages we recommend tackling them first.
2. First, we need to mark out the position of the top of the table brackets on the rear door. Using a ruler and pencil, mark a line that follows the top edge of the trim shadow line, and continue it out to 60mm from the edge of the plastic door trim.
3. Position the bracket on the rear door. You want to ensure the top lines up with the pencil line we created in step 2. It should also line up with the curved corner of the trim. Allow a 3mm gap between the curve edge and the brackets, as pictured.
4. Mark the placement of the 3 holes.
5. Drill a 3mm hole in the top hole of the bracket, and attach the bracket using the supplied self-tapping screw. Drill the other remaining holes of the bracket and insert the self-tapping screws in place.
6. Repeat for both sides.
7. Whatever you do, **DO NOT OVERTIGHTEN** the screws.



Table Installation

8. Attach the table to the LHS bracket using the M8 button head screw and M8 round washer and tighten with the M8 nyloc nut. Ensure the table sits on the outside of the bracket and the washer is between the table and the bracket.
9. Repeat the process for the RHS table bracket.

If you are also installing the Kitchenette Clip-In Sink Extension:

Sandwich the supplied tab bracket between the washer and table on the RHS. Position the tab bracket so the holes line up and the tab bracket hangs over the right-hand side of the table, as pictured.

10. Tighten the bolts so that there is some resistance, whilst still letting the table open and close easily.

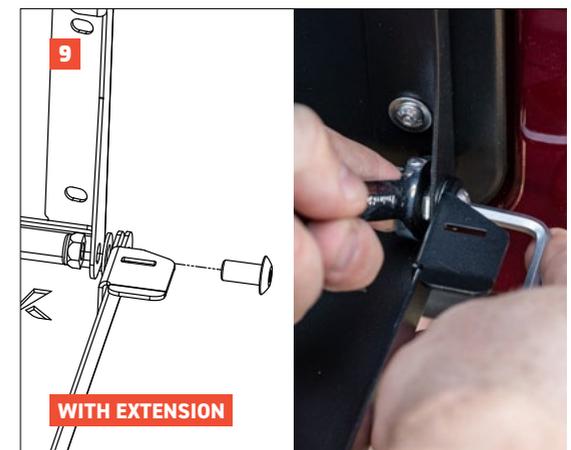
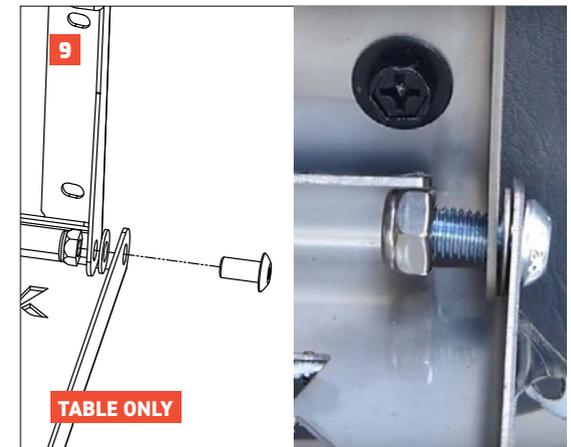


Table Installation cont.

11. To attach the support line, weave the paracord through the top holes of the bracket.
12. Weave the paracord through the bottom holes of the bracket.
13. Repeat on other side.
14. To install the bungee button, align the plastic cord button in the hole on the outer surface of the table and affix using the M5 x 16 dome head bolt and nyloc nut.



Table Installation cont

15. That's it, you're done!
16. If you're installing a Kitchenette Clip-In Sink Extension or a Clip-In Chopping Board, refer to the instructions provided with them. Note that the Kitchenette has compatibility limitations with the Prado 120 Rear Door Table.



Optional Step

We've found some folks prefer the extra security of bolting through the plastic panel. If this sounds like you, here's what you need to do:

1. Remove the rear door table by removing 6 self tapping screws.
2. Carefully remove the plastic panel off the rear door.
3. Drill and enlarge the mounting holes to 5mm.
4. Attach the brackets to the plastic panel using M5 dome head bolts, washers and nyloc nuts. Place the supplied washer on the inside of the plastic panel.
5. Check the position of the brackets and tighten all mounting bolts.
6. Reassemble the plastic panel and rear door table.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.