



FITTING INSTRUCTIONS FOR


Rear Antenna & Light Mount

SKU

KS0064

COMPATIBILITY

Toyota Prado 150, Lexus GX 460

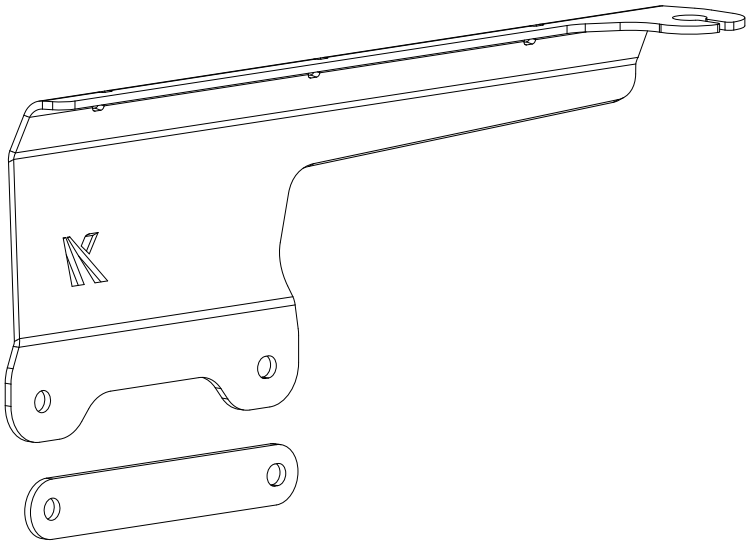

Included contents

QTY	COMPONENT
1	Double Rear Antenna & Light Mount
1	Rear Wheel Spacer
4	Small Cable Tie



Time

15 minutes / Few sips of beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

G8.8 Bolt Torque (Non-Lubricated)

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

Let's get to work.

Installation


1. Remove the rear spare wheel from the vehicle.
2. Next, remove the rear spare mount by loosening and removing the nut or bolt in each corner pictured, and set them aside.
3. Now is the time to install the accessories you've chosen to run on your double antenna/light mount.

If you're running wiring into the rear door, we recommend routing this first. We've included cable ties in this kit, and there is cutouts in the brackets to help make this a bit easier. Once you've got your wiring arranged, attach the accessory to the bracket on each end with a slotted opening.



Installation cont.

4. Now the mount is ready to be installed to the vehicle. Place in position over top two exposed bolts, as pictured.
5. Replace the rear spare mount to its original position, sandwiching the antenna mount between it and the door.
6. Next, loosely secure the two factory nuts over the top two bolt, just enough to hold the antenna mount's position against the door.
7. On the lower bolt openings, slide the spacer plate behind the rear spare mount, so that is in alignment with the bolt holes as pictured.
8. Replace the two bottom factory bolts to secure the rear spare mount back in position.
9. Tighten all bolts and nuts securing the rear spare mount to the door.
10. Replace the rear spare wheel.
11. That's it – you're done!
Now you've got a convenient for both your antenna or a spotlight for your camp on the road.

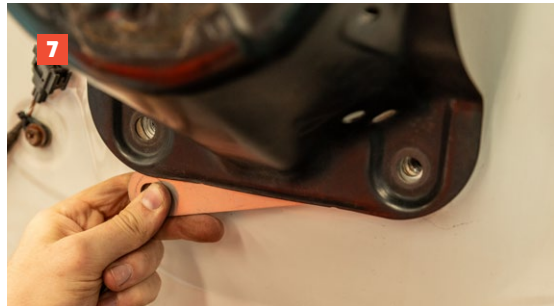



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.