



FITTING INSTRUCTIONS FOR


# Light Cargo Barrier

SKU

**KS0111/121**

COMPATIBILITY

**Mitsubishi Pajero Gen 4**

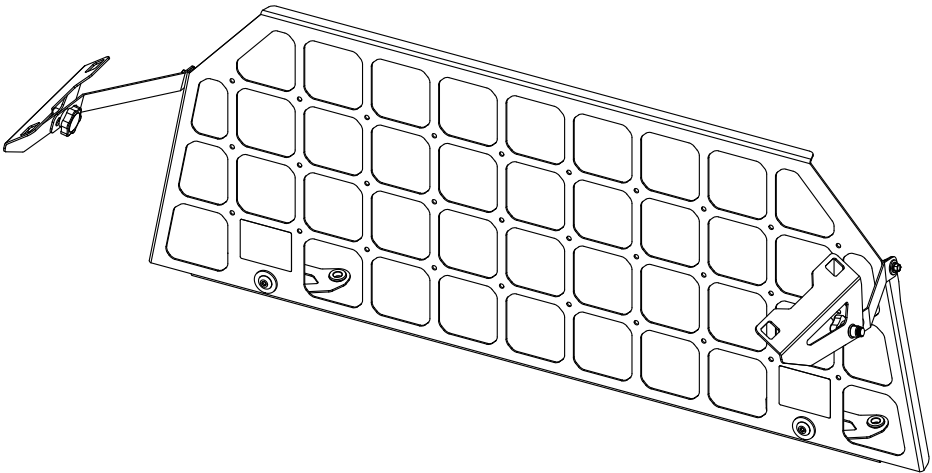

## Included contents

| QTY | COMPONENT                   | QTY | COMPONENT                         |
|-----|-----------------------------|-----|-----------------------------------|
| 1   | Light Cargo Barrier         | 2   | M6 x 16 Flanged Hex Bolt G8.8     |
| 2   | Head Rest Bracket           | 2   | M6 X 18 X 1.6 DIN Flat Washer     |
| 2   | Handle Bracket (LHS & RHS)  | 2   | M10 x 30 x 2.5 DIN Flat Washer    |
| 2   | Barrier Bracket             | 2   | M10 x 20 Button Head Socket Screw |
| 2   | M10 x 20 Black Plastic Knob |     |                                   |





**Time**

30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or [info@kaon.com.au](mailto:info@kaon.com.au)

# It all works together.

All our storage products work together, but there is a certain order to installing.  
Let's work out the best order for your setup, shall we?

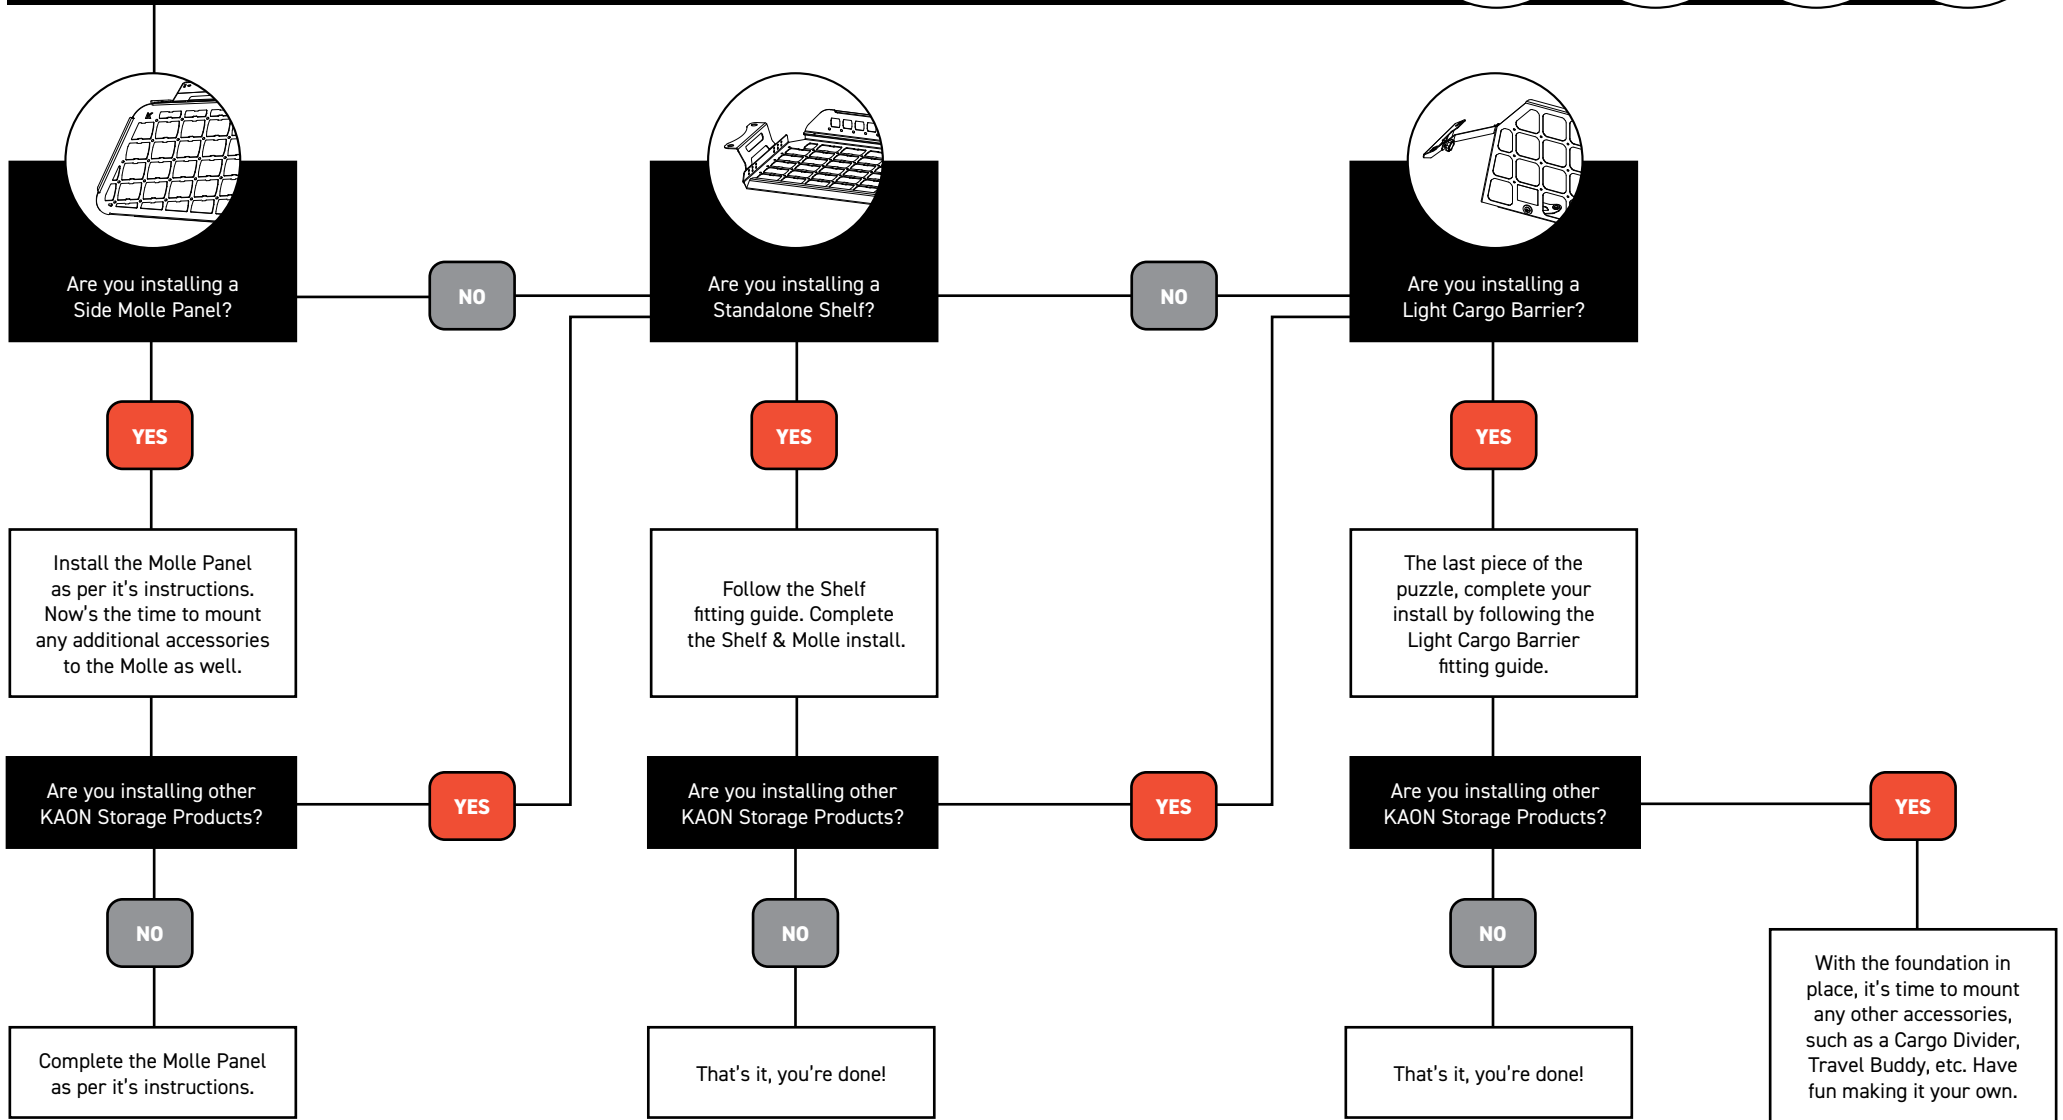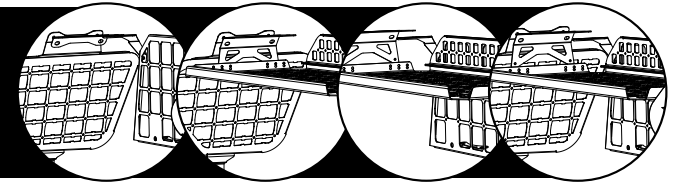

With your setup order sorted, let's get to the good part: installing. →

# Let's get to work.

---

## Preparing the Vehicle

1. Remove the rear grab handles by prying off the plastic cover and removing the bolts with a 8mm socket.



## Bracket Installation

2. If you're installing the Light Cargo Barrier on it's own: Place the handle brackets under the handles and reattach the handle brackets using M6 flanged bolts.

If you're installing with the Side Molle Panels and/or Standalone Shelf: any other KAON rear interior storage products will need to be installed first. Follow the installation order in the flowchart on page 2 before proceeding.



## Assembling the Barrier

3. Attach the barrier brackets to the barrier using the supplied M6 bolts.



## Installing the Barrier

4. Remove the head rests and slide on the head rest brackets. Re-install the head rests with brackets in place.
5. Position the main barrier against the head rests. The flanged edge on the barrier should be directed forwards, and the warning stickers should be visible from the rear of the vehicle.
6. Loosely secure it to the head rest brackets using the M10 domed head bolts and M10 washer.
7. Attach the barrier bracket to the handle bracket nutsert using the M10 knob. You can adjust the position of the barrier by selecting the most suitable hole in the barrier bracket.
8. Once the barrier is in the desired position, tighten all bolts and knobs securely. That's it, you're done! The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.



## Bolt Torque

|                    |      |      |       |       |       |
|--------------------|------|------|-------|-------|-------|
| DIAMETER (mm)      | 5mm  | 6mm  | 8mm   | 10mm  | 12mm  |
| NEWTON-METRES (Nm) | 5 Nm | 9 Nm | 22 Nm | 44 Nm | 77 Nm |

## NOTICE

This barrier has not been tested to Australian Standards, and is intended as a pet barrier or for use when off-road. We cannot confirm compatible fitment of the this barrier with child restraints, due to the number of possible variations. Whilst it may work with your configuration, we recommend the use of a seat belt protector where any contact occurs between any seat belt or restraint and the barrier.



### Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email [info@kaon.com.au](mailto:info@kaon.com.au)

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.