





FITTING INSTRUCTIONS FOR

Insulated Door Cover

SKU	COMPATIBILITY
KS0193	<i>Travel Buddy 12V Marine</i>

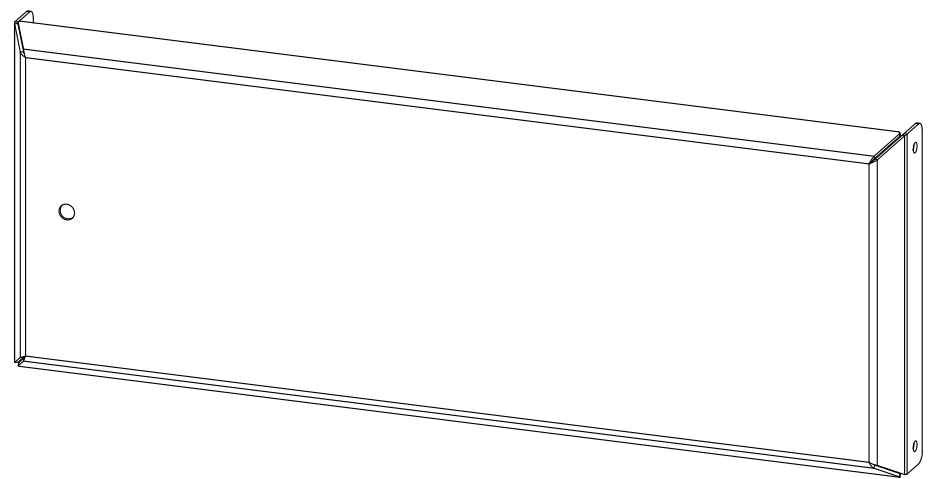

Included contents			
QTY	COMPONENT	QTY	COMPONENT
1	Door Cover	4	M3 x 8 Button Head Socket Screw
1	Ceramic Fibre Insulation	4	M3 Hex Nut
1	1/8" Drill Bit		

 Time	30 minutes / Half a beer
---	--------------------------

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

NOTICE

Ceramic insulation can irritate skin and airways.
Please wear gloves and handle gently.

Bolt Torque					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Installation

1. Remove handle from oven door.
2. Unpack door cover and set aside insulation.
3. Position door cover over the original door. Centre the cover over the door and mark out hole positions with a marker.
4. Use the supplied drill bit to drill 4 holes into the door at the positions marked.
5. Peel back plastic film and attach handle to the door cover.
6. Place the insulation inside the door cover and position over the door.
7. Attach the cover with the M3 bolts and nuts.





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.