



FITTING INSTRUCTIONS FOR


# Flush Flat Maxtrax Mounts

SKU

**KS0035/199**

COMPATIBILITY

**Rhino-Rack Pioneer Platform, Rola Titan Tray,  
Yakima LockNLoad™ Platform**

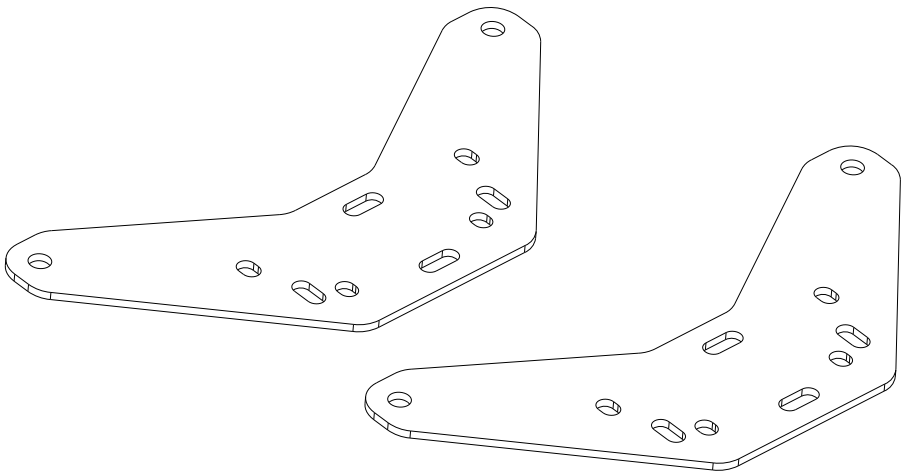

## Included contents

QTY	COMPONENT
2	Flush Flat Brackets
4	M8 Slot nuts
4	M8 x 16 SS Button Head Cap Screw
4	M8 DIN Washer

## Also required

QTY	COMPONENT
4	MAXTRAX Mounting Pins



**Time**

15 minutes / Third of a beer

For further information contact KAON on **07 3180 1470** or [info@kaon.com.au](mailto:info@kaon.com.au)

## Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

# Let's get to work.

---

## Preparation

1. It's best if we get the mounting pins attached to the Flush Flat Mounts first. If you ordered a set of pins, these will have been included. If you already had some, that's great! If you've lost them, we know a place you can buy some...
2. The genuine MAXTRAX Mounting Pin Set contains 4 x pins, 4 x nyloc nuts and 4 x washers. We find it easiest to attach the pins to the Stealth Mounts by holding the pin in place with a spanner, while using a socket to tighten the nut.
3. Ensure the final position of the pin matches the same orientation as the keyholes of your MAXTRAX. This can vary, depending on your desired bracket placement.



## Installation – East-West Orientation

1. Now that we've got the pins sorted, let's get these brackets mounted! First up, you'll need to determine if you want to run your MAXTRAX East-West (*across* the vehicle) or North-South (*down* the vehicle). If you want to run them N-S, turn over to the back page.
2. For East-West, start by placing two slot nuts in two different channels, each 2 slats apart.
3. Next, place your Flush Flat Mounts in the desired mounting locations on each slat. Slide the slot nuts underneath so they line up with the designated holes on the bracket, and loosely finger-tighten a bolt and washer into the slot nuts below.
4. Repeat the process for the other bracket. Once both are secure, test the alignment of your brackets by lining up a single MAXTRAX track with the pins.
5. With correct alignment confirmed, use a Hex key bit to tighten.
6. Now you're ready to start rocking your MAXTRAX! Use the pin locking mechanism to secure either 2 or 4 tracks. You can even use a small padlock if you want to keep them extra secure while you're out and about.



## Installation – North-South Orientation

1. If you're wanting to run your MAXTRAX in a North-South Orientation (running *down* the vehicle), you're in the right place. Select the slat you wish to mount your MAXTRAX on, and place all 4 slot nuts into it's channel.
2. Next, place your brackets in the desired mounting location, making sure the distance between the pin sets of each bracket is 890mm. Slide the slot nuts underneath so they line up with the designated holes on the bracket.
3. Loosely finger tighten a bolt and washer through the designated bracket holes and into the slot nuts below.
4. Once both bolts are secure, test the spacing of your brackets by lining up a single MAXTRAX track with the pins.
5. Follow steps 5 & 6 from the East-West instructions to complete the installation.



### Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email [info@kaon.com.au](mailto:info@kaon.com.au)

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.