

Part Number:	KN200-0113
Product Description:	CARGO/PET BARRIER
Suited to Vehicle/s:	TOYOTA LANDCRUISER 200 SERIES

NOTICE	PLEASE NOTE THIS BARRIER IS DESIGNED AS A PET BARRIER OR AS A LIGHT CARGO BARRIER FOR USE DURING OFF ROAD ACTIVITIES
---------------	---


Contents

- | | |
|-----------------------------|--------------------------------|
| 1 x Barrier | 2 x M6 Flanged Bolts |
| 2 x Head Rest Brackets | 2 x M6 Washers |
| 2 x Handle Brackets | 2 x Wave Washers |
| 2 x Barrier Brackets | 2 x M10 Button Head Cap Screws |
| 2 x Black Plastic M10 Knobs | 2 x M10 Washers |

Preparation

Remove headrests.

Slide the head rest brackets onto the head rests. Position the bracket so that the M10 tab points up and towards the back of the head rest.

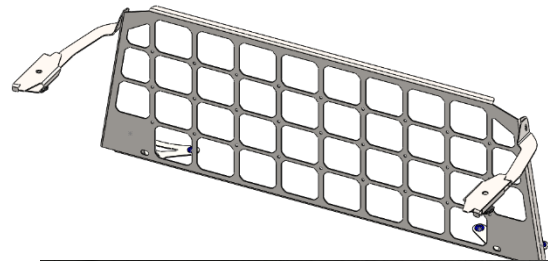

Installation

Position the main barrier (ensure the warning label faces out to the rear) and loosely secure it to the head rest brackets using the M10 domed head bolts and M10 washer

Secure the barrier bracket to the barrier with M6 bolts and M6 washers.

The barrier bracket is then secured to the rear handle using the handle bracket, M10 plastic knobs and anti-vibration wave washer.

Once the barrier is in the desired position, tighten all bolt and knobs securely.

The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.



BOLT TORQUE	Dia. (mm)	5mm dia	6mm dia.	8mm dia.	10mm dia.	12mm dia.
	(Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm