



FITTING INSTRUCTIONS FOR


Light Cargo Barrier

SKU

KS0015

COMPATIBILITY

Nissan Patrol Y61 GU

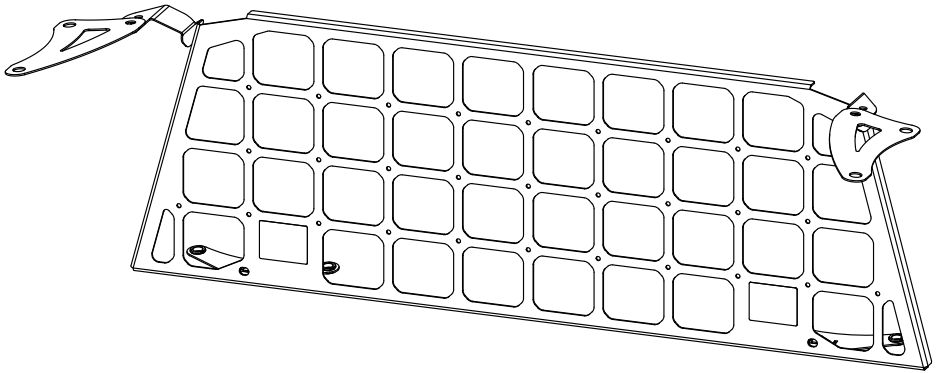

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Light Cargo Barrier	2	M6 DIN Washers
2	Head Rest Brackets (LHS and RHS)	2	M10 Wave Washers
2	Barrier Brackets (LHS and RHS)	2	M10 x 20 Button Head Cap Screws
2	M10 x 20 Black Plastic Knob	2	M10 DIN Washers
2	M6 x 16 Flanged Bolts		



Time

30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Preparation

1. Pry open the plastic covers on the rear grab handles with a small flatblade screwdriver or trim tool, and remove the rear handles.
2. Position the flat brackets under the handle and re-attach using the original bolts. Ensure the bracket is in the correct orientation, as pictured.



Installation

3. Remove the head rests and slide on the head rest brackets. Re-install the head rests with brackets in place.
4. Position the main barrier and loosely secure it to the head rest brackets using the M10 domed head bolts and M10 washer.
5. Attach the upper brackets to the barrier using the supplied M6 bolts and washer. Attach the bracket to the flat handle bracket using the M10 knob and anti-rattle wave washer.
6. Adjust the position of the barrier by selecting the most suitable hole in the barrier bracket.
7. Once the barrier is in the desired position, tighten all bolts and knobs securely.
8. The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.



NOTICE

This barrier has not been tested to Australian Standards, and is intended as a pet barrier or for use when off-road.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.



FITTING INSTRUCTIONS FOR


Barrier Shelf

SKU

KS0184

COMPATIBILITY

KAON Light Cargo Barrier to suit Nissan Patrol Y61 GU

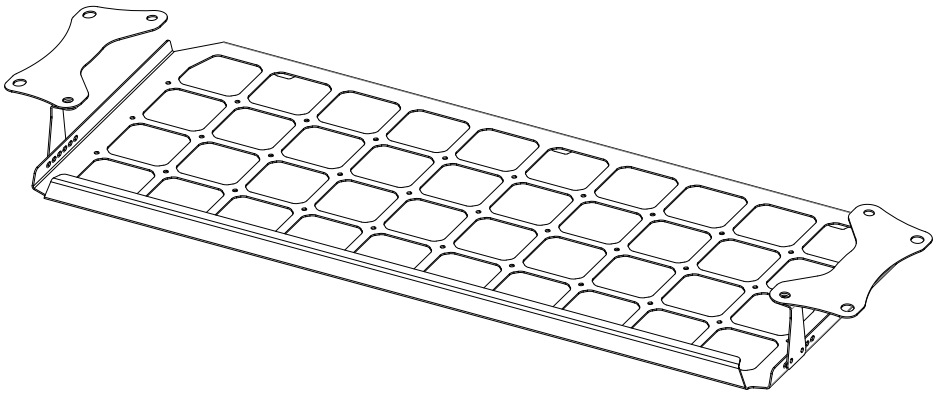

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Barrier Shelf	7	M6 x 16 Flanged Bolt
2	Handle Bracket	7	M6 Flanged Nut
2	Shelf Bracket	2	M10 Dome Head Bolt



Time

30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Preparation

1. **If you've already installed the Cargo Barrier:** uninstall the Cargo Barrier handle brackets from the rear grab handles, and replace with the new Barrier Shelf handle brackets, as pictured.

If you haven't installed the Cargo Barrier yet: install the Barrier Shelf handle brackets as pictured. The handle brackets included with the Cargo Barrier are not required, so set these aside.

Then follow steps 3-5 in the Cargo Barrier instructions before completing the remaining steps here.



Installation

2. Attach the Cargo Barrier to the Handle Bracket, using the knob included with the Cargo Barrier.
3. Loosely attach the Shelf to the Cargo Barrier using three of the supplied M6 bolts and nuts.
4. Attach the Shelf Brackets to the Handle Bracket using M10 dome head bolts.
5. Attach the Shelf to the Shelf Bracket using the remaining supplied M6 bolts and nuts.
6. Once the shelf is in the desired position, tighten all bolts securely.



NOTICE

We cannot confirm compatible fitment of this shelf with child restraints, due to the number of possible variations. Whilst it may work with your configuration, we recommend the use of a seat belt protector where any contact occurs between any seat belt or restraint and the shelf.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.