



FITTING INSTRUCTIONS FOR


Stealth Folding Maxtrax Mount

SKU

KS0338

COMPATIBILITY

Rhino-Rack, ROLA, Yakima, Front Runner, Thule

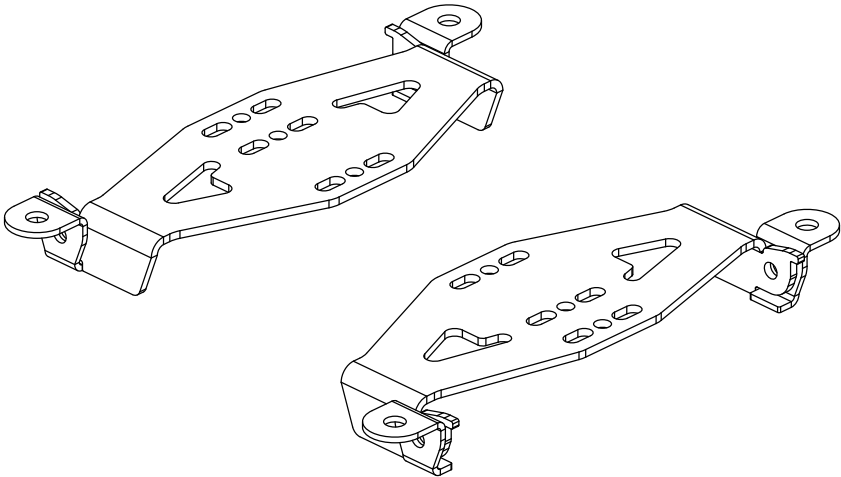

Included contents

QTY	COMPONENT	QTY	COMPONENT
2	Stealth Folding Bracket	4	M8 x 20 x 20 T Bolt
4	SwitchBolt Tee Bolt	4	M8 Nyloc Nut
4	SwitchBolt Retainer	4	M8 X 20 Hex Head Bolt
4	M8 24 x 2.0 DIN Washer		



Time

15 minutes / Third of a beer

Also required


QTY	COMPONENT
4	Maxtrax or TRED Mounting Pins


For further information contact KAON on **07 3180 1470** or info@kaon.com.au


Which hardware you'll need.

We've made sure to source all the hardware you'll need for your specific type of roof rack, so you can get your recovery boards up as hassle-free as possible.

The following fastening hardware will vary, based on which roof rack you are mounting to.

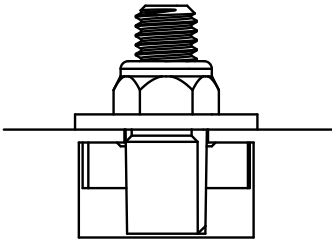Rhino-Rack / Yakima		
QTY	COMPONENT	
4	SwitchBolt Tee Bolt	
4	SwitchBolt Retainer	
4	M8 Nyloc Nut	
4	M8 x 24 x 2.0 DIN Washer	

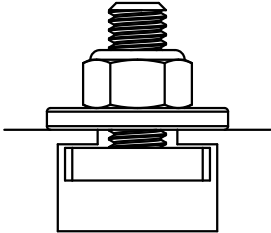ROLA / Thule		
QTY	COMPONENT	
4	M8 Nyloc Nut	
4	M8 x 24 x 2.0 DIN Washer	
4	M8 x 20 x 20 T Bolt	

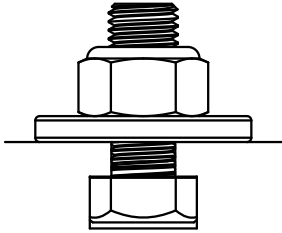Front Runner		
QTY	COMPONENT	
4	M8 Nyloc Nut	
4	M8 x 24 x 2.0 DIN Washer	
4	M8 X 20 Hex Head Bolt	


Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Preparation

1. It's best if we get the mounting pins attached to the Stealth Folding Mounts first. If you ordered a set of pins, these will have been included. If you already had some, that's great! If you've lost them, we know a place you can buy some...
2. The genuine Maxtrax Mounting Pin Set contains 4 x pins, 4 x nyloc nuts and 4 x washers. We find it easiest to attach the pins to the mounts by holding the pin in place, while using a socket to tighten the nut.

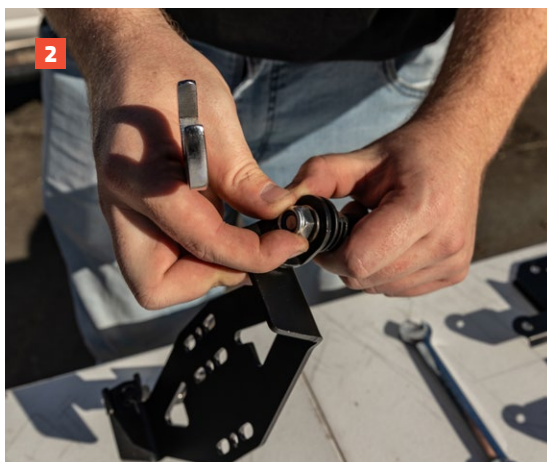

Installation


3. Determine where you would like to run your recovery boards, by loosely lining up the brackets in-line with your chosen slat.

Depending on which Maxtrax you are using, the length will determine how far you will need to space your pins. Use the following distance for spacing your pins:

Standard Maxtrax/TRED: 890mm

Maxtrax Lite: 634mm

Maxtrax Mini: 379mm

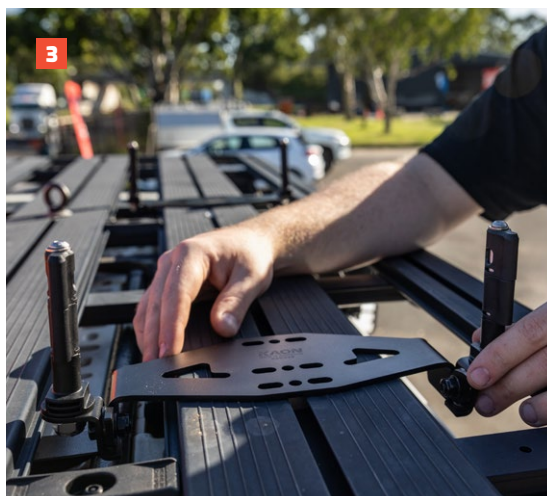


Installation cont.

- Slide all 4 of the specific captive fasteners for your roof rack (see hardware breakdown on page 3), in to the channel.

If you are installing on a Rhino-Rack or Yakima: place the SwitchBolt in the desired position, and twist the bolt 90 degrees in the channel as pictured. Secure the SwitchBolt's position with a Retainer over the top.

- Next, place your Stealth Folding Mounts in the desired mounting locations on the slat.
- Slide the captive fasteners underneath so they line up with the designated holes on the bracket, and loosely finger-tighten a Nyloc nut and washer into the captive fastener below.
- Once both bolts are secure, test the spacing of your brackets by lining up a single recovery board with the pins.
- With correct alignment confirmed, tighten the bolts completely.
- Now you're ready to start rocking your recovery boards! Use the pin locking mechanism to secure either 2 or 4 boards.

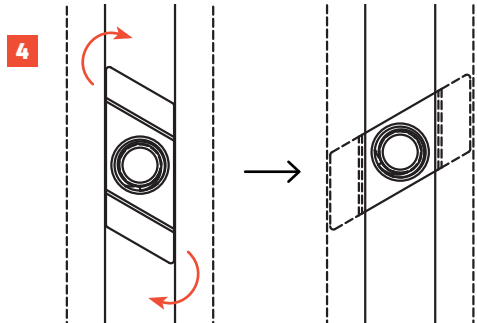

Local Knowledge & Assistance

We know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.