

FITTING INSTRUCTIONS FOR


Standalone Rear Roof Shelf

SKU

COMPATIBILITY

KS0367


Toyota LandCruiser LC76 & Prado KZJ78

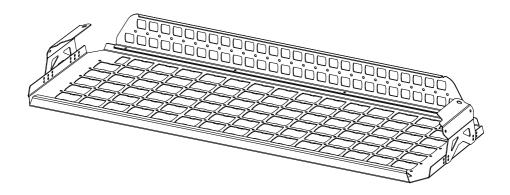

Included contents						
QTY	COMPONENT	QTY	COMPONENT			
1	Rear Roof Shelf	4	M5 x 12 Flanged Hex Bolt			
1	Rear Fence	4	M5 Flanged Nut			
2	Mounting Bracket (LHS & RHS)	8	M6 x 16 Flanged Bolt			
		4	M6 Flanged Nut			



30 minutes / Half a beer

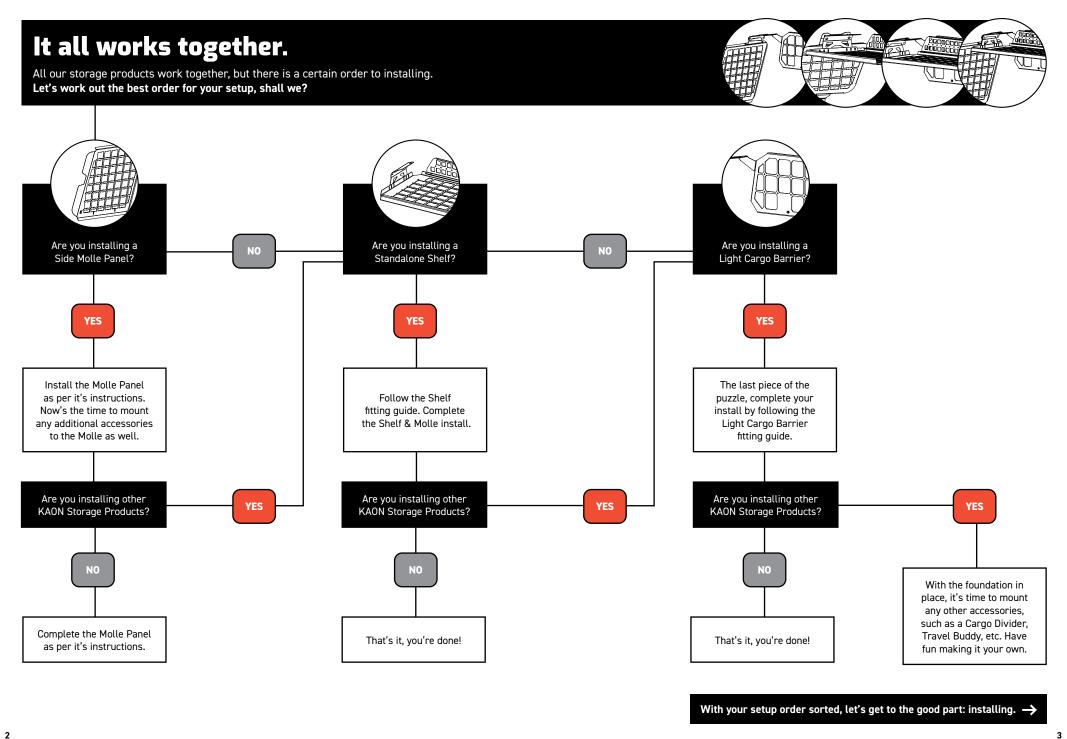

Bolt Torque								
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm			
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm			

Let's get to work.

Preparing the Vehicle

For the LandCruiser 76:

- Our shelf bracket mounts to two points, the first of which is under the plastic cap, above the third window, just behind the C pillar. Pry this cap off using a knife or screwdriver.
- Our second mounting point is a captive nut hidden under the roof lining, and so it isn't visible. To locate it, take your mounting bracket, and secure it using an M6 bolt in the hole under the cap you just removed.
- 3. Running your hand along the lining towards the front of the car, you should be able to feel the second hole as a small depression under the lining. Move the bracket into position, and ensuring it's straight, use a screwdriver to poke a hole through the lining into the depression.

For the Prado KZJ78:

4. Simply remove the grab handles by lifting the covers and unscrewing them to reveal the captive mounts. This shelf's mounting brackets aren't designed to be reinstalled with them, so store the handles for safe keeping.







Bracket Installation

5. If you're choosing to install with the Side Molle Panels: following the installation order on page 2, the Molle Panels need to be installed first. Follow the instructions there before proceeding with this step.

Use a flat screwdriver to push the lining away and create some space around the opening to the captive mount. Place the mounting brackets over the captive mounts and secure using the M6 bolts.

This handle bracket also has the nutserts for mounting the Light Cargo Barrier, as pictured, should you choose to install it too.






4

Shelf Preparation

6. Attach the rear fence to the shelf using the M5 nuts and bolts.

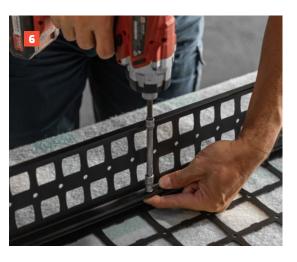

Shelf Installation

- Lift the shelf into the desired position. There are two vertical and three horizontal adjustment settings.
- 8. Attach to the mounting brackets using M6 flanged bolts and nuts.
- Once the shelf is in the desired position, tighten all bolts securely.
- 10. That's it, you're done! Your new shelf is able to hold a recommended maximum load of 10kg. It also has handy twin bottle openers on each side.

Please note: If you are installing the Cargo Barrier in conjuction with the Standalone Shelf, you may now refer to their instructions to continue fitting your storage setup.





6

NOTICE

We cannot confirm compatible fitment of this shelf with child restraints, due to the number of possible variations. Whilst it may work with your configuration, we recommend the use of a seat belt protector where any contact occurs between any seat belt or restraint and the shelf.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.