



FITTING INSTRUCTIONS FOR


Rear Shock Guards

SKU

KS0386/402

COMPATIBILITY

Toyota LandCruiser LC200 with JMACX GVM Upgrade

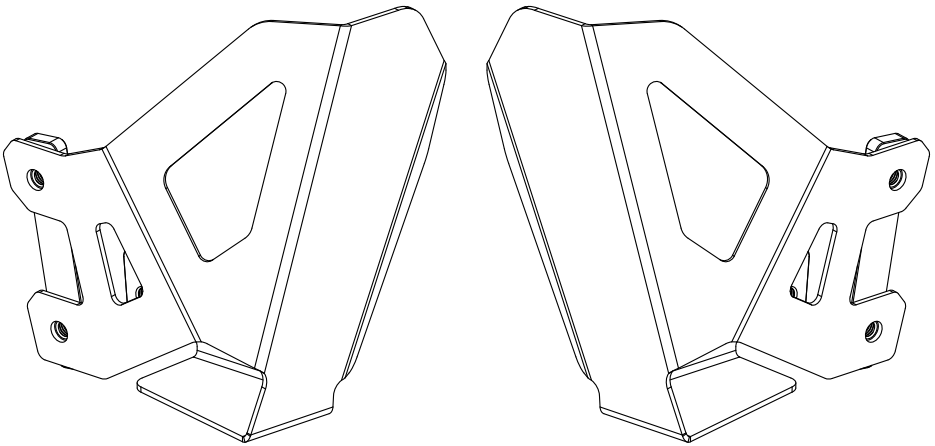

Included contents

QTY	COMPONENT	QTY	COMPONENT
2	Rear Shock Guards (LHS and RHS)	6	M10x25 Flanged Bolts
2	Double Mount Nut Blocks	6	M10 Washers
2	Single Mount Nut Blocks		



Time

30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Preparation

1. We want a nice clean starting surface, so remove any dirt and debris from the mounting surfaces on the shock absorber mount.
-

Installation

1. Position the guard over the shock absorber and check clearances around the guard.
2. Using the M10 bolts, washers and nut blocks, loosely install the bottom inwards mounts on each side.



Installation cont.

3. Line the Double Mount Nut Block up with the holes, ensuring the raised sections seat within the recesses.
4. Loosely install with the M10 bolt and washers as shown.
5. Position the guard and torque all bolts to required torque as per table.





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.