


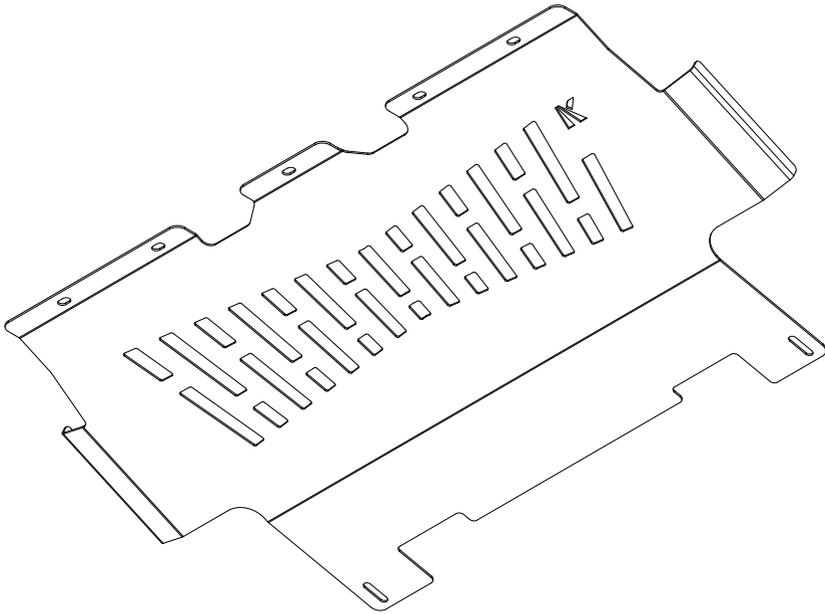

FITTING INSTRUCTIONS FOR

Vented Splash Guard

SKU KS0460	COMPATIBILITY Toyota Prado 150 with ARB Bullbar	VARIANT 115mm Tab
-----------------------------	--	------------------------------------



Included contents

QTY	COMPONENT
1	Vented Splash Guard

Time	30 minutes / Half a beer
-------------	--------------------------

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

G8.8 Bolt Torque (Non-Lubricated)

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

Let's get to work.

Installation

1. Remove the existing ARB splash guard.
2. Position the KAON splash guard, and install to the vehicle using the factory bolts and washers.
3. Tighten all bolts to required torque, and you're done!





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.