





FITTING INSTRUCTIONS FOR

Radiator Guard

SKU	COMPATIBILITY
KS0487	<i>Toyota LandCruiser LC70 (76, 78 & 79 Dual Cab)</i>

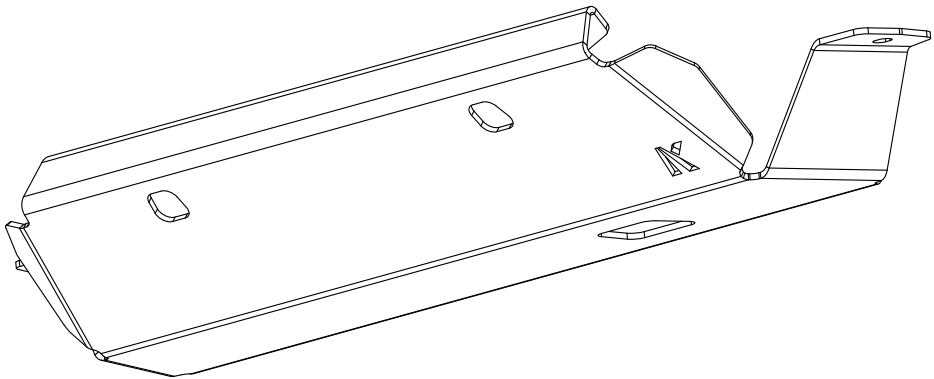

Included contents			
QTY	COMPONENT	QTY	COMPONENT
1	Radiator Guard	4	M8 x 25 Flanged Hex Bolt G8.8

 **Time**

15 mins / Few swigs of beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

G8.8 Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm	14mm
LUBRICATED (Nm)	5 Nm	8 Nm	16 Nm	33 Nm	56 Nm	84 Nm
NON-LUBRICATED (Nm)	6 Nm	10 Nm	22 Nm	44 Nm	77 Nm	112 Nm

Let's get to work.

Preparation

1. Ensure all mounting surfaces are clean, free of dirt and grime, and put some grease or anti-seize compound in the mounting holes.



Installation

1. Lift the Radiator Guard into position and locate the captive nuts on the chassis rails. Loosely thread two M8 bolts in the side mounting holes.
2. With the guard held in place, thread the remaining two bolts through the front mounting access holes and into the captive nut tabs located behind.
3. Check fitment and alignment of the plates, and adjust as needed. Then tighten all the bolts as per the recommended torque settings.
4. Finally, remove the protective plastic from the guard and you're all good to go!





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.