



FITTING INSTRUCTIONS FOR


# Side Molle Panel

SKU


**KS0548**

COMPATIBILITY

**Toyota Prado 150, Lexus GX 460**

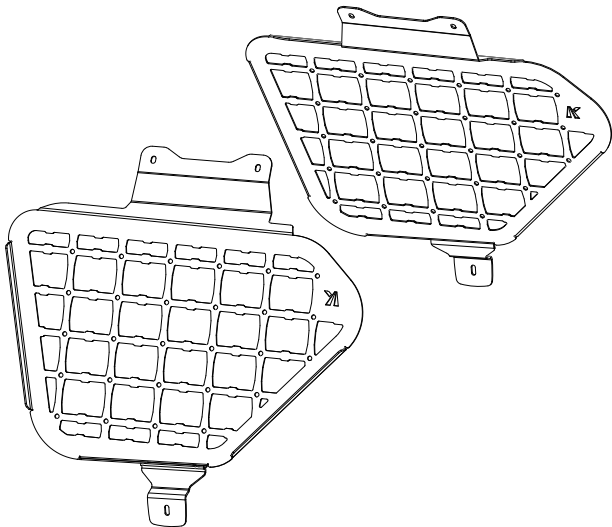

Included contents



QTY	COMPONENT	QTY	COMPONENT
2	Side Molle Panels (LHS & RHS)	4	M6 x 12 Socket Head Cap Screw
2	Lower Mount Bracket	4	M6 Flanged Hex Nut
4	M6 x 20 Flanged Hex Bolt	2	M6 x 50 Hex Bolt
6	M6 DIN Washer	<div> <b>Time</b></div> <div>30 minutes / Half a beer</div>	

Scan the **QR code** to watch the video installation guide,  
or for further information contact KAON on **07 3180 1470** or **info@kaon.com.au**



# It all works together.

All our storage products work together, but there is a certain order to installing.  
Let's work out the best order for your setup, shall we?

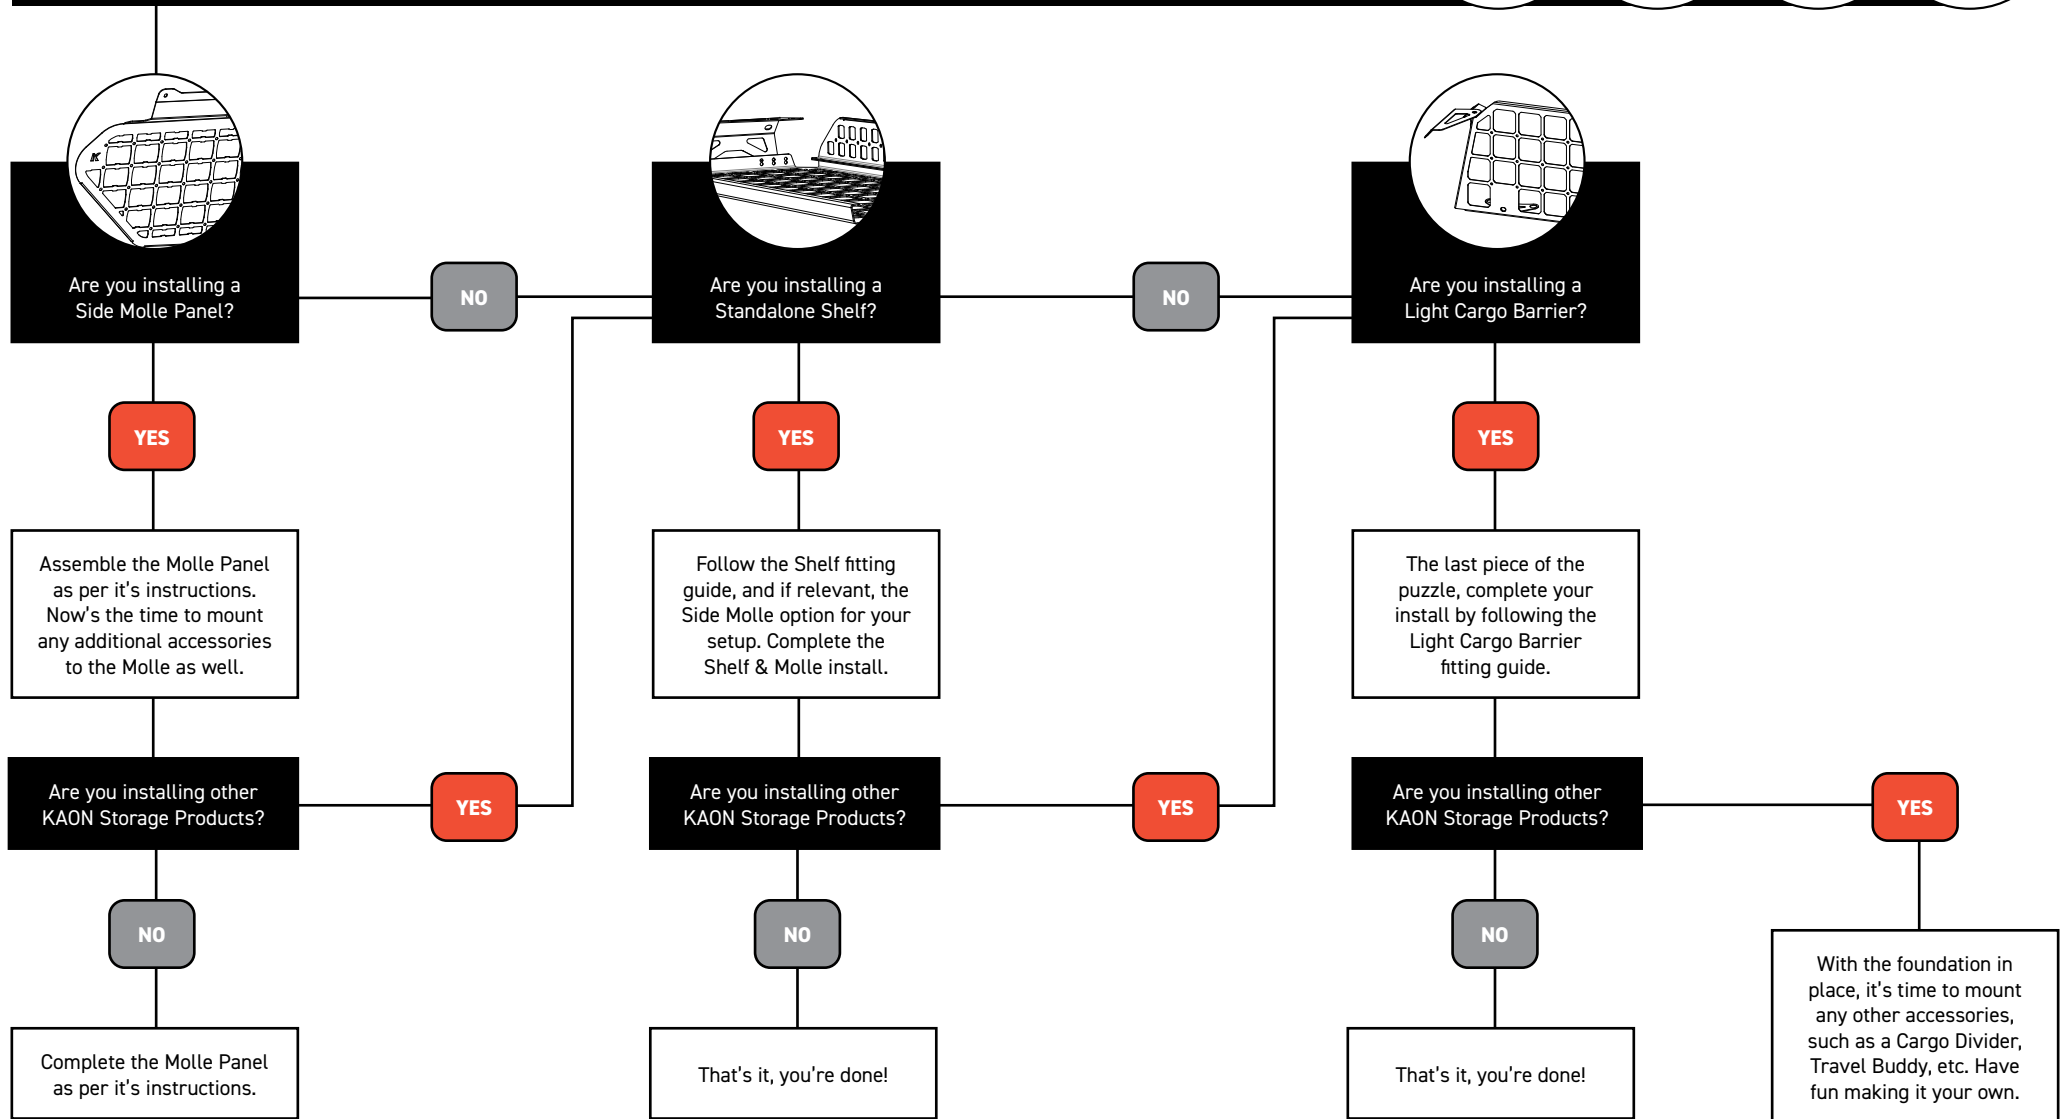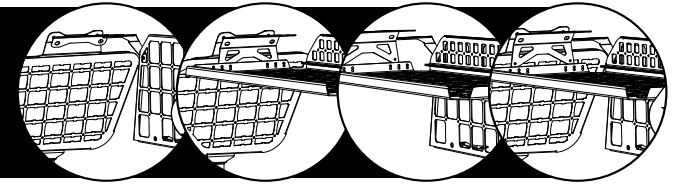

With your setup order sorted, let's get to the good part: installing. →

# Let's get to work.

## Preparing the Vehicle

1. Pry open the plastic covers on the rear grab handles with a small flatblade screwdriver or trim tool.
2. Use a 10mm socket to remove the rear handles. Set aside.
3. Locate the lower mounting position under the window and pry open the plastic trim with a small flat screwdriver.
4. Remove the M10 bolt.



## Assembling the Panels

5. Use the M6 x 12 Socket Head Cap screws and nuts to install one of the Lower Mount Brackets to the underside of the Side Molle Panel, with the folds both facing the same way, as shown.
6. Tighten until secure.



## Installing the Panel

7. Ensure you have the correct panel for each side, with the 'K' positioned at the back of the vehicle.
8. Install the Lower Mount Bracket using the M6x50 bolt.
9. Check the spacing and position of the Side Molle Panel, and tighten all bolts to secure.
10. Repeat on the other side.
11. That's it, you're done! Your new Side Molle Panels are perfect for holding any MOLLE compatible pouches, and also has holes suitable for QuickFists or other accessories.



Page intentionally left blank.

Bolt Torque					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm



### Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email [info@kaon.com.au](mailto:info@kaon.com.au)

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.