



FITTING INSTRUCTIONS FOR



Standalone Rear Roof Shelf

SKU

KS0657/658

COMPATIBILITY

Nissan Patrol Y62

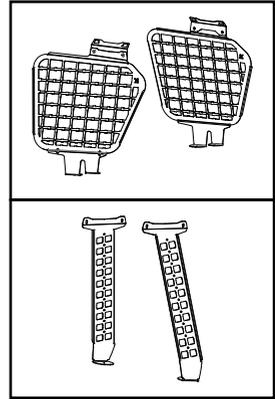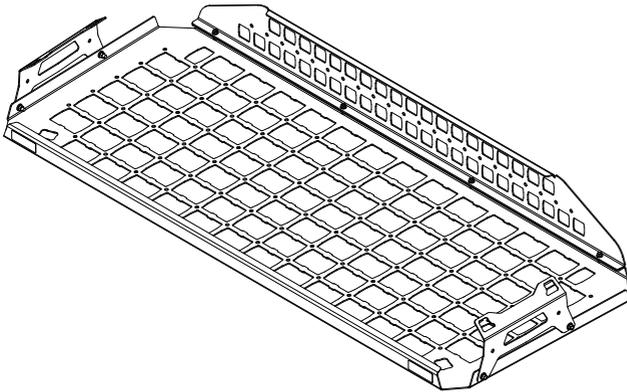

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Rear Roof Shelf	4	M5 x 12 Flanged Hex Bolt G8.8
1	Rear Fence	4	M5 Flanged Nut
2	Handle brackets	4	M6 x 16 Flanged Hex Bolt G8.8
		4	M6 Flanged Nut



Time

30 minutes / Half a beer


You also need **KS0646 Small Side Molle Panels** OR **KS0647 Large Side Molle Panels** (packaged separately).



Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or info@kaon.com.au



It all works together.

All our storage products work together, but there is a certain order to installing. Let's work out the best order for your setup, shall we?

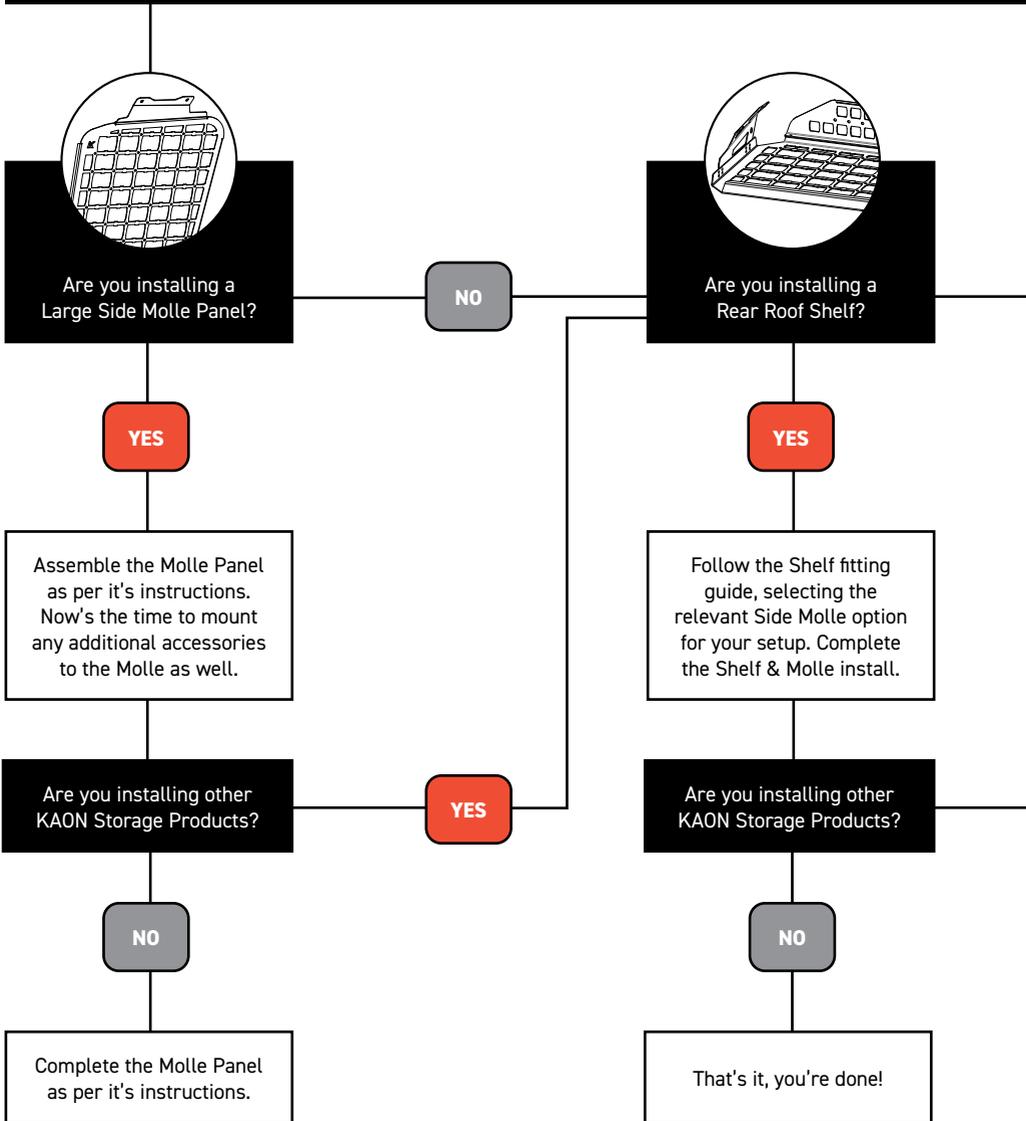

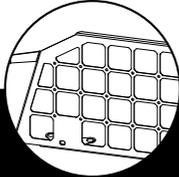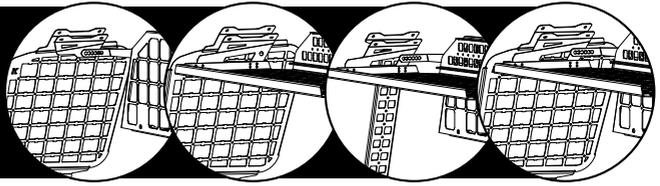

Are you installing a Light Cargo Barrier?

NO

YES

The last piece of the puzzle, complete your install by following the Light Cargo Barrier fitting guide.

Are you installing other KAON Storage Products?

YES

YES

NO

That's it, you're done!

With the foundation in place, it's time to mount any other accessories, such as a Cargo Divider, Travel Buddy, etc. Have fun making it your own.

With your setup order sorted, let's get to the good part: installing. →

Let's get to work.

Preparing the Vehicle

1. Pry open the plastic covers on the rear grab handles with a small flat-blade screwdriver or trim tool.
2. Use a 10mm socket to remove the rear handles. Set aside.



Assembling the Shelf

3. Attach the rear fence to the shelf using M5 nuts and bolts.
4. Tighten to secure.



Molle Panel Assembly

Follow the instructions to suit your configuration below.

To install the Small Side Molle Panel:

5. Ensure you have the correct panel and handle bracket for each side. The easiest way to tell is to test fit the Small Molle Panel in the cupholder. When seated in the correct cupholder, the top should align with the grab handle mounts.



To install the Large Side Molle Panel:

6. Prepare the Large Molle Panel as per it's provided instructions.
7. Ensure you have the correct panel for each side. The 'K' should be positioned at the back of the vehicle.



For either panel, continue:

8. Loosely attach the Shelf handle bracket to the Molle Panel using the provided M6 bolts. The Molle Panel will attach to the central set of mounting holes, as pictured. The handle bracket should fold forward, in the same direction as the Molle Panel feet.



Installing the Molle Panel

9. Place the feet of the Molle Panel into the rear cupholders. The feet are contoured to fit, and the rubber stoppers will keep it secure.
10. **If adding a Light Cargo Barrier:** Sandwich the Barrier handle bracket over the top of the Shelf handle bracket, as pictured.
11. Align the handles with the cutouts in the brackets. Align the bolts and locating pins with the holes in the roof, and reinstall by tightening to secure.
12. Make any necessary adjustments to the panel. While applying downwards pressure to the panel, tighten all bolts.
13. Repeat on the other side.




Installing the Shelf

14. With the brackets up, it's time to install the shelf itself. Whilst this can be done on your own, you may find it easier to ask a mate for help.
15. Position the shelf and use the M6 bolts and nuts to install the shelf to the bracket. There are a couple of positions for adjustment in your shelf positioning.
16. With the shelf position confirmed, tighten all the bolts.
17. That's it! Your new shelf is able to hold a recommended maximum load of 10kg. It also has some handy hooks to hang bags, and twin bottle openers on each side.

If adding a Light Cargo Barrier:

18. Follow steps 11-156 in the Light Cargo Barrier instructions to assemble and install.

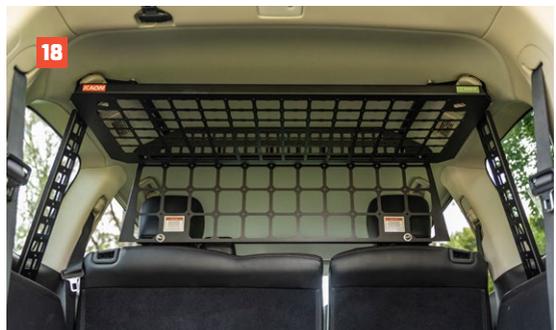

NOTICE

We cannot confirm compatible fitment of this shelf with child restraints, due to the number of possible variations. Whilst it may work with your configuration, we recommend the use of a seat belt protector where any contact occurs between any seat belt or restraint and the shelf.

G8.8 Bolt Torque (Non-Lubricated)

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.