



FITTING INSTRUCTIONS FOR



# Side Molle Panels

SKU

**KS0694**

COMPATIBILITY

**Toyota Prado 120, Lexus GX 470**

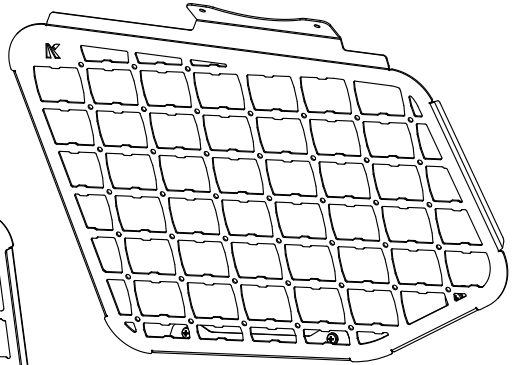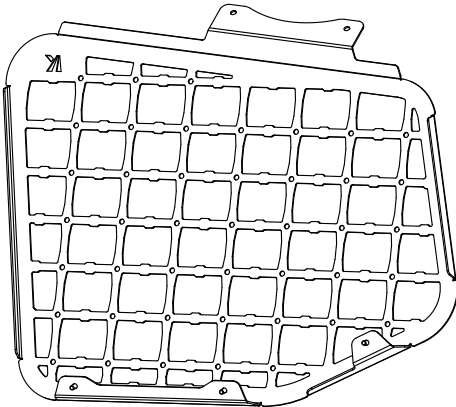

## Included contents

QTY	COMPONENT
2	Side Molle Panel (LHS & RHS)
6	Black Self Tapping Screw
6	Black M5 x 16 x 1.0 DIN Washer





**Time**

30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or [info@kaon.com.au](mailto:info@kaon.com.au)

# It all works together.

All our storage products work together, but there is a certain order to installing.  
Let's work out the best order for your setup, shall we?

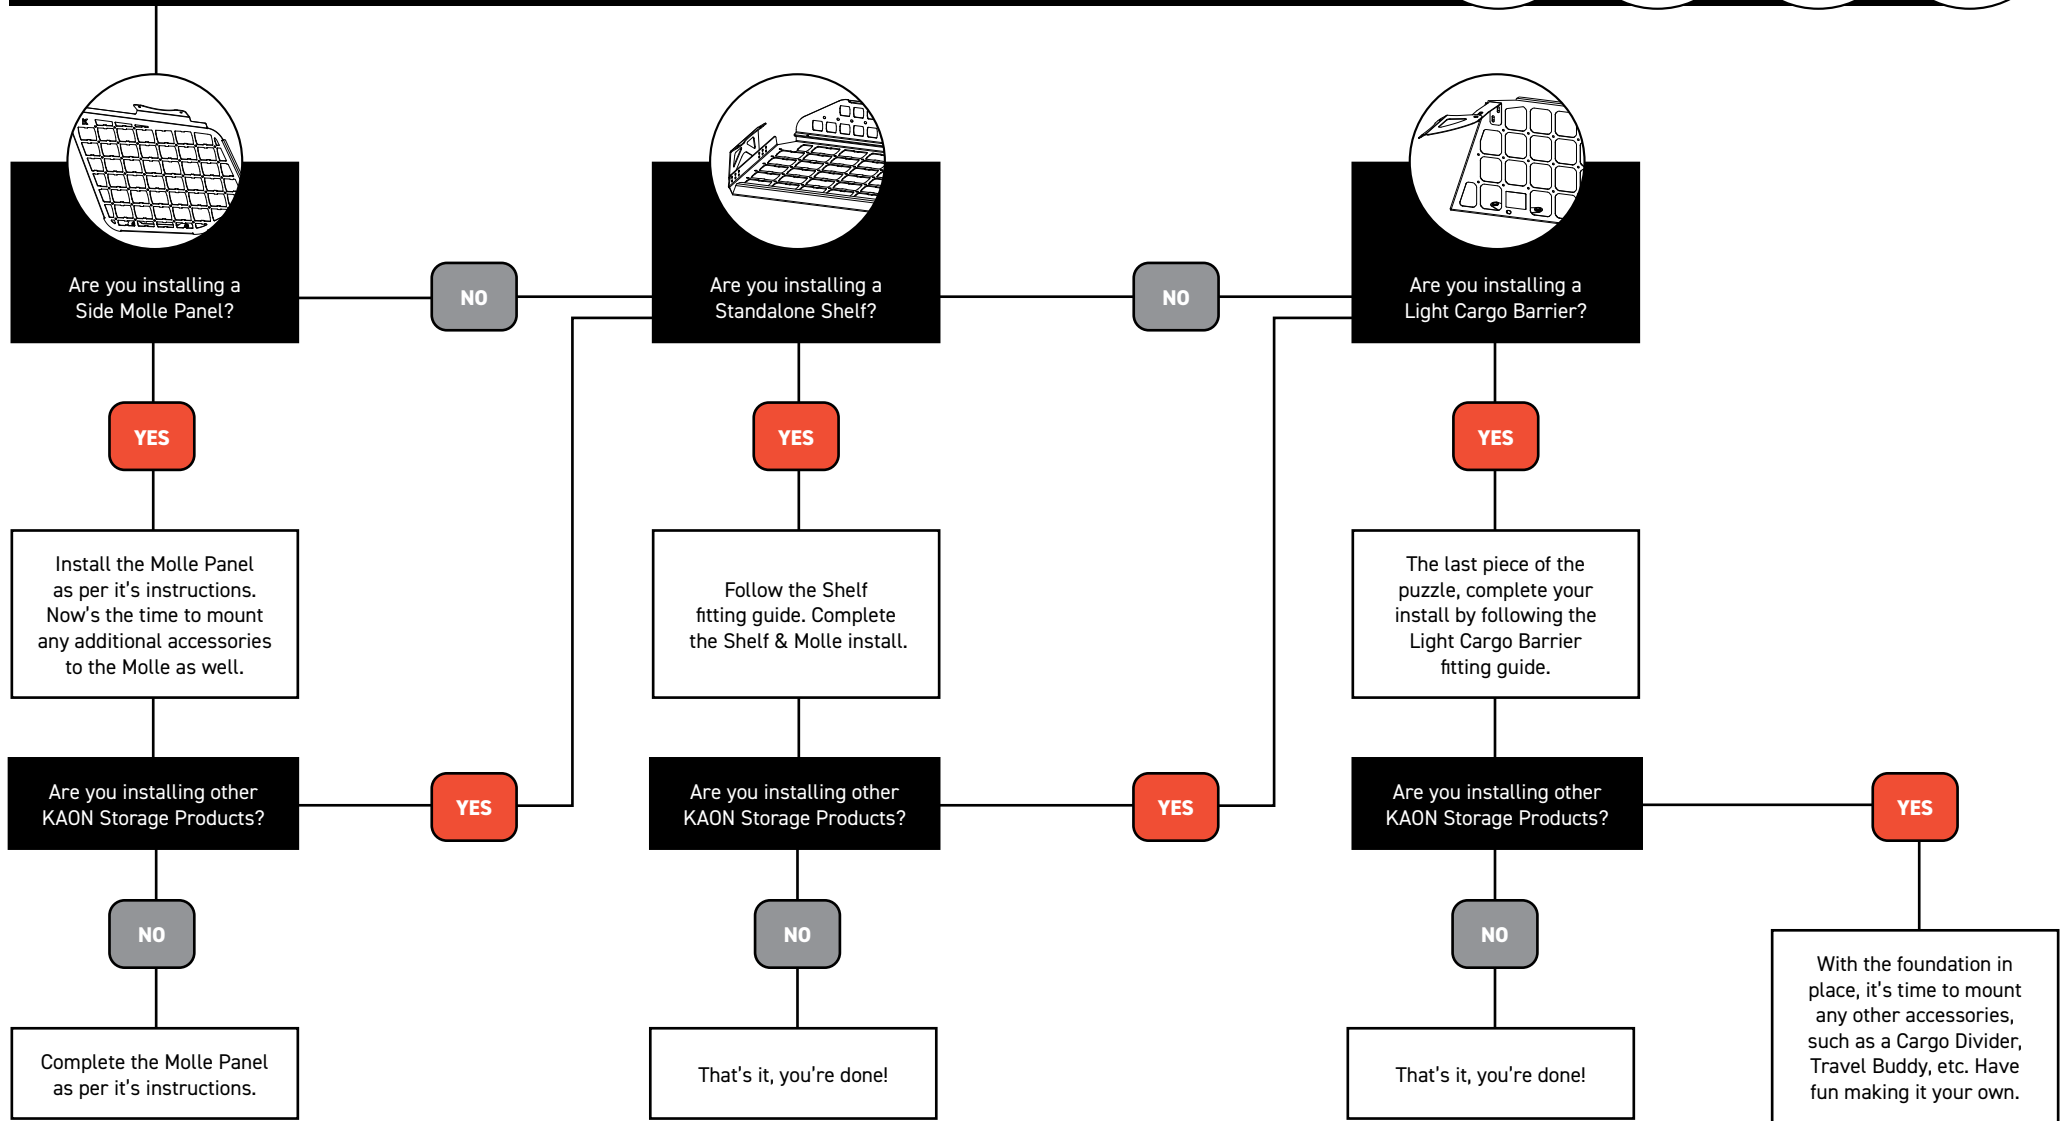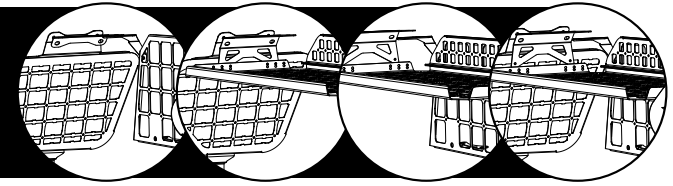

With your setup order sorted, let's get to the good part: installing. →

# Let's get to work.

## Preparing the Vehicle

1. Whether you're starting from a factory rear, or with existing KAON accessories, we need to start from a blank slate. Remove the rear grab handles by prying open the plastic cover and removing the bolts with a socket.



## Installing the Molle Panels

2. Ensure you have the correct panel for each side. The 'K' on each panel should be oriented at the front of the vehicle.
3. Now is the easiest time to attach any accessories such as pouches, electrical components, or storage pods to your Molle Panels.

Thread the handle mounts over the rear grab handles, ensuring molles are oriented as pictured.

**If you're installing with a Standalone Shelf:** their handle brackets should be sandwiched between the Molle Panel and factory handles at this stage.

**If you're installing with a Barrier and/or Barrier Shelf:** their handle brackets should be sandwiched between the Molle Panel and factory handles at this stage.

Shelf Brackets should be layered over the Molles, and Barrier Handle Brackets last, paying attention to the correct orientation as per their instructions.

4. Secure using the factory handles and hardware. Tighten the bolts to secure and reclip the plastic cover.




## Finishing the Install

5. Apply gentle pressure to the molle panel so it sits flush against the interior trim.
6. Ensure the spacing around the Molle Panels is even and correct.
7. Use a 3mm bit to carefully drill the three lower mount holes.

Depending on preference, you can drill without removing the panel. Otherwise mark the placement and remove the panel to drill.

8. Secure the molle to these holes using the supplied self tapping screws and washers.
9. Repeat for the other side.
10. That's it, you're done! If you are installing a Shelf or Light Cargo Barrier with your panels, continue with the instructions in their fitting guides.

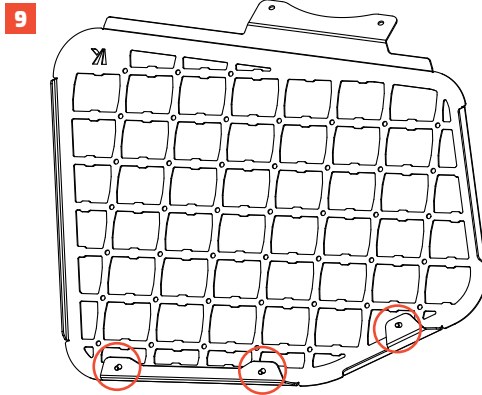

## Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm



### Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email [info@kaon.com.au](mailto:info@kaon.com.au)

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.