


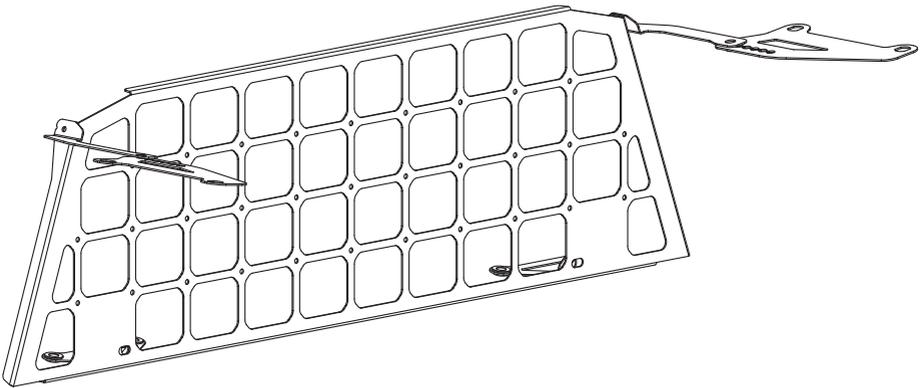

FITTING INSTRUCTIONS FOR

Light Cargo Barrier

SKU KS0771	COMPATIBILITY Toyota LandCruiser 100/105	VARIANT Handles Down
-----------------------------	---	---------------------------------------



Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Cargo Barrier	2	Black Plastic M10 Knobs
2	Head Rest Brackets	2	M6 Washers
2	Handle Brackets	2	M6 Flanged Bolts
2	Barrier Brackets	2	M10 Button Head Cap Screws
		2	M10 Washers



Time

30 minutes / Half a beer


For further information contact KAON on **07 3180 1470** or info@kaon.com.au

Let's get to work.

Before you get started


If installing a Rear Roof Shelf and Light Cargo Barrier at the same time, both handle brackets must be installed layered together.

We recommend locating the handle bracket in your Rear Roof Shelf kit before continuing on with installation for the Light Cargo Barrier.

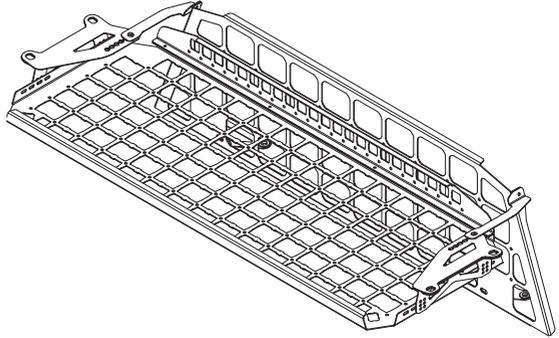


Preparation

1. Remove car headrests.
2. Remove the rear interior roof handles and position the flat bracket under the handles; re-attach using the original bolts. Ensure the bracket is in the correct orientation as pictured.
3. If you are installing a Light Cargo Barrier in conjunction with a Rear Roof Shelf, you will need to layer the handle brackets for both in the correct orientation prior to installing the rest of the Barrier. Layer the Rear Roof Bracket on top, as pictured in the lineart.

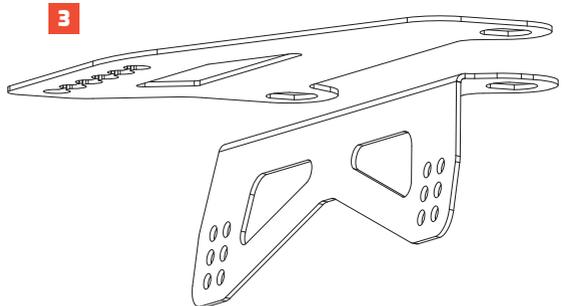

Installation

4. With the head rests removed, slide the head rest brackets over the pins as pictured. Re-install the head rests with the brackets in place
5. Attach the upper brackets to the barrier using the supplied M6 bolts and M6 washer.
6. Position the main barrier and secure loosely to the head rest brackets using the M10 domed head bolts and M10 washer.
7. Attach the side brackets to the handle bracket using the M10 knob. Adjust the position of the barrier by selecting the most suitable hole in the handle bracket.
8. Tighten up all bolts.
9. The barrier is now installed and can be quickly removed by lifting out the head rests and removing the plastic door handles.

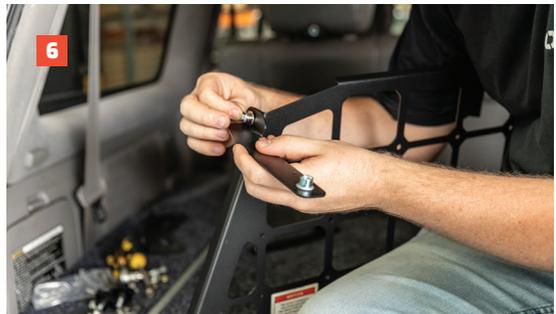

NOTICE

This barrier has not been tested to Australian Standards, and is intended as a pet barrier or for use when off-road.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.