



FITTING INSTRUCTIONS FOR


# Rear Window Basket

SKU

**KS0842**

COMPATIBILITY

**Toyota Prado 150**

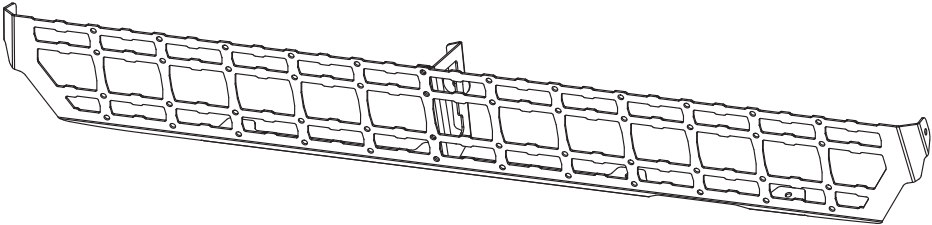

## Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Rear Window Molle Basket	6	M5 x 16 x 1.0 DIN Washer
1	Rear Window Molle Divider	2	M6 x 12 Button Head Cap Screw
1	Suction Cup 85mm	2	M6 Flanged Nut
6	Self Tapping Screw	1	M8 Flanged Nut



**Time**

15 minutes/ Quarter of a beer

For further information contact KAON on **07 3180 1470** or [info@kaon.com.au](mailto:info@kaon.com.au)


## G8.8 Bolt Torque (Non-Lubricated)

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

# Let's get to work.



## Preparation

1. Let's start with assembling the components first. Attach the suction cup to the divider using the M8 Flanged Nut.
2. With the suction cup attached, attach the divider to the Molle basket using the M6 Screws and nuts. The divider must be positioned in one of the four central hole positions pictured below, in order to support the basket correctly.

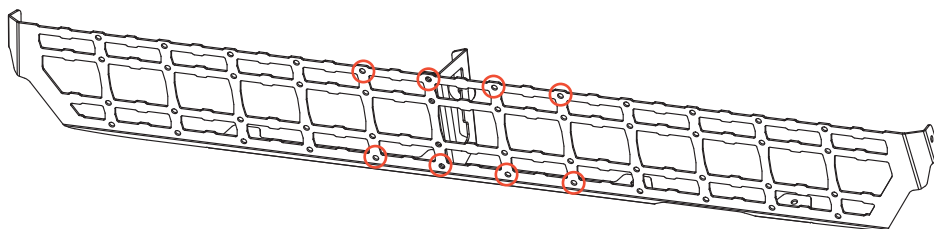

## Installation

3. Mockup the position of the window basket in the window frame, with a piece of paper between the suction cup and the glass so it does not stick. Ensure that the basket sits closely around the edges of the window trim.
4. With the position confirmed, slide the paper out and press the suction cup onto the glass to hold the basket's position. Keep the basket supported by hand so it does not fall.
5. Mark the position of each bolt hole.
6. Remove the basket from the car, and using a 3mm drill bit, drill a hole in each marked point.
7. Replace the basket, once again using a piece of paper to prevent the suction cup from sticking.
8. Use Self Tapping Screws and M5 Washers to loosely secure each mounting point.
9. Push the basket toward the glass and tighten each screw until secure. Ensure that you don't over-tighten and strip the hole.
10. Remove the paper once again, and push the suction cup firmly into the glass.
11. That's it – you're done! Now you've got a handy storage spot in your rear door for soft storage items like loo paper, towels etc. We'll leave the arranging up to you.

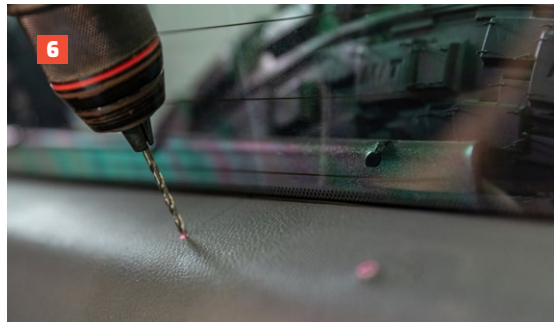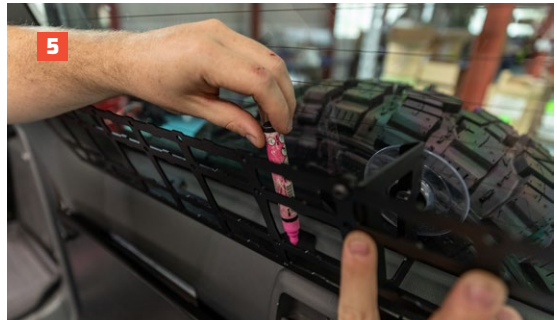



### **Local Knowledge & Assistance**

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

**For further information call 07 3180 1470 or email [info@kaon.com.au](mailto:info@kaon.com.au)**

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.