




FITTING INSTRUCTIONS FOR

Battery Fuse Bracket

SKU	COMPATIBILITY
KS0854	Nissan Patrol GU Y61

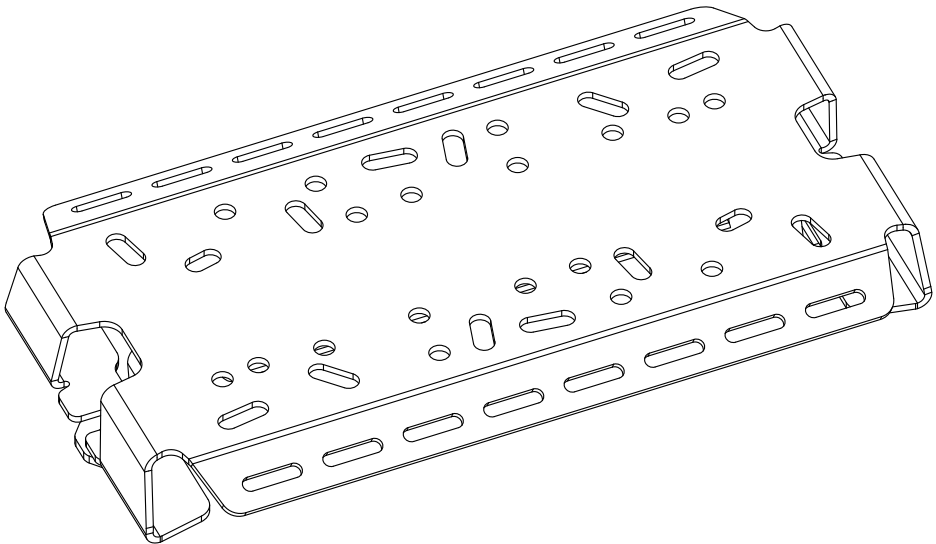

Included contents			
QTY	COMPONENT	QTY	COMPONENT
1	Battery Fuse Bracket	8	M4 x 16 Socket Head Cap Screw
1	Battery Fuse Clamp	8	M4 x 9 x 0.8 DIN Flat Washer
2	M6 Flanged Nut	8	M4 Nyloc Nut

Time 15 minutes / Few sips of beer

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

Bolt Torque					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Preparation

- 1. Before installing, test fit the Battery Fuse Bracket over the factory clamp. You will need to ensure you have sufficient clearance to the terminal cables and any fuse blocks. Depending on your setup, this may require reconfiguring the cables slightly, so they run into the terminals from the sides.
- 2. Ensure that all surfaces are clean, and free of dust and debris.





Installation

3. First things first, you'll want to work out what fuses you're mounting, and in what configuration. Our bracket has holes for most common fuses. But should you find you want to run something else, it's made from aluminium so you can easily drill additional holes.


We've also provided enough stainless steel mounting hardware to suit most applications, with eight M4 bolts, washers and nyloc nuts.

4. Unbolt and remove the factory battery clamp fasteners, and remove the factory battery clamp.
5. Remove the negative battery terminal, then the positive followed by any auxiliary wires attached to the bracket.
6. Lift and remove the battery insulation box. Set aside – we will not be reinstating this.

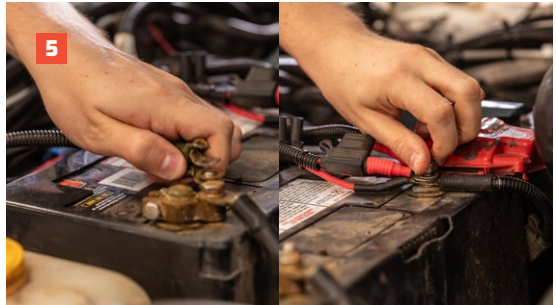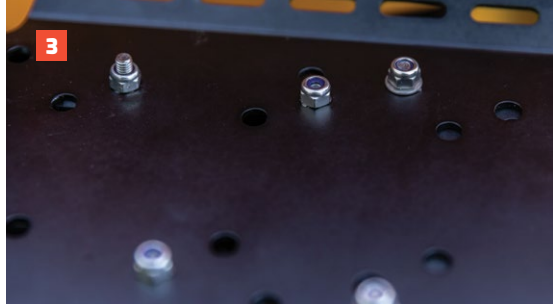

Installation cont.

7. Place the supplied Battery Fuse Clamp in position, and secure to the factory J-hooks with the factory M6 fasteners.
8. Place the Battery Fuse Bracket in position over the clamp and secure using the provided M6 flanged nuts.
9. Re-attach auxiliary wires and re-attach the positive battery terminal, followed by the negative.
10. Tighten all the hardware until secure.
11. That's it, the bracket install is done! But your wiring job has just begun. Our bracket has two ramps on each side with slots for cable management with zip-ties, to help make this job easier.

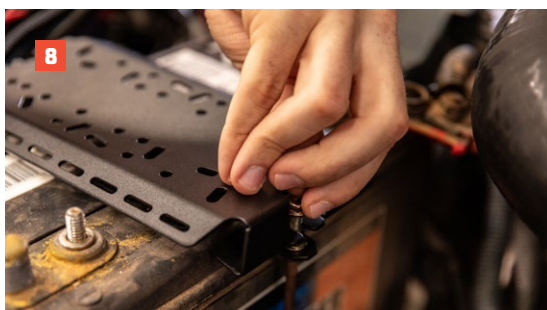

Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.