



FITTING INSTRUCTIONS FOR


Rear Window Basket Set

SKU

KS0874

COMPATIBILITY

Ineos Grenadier Wagon Models

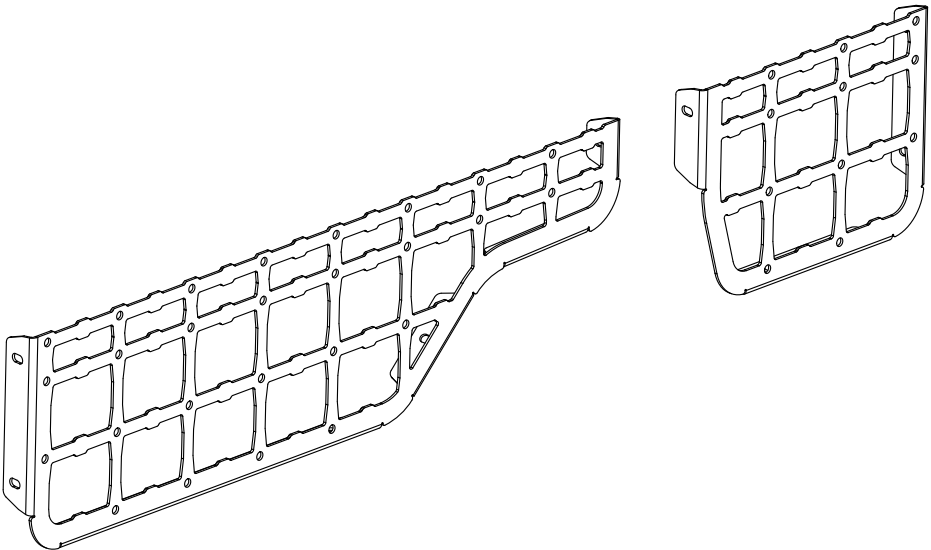

Included contents

QTY	COMPONENT
2	Rear Window Basket (LHS & RHS)
12	Black Self Tapping Screw
12	M5 x 16 x 1.0 DIN Washer



Time


30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

Let's get to work.


Installation

1. Mock-up the position of basket in the window frame. Ensure that the basket sits closely around the edges of the window trim.
2. With the basket's position confirmed, mark the position of each bolt hole.

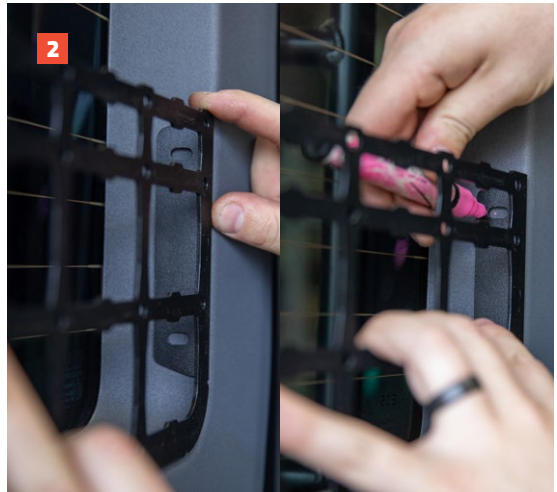

Installation cont.

3. Remove the basket from the car, and using a 3mm drill bit, drill a hole at each marked point.
4. Place the basket back into position in the window space, and use Self Tapping Screws and M5 Washers to loosely secure each mounting point.
5. Tighten each screw until secure. Ensure that you don't over-tighten, as this can strip the hole.
6. Repeat steps 1 to 6, on the other door with the remaining window basket.
7. That's it – you're done! Now you've got two handy storage spots in your rear doors for soft storage items like towels, wipes etc. We'll leave the arranging up to you.

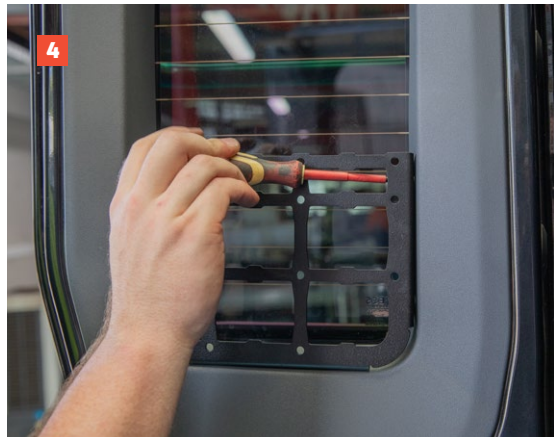



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.