



FITTING INSTRUCTIONS FOR


SwitchBolt Mounting Kit

SKU

KS0881

COMPATIBILITY

Rhino-Rack Pioneer Platform Series 4, 5 & 6

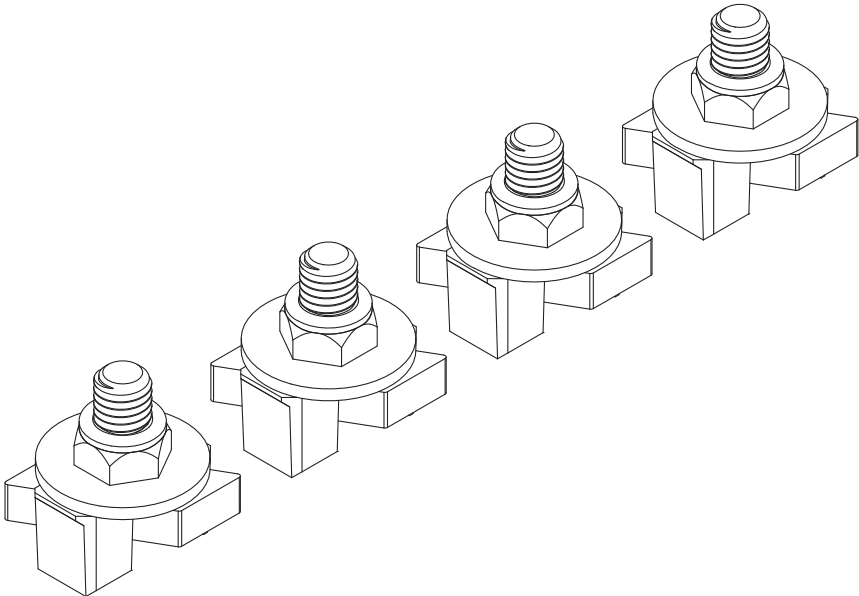

Included contents

QTY	COMPONENT	QTY	COMPONENT
4	SwitchBolt Tee Bolt	4	M8 x 24 x 2.0 DIN Washer
4	SwitchBolt Retainer	4	M8 Nyloc Nut



Time


2 minutes / Sip of beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au

Let's get to work.

Installation

1. Place the Tee Bolt into the channel as pictured, in the mounting location required.
2. Turn the Tee Bolt in the channel, until it sits securely up against the sides, as pictured.
3. Place the retainer over the Tee Bolt to lock its position in the channel. The retainer must be used in order to secure the bolt's position.

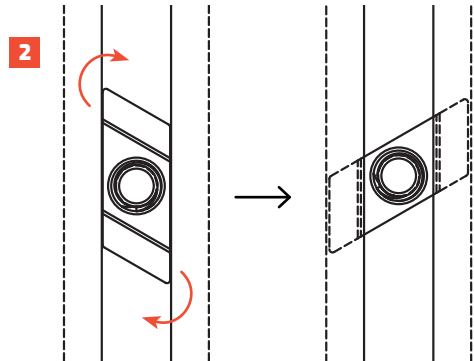

Installation cont.

4. Next, place whatever bracket or accessory you are mounting over the SwitchBolt.
5. Secure the bracket or accessory using the supplied washer and nut.
6. Tighten the nut until secure.
7. That's it, you're done!





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.