



FITTING INSTRUCTIONS FOR


# Tailgate Console

SKU

**KS0970**

COMPATIBILITY

**Toyota Prado 250**

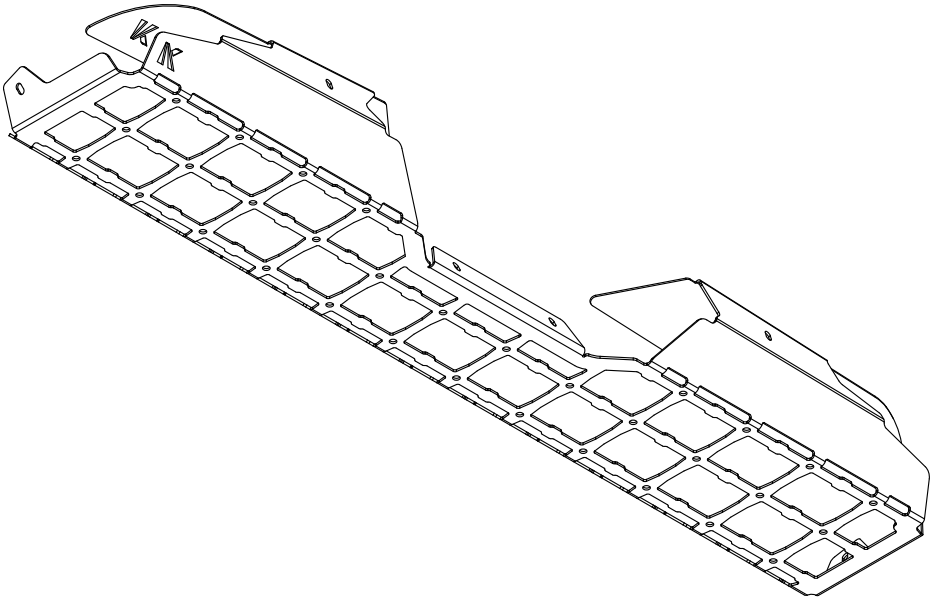

## Included contents

QTY	COMPONENT
1	Tailgate Console
6	Black Self Tapping Screw
6	M5 x 16 x 1.0 DIN Washer



**Time**

30 minutes / Half a beer

Scan the **QR code** to watch the video installation guide,  
or for further information contact KAON on **07 3180 1470** or [info@kaon.com.au](mailto:info@kaon.com.au)



# Let's get to work.

## Preparation

1. Before starting the install, we recommend considering what accessories you wish to secure to the Tailgate Console. While you can always add things later, now is the easiest time to mount 12-volt accessories, QuickFist, or even secure bags to the mesh.
2. First, we need to identify the mounting position within the window frame. With the tailgate down and glass open, insert the Console through the window opening. A little pressure may need to be applied to move it past the weather seal and into position. Once within the window, the Console should hold itself in place.
3. Next we need to mark the pilot holes. Position the console with a slight gap to the weather seal and mark all the mounting points.
4. With the mounting points marked and confirmed, remove the Console from the vehicle.
5. Use a punch tool to make a small indent at all the marked pilot hole points. This will help prevent the drill from wandering.



## Installation

6. Using a 3mm drill bit, drill a hole at each marked point.
7. Reinstall the Console in the window opening.
8. Use Self Tapping Screws and M5 Washers to loosely secure each mounting point. We recommend starting with the two outside ones and working inwards. Note you may need to access some of the heads through the mesh.
9. Confirm the position of the Console and make any necessary adjustments before tightening each screw until secure. Ensure that you don't over-tighten as this can strip the hole.
10. Gently close the glass to ensure everything is installed correctly and that the door clears.
11. That's it – you're done! Now you've got a handy storage spot in your tailgate for soft gear.





### **Local Knowledge & Assistance**

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

**For further information call 07 3180 1470 or email [info@kaon.com.au](mailto:info@kaon.com.au)**

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.