



FITTING INSTRUCTIONS FOR


Midi Fuse Battery Bracket

SKU

KS0989

TO SUIT

Toyota Prado 150 & FJ Cruiser

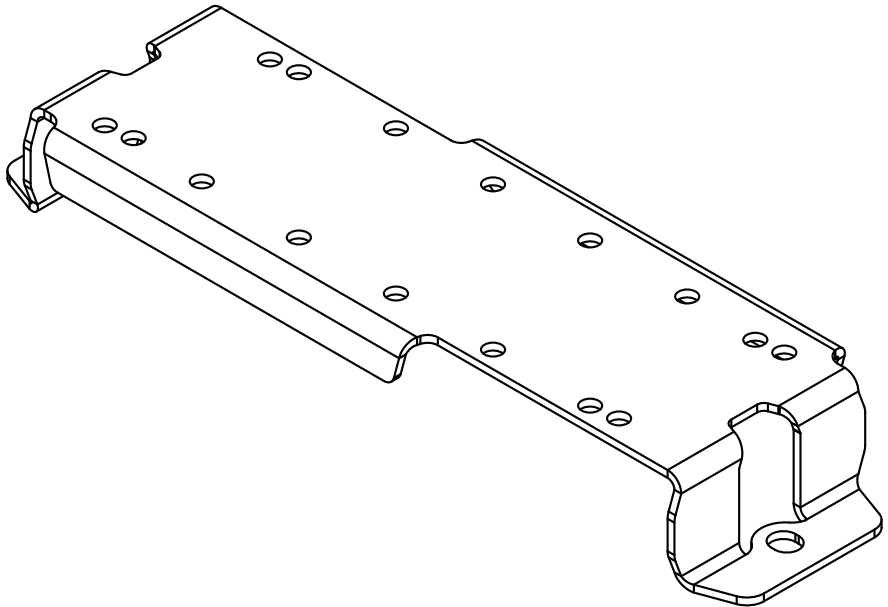

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Midi Fuse Battery Bracket	8	M4 Nyloc Nut
2	M6 Flat Flanged Nut	8	M4 x 16 Socket Head Cap Screw
8	M4 x 9 x 0.8 DIN Flat Washer		



Time

15 minutes / Few sips of beer

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**


G8.8 Bolt Torque (Non-Lubricated)

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

Let's get to work.


Preparation

1. Before installing, test fit the Battery Fuse Bracket over the factory clamp in the orientation pictured. You will need to ensure you have sufficient clearance to the terminal cables and any fuse blocks. Depending on your setup, this may require reconfiguring the cables slightly, so they run into the terminals from the sides.
2. Ensure that all surfaces are clean, and free of dust and debris.

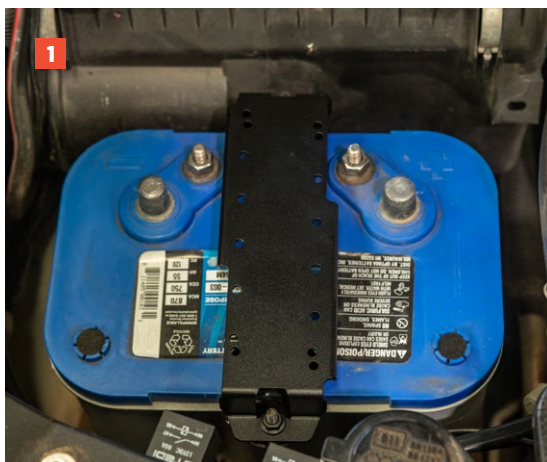

Installation

3. First things first, you'll want to work out the configuration of your midi fuses. Our bracket has holes and we've also provided enough stainless steel mounting hardware to suit most applications, with eight M4 bolts, washers and nyloc nuts.
4. With all the fuses mounted, place the bracket **over** the factory battery clamp, and secure in place using the two M6 nuts.
5. Confirm the position of the bracket and that it has sufficient clearance to the terminals. Gently close the bonnet to confirm sufficient clearance to the underside.
6. With all clearances confirmed, tighten the M6 nuts.
7. That's it, the bracket install is done! But your wiring job has just begun.

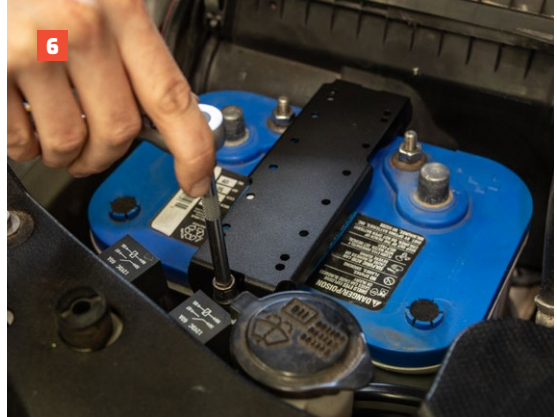



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.