



FITTING INSTRUCTIONS FOR


Rear Window Basket Set

SKU

KS0993

COMPATIBILITY

Toyota LandCruiser LC76, LC78 (DPF Models 2016 onwards)

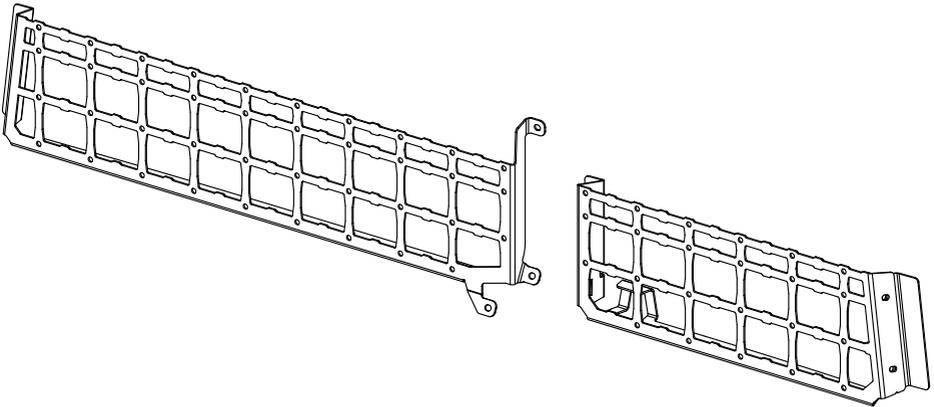

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Rear Door Basket Large	3	3/4" Self Tapping Screw
1	Rear Door Basket Small	2	M6 x 18 X 1.5 Flat Washer
1	Rear Door Basket Small Clamp	2	M6 Flat Flanged Nut
3	M5 x 16 x 1.0 DIN Washer	2	M6 x 12 Button Head Socket Screw



Time

20 minutes / Half a beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or info@kaon.com.au



Let's get to work.

Preparation

1. Consider any accessories you may want to mount to the Molle mesh of the rear window baskets, as they will be easier to install now, off the vehicle.
2. Prep the larger barn door for installation by removing the screws on the plastic trim and setting the trim aside.
3. Using a trim tool, remove the two lower plastic clips from the window frame at the locations indicated. Do not remove the larger plastic screw points or upper two clips.
4. Next, reuse the factory hardware to loosely reattach the black plastic trim to the top two mounting points.

The lower three mounting points on the front face of the black trim will have hardware fitted to them later.

5. Reattach the trim on the lower right-hand side using the factory bolt.





Installing the Large Window Basket

6. It's now time to install the larger Rear Window Basket. Position the larger basket as pictured, sliding the felt taped edge into between the rubber window seal and metal door trim on the left hand side.
7. Pivot the end of the basket toward the door, aligning it with the mounting holes on the plastic trim. Take care not to mark the door paint whilst handling the basket. While holding the panel against the door, check the bottom edge is parallel to the door and the gap is even across the bottom.

If the panel is out of alignment, you can adjust its position by taking tension off the panel and sliding it up or down in the window panel then pivoting it back toward the mounting points.

8. With the window basket's position confirmed, loosely attach the basket to the plastic trim using the supplied screws and washers.
9. With everything attached, you can now tighten the screws, until they are just secure. It's important that they are just to this point so they are not overtightened.

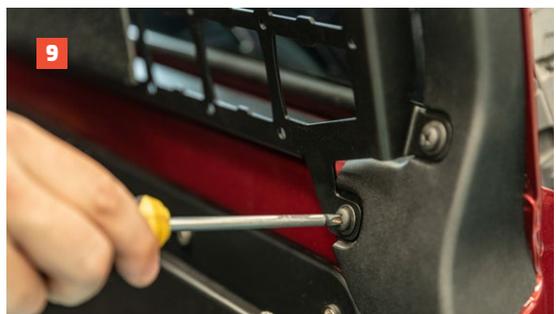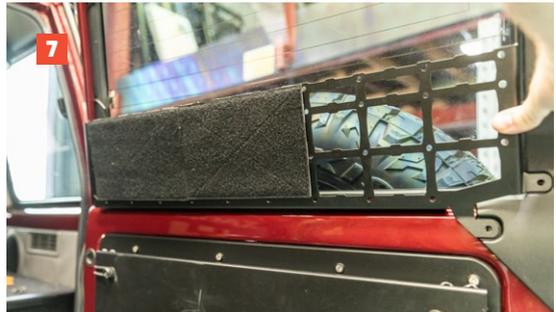

Installing the Small Window Basket

10. Press down the lock button on the smaller barn door.
 11. Insert the small clamp into the gap between the rubber and window frame on the right side, ensuring that the felt side is facing the frame.
 12. Insert the felted edge of the small window basket on the left side of the window, and pivot toward the clamp bracket on the right.
- To be in the correct position, the clamp should be on the inside edge of the window basket and the bolts should be aligned. Adjust the position of both as required to achieve this, ensuring that you keep it parallel to the window and being careful not to damage the paint.
13. With position of the two confirmed, attach the two brackets using the supplied M6 hardware.
 14. Unlock the small door and close the back doors to check clearance to any other accessories.
 15. That's it – you're done!



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.