





FITTING INSTRUCTIONS FOR

# Rear Window Basket

SKU	COMPATIBILITY	VARIANT
<b>KS1008</b>	<b>Toyota Prado 150 &amp; Lexus GX 460</b>	<b>Flat Tailgate Models</b>

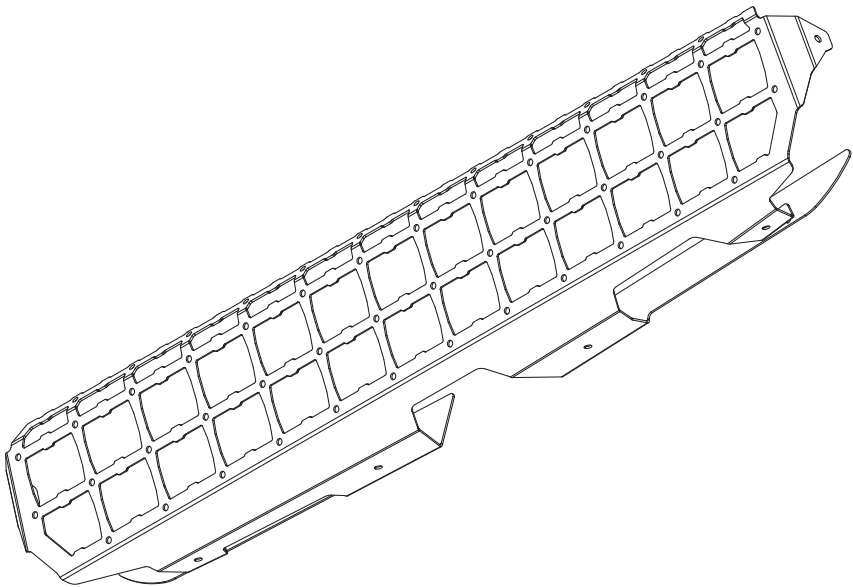

Included contents	
QTY	COMPONENT
1	Rear Window Basket
6	Black Self Tapping Screw
6	M5 x 16 x 1.0 DIN Washer

 <b>Time</b>	30 minutes / Half a beer
---	--------------------------

For further information contact KAON on **07 3180 1470** or [info@kaon.com.au](mailto:info@kaon.com.au)


## Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

# Let's get to work.

## Preparation

1. Before starting the install, we recommend considering what accessories you wish to secure to the Rear Window Basket. While you can always add things later, now is the easiest time to mount 12-volt accessories, QuickFist, or even secure bags to the mesh.
2. First, we need to identify the mounting position within the window frame. With the rear door open, hold the basket firmly against the window cavity as pictured. Whilst applying a small amount of pressure to the basket, use a pen to mark out each pilot hole.
3. Hold the Rear Window Basket firmly and evenly in place and confirm that you've marked each mounting point in the correct location. Once confirmed, remove the Rear Window Basket from the rear door.
4. Use a punch tool to make a small indent at all the marked pilot hole points. This will help prevent the drill from wandering.

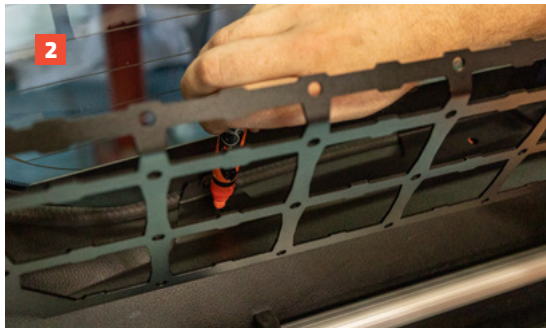

## Installation cont.

5. Using a 3mm drill bit, drill a hole at each marked point.
6. Reinstall the basket in the window opening.
7. Use Self Tapping Screws and M5 Washers to loosely secure each mounting point. We recommend starting with the two outside ones and working inwards. Note you may need to access some of the heads through the mesh.
8. Confirm the position of the basket and make any necessary adjustments before tightening each screw until secure. Ensure that you don't over-tighten as this can strip the hole.
9. Gently close the door to ensure everything is installed correctly and the basket does not foul on any other accessories in the boot space. Also gently open and close the Tailgate glass to confirm there is no fitment issues in the window space.
10. That's it - you're done! Now you've got a handy storage spot in your tailgate for soft gear.





## **Local Knowledge & Assistance**

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

**For further information call 07 3180 1470 or email [info@kaon.com.au](mailto:info@kaon.com.au)**

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.