



FITTING INSTRUCTIONS FOR


Front Guard Spacer Kit

SKU

KS1024

COMPATIBILITY

Toyota Prado 250, LandCruiser LC300

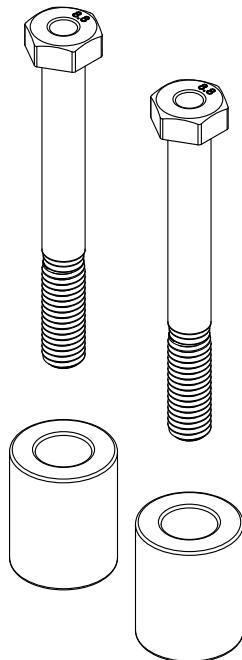

Included contents

QTY	COMPONENT
2	M8 x 70 G8.8 Hex Bolt
2	25mm Aluminium Spacer



Time

5 minutes / Sip of beer


G8.8 Bolt Torque (Non-Lubricated)

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

Let's get to work.

Installation

1. Before proceeding with these instructions, ensure you have completed the installation steps for your X700 Underbody Guards.
2. Remove the front two bolts connecting the Front Guard to the crossmember. The rear bolts will hold the Front Guard in place.
3. Stack the supplied 25mm aluminium spacer and factory spacer, and sandwich between the Front Guard and the bullbar splash guard. Secure the position of the spacers by threading through the supplied M8 bolt into the crossmember, as pictured. Ensure you use also re-use the factory washer on the exterior side.
4. Reattach the upper bolts connecting the splash guard bolts to the bullbar.
5. That's it - you're done!

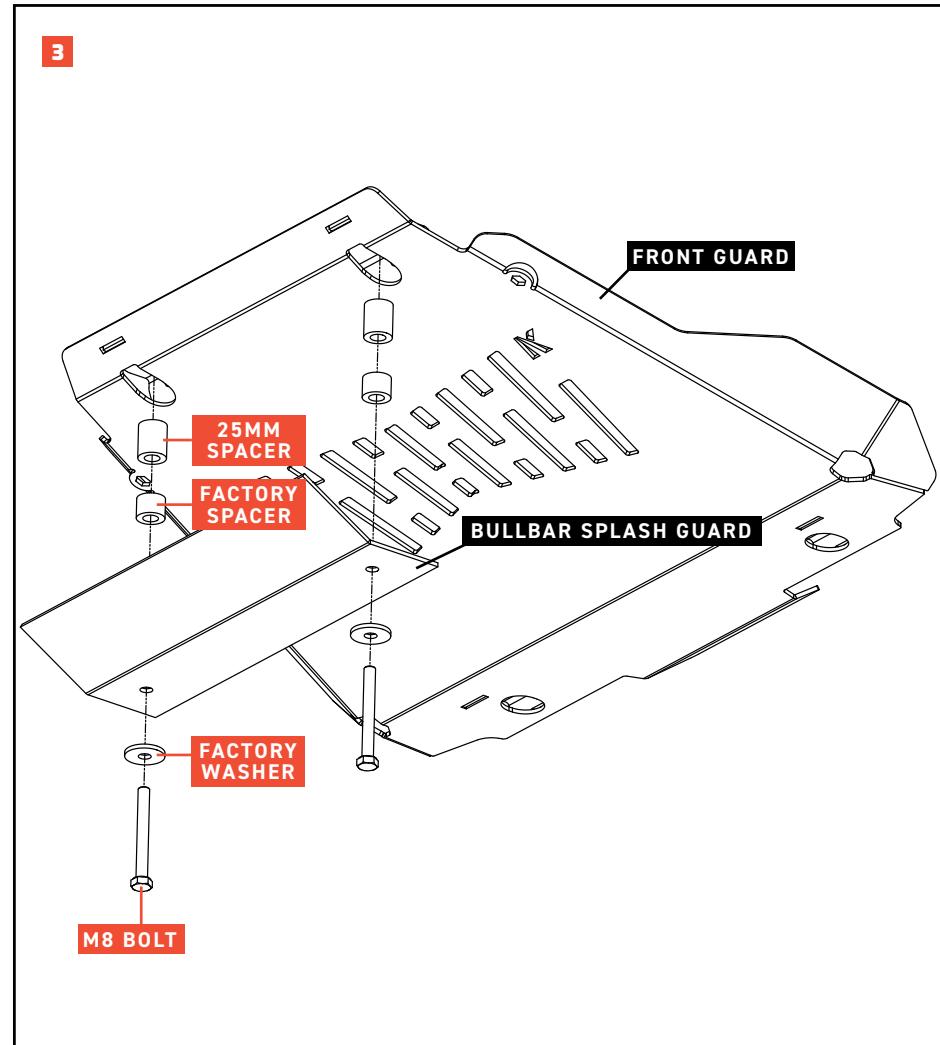



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.