



FITTING INSTRUCTIONS FOR


Rear Window Basket

SKU

KS1025

COMPATIBILITY

Toyota FJ Cruiser

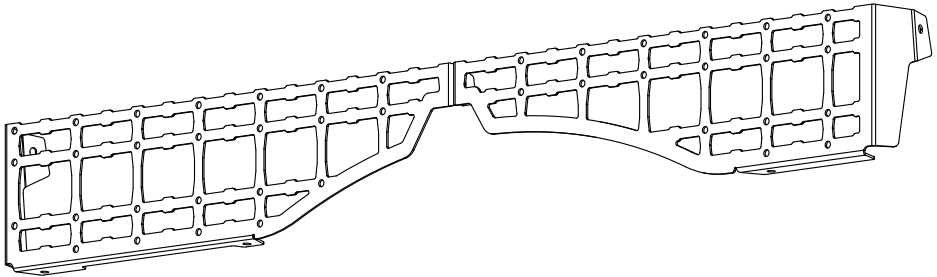

Included contents

QTY	COMPONENT	QTY	COMPONENT
2	Rear Window Basket (LHS & RHS)	1	M5 Nutsert Tool
4	Self Tapping Screw	6	M5 x 16 x 1.0 DIN Washer
1	M6 x 12 Button Head Socket Screw	2	M5 Nutsert
1	M6 Flat Flanged Nut	2	M5 X 16 Button Head Cap Screw



Time

30 minutes / Half a beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or info@kaon.com.au




Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Installation

1. Start by assembling the basket. Align both the left and right side and connect through the central hole using the supplied M6 bolt and nut.
2. We recommend applying masking tape where the basket will make contact with the door, to protect the paint. Mock up the position of the basket in the door frame, and make a note of these spots.
3. Open the rear door window.
4. Place the basket back in to position in the door frame. The back tabs should align with the weather seal. If you're installing this solo, we recommend applying some double sided tape to the rear tabs to help it remain in position.

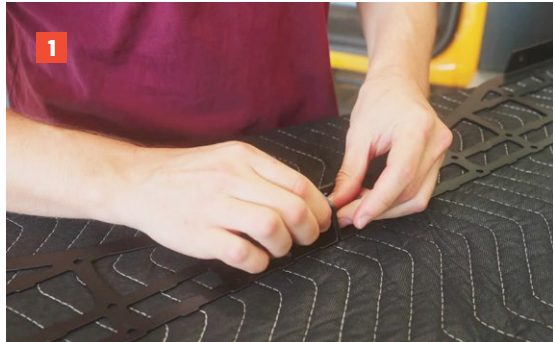

Installation cont.



5. Mark all the bolt hole positions in the window frame.
6. Remove the window basket once again. With the mounting positions marked, we recommend using a centre punch on each marked point on the metal part of the frame to make a guide for the drill to follow.
7. We recommend using a step drill bit to create an opening for the nutserts. Note and mark the 8mm step on the bit, and when drilling ensure that you only drill in as far as this mark. If you don't have a step drill bit, we recommend drilling a 3mm pilot hole before following with an 8mm bit.

Slowly drill an 8mm hole in each centre punched mounting position.

8. Before removing the masking tape, we recommend sealing the raw steel edges with a dab of paint.



9. It's now time to install the nutserts to the metal part of the window frame. If you have a nutsert gun, use it to install the nutserts. Otherwise, set up the nutsert on the provided nutsert tool using an allen key and a ring spanner, as pictured. Apply a small dab of grease to the threaded bolt on the nutsert tool, reapply as necessary.
10. Set the nutsert into the hole and tighten until you feel that it has clamped onto the vehicle.
11. Once set, remove the bolt and washer, leaving the nutsert in the rear door.
12. Repeat on the other side of the window frame.
13. Ensure that you remove any double sided tape on the back tabs and place the basket back into position, holding it firmly in place. Secure it to the nutserts using the M5 screws and washers.

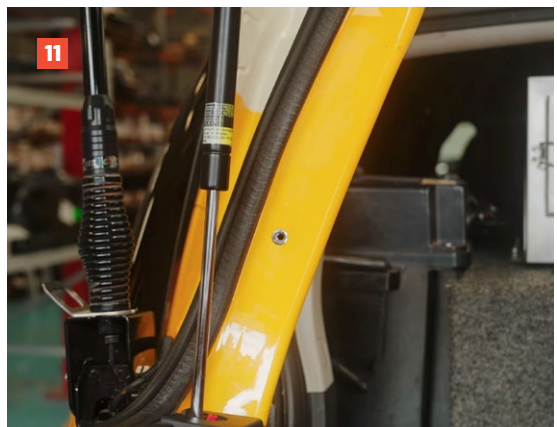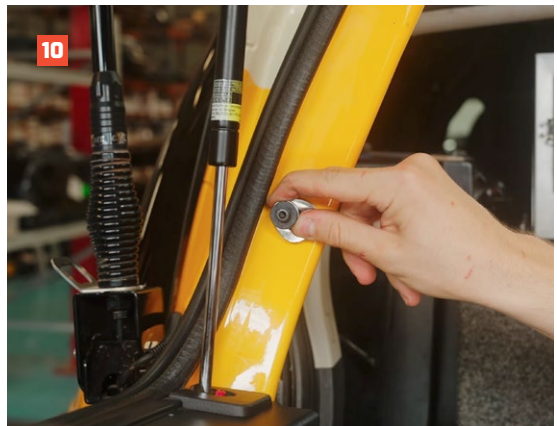

14. Secure the basket through the bottom mounting points using the self tapping screws and washers. Tighten just until secure, taking care to not overtighten and strip the plastic.
15. Tighten the M5 hardware on each side of the basket.
16. That's it - you're done! Now you've got a handy storage spot in your rear door for soft storage items like loo paper, towels etc. We'll leave the arranging up to you.





This page has been left intentionally blank.

This page has been left intentionally blank.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.