




FITTING INSTRUCTIONS FOR

Rear Antenna Mount

SKU	COMPATIBILITY
KS1063	Toyota LandCruiser LC76, LC78

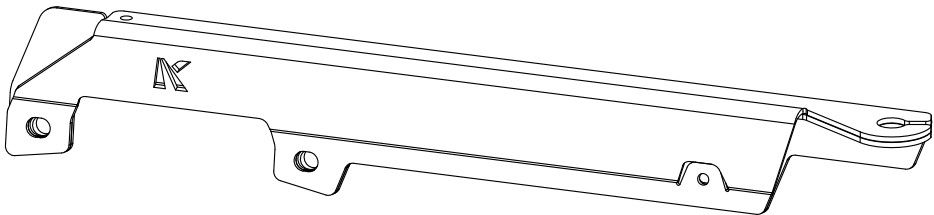

Included contents			
QTY	COMPONENT	QTY	COMPONENT
1	Antenna Mount Front Bracket	2	M10 x 1.25 x 35 Hex Bolt
1	Antenna Mount Back Bracket	2	M10 x 20 Flat Washer
2	Spacer	2	M6 x 12 Button Head Socket Screw
		2	M6 Nyloc Nut

 **Time**

15 minutes/ Few sips of beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or **info@kaon.com.au**




Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.


Installation

1. Identify the front and back Antenna Mount Brackets. Sandwich them together as pictured, and secure them with the supplied M6 hardware in the bottom right and top left corners.
2. Ensure that both brackets are in alignment. Using a spanner to hold the nut in place, tighten the M6 hardware.
3. Remove the rear spare wheel from the vehicle.

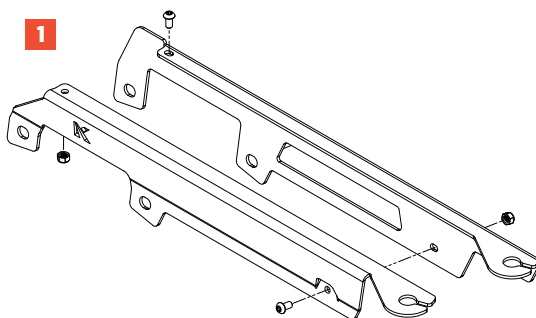

Installation cont.

4. Remove the top two bolts on the spare tyre mount pictured.
5. Secure the assembled antenna mount bracket to these openings, using the supplied M10 hardware and sandwiching a spacer at each mounting point between the bracket and the spare tyre mount. Hand tighten the bolts.
6. Adjust the bracket to the desired position, ensuring that it is sitting centered and level. When the position is confirmed, tighten the bolts until firmly secure.
7. Feed the antenna through the slotted opening and secure to the antenna mount. Tighten until secure.
8. Now you can route your cable! We'll leave that part up to you, as it will depend on where you want your radio. You can either simply run the wire into the door cavity, or through the grommet in the door into the vehicle's frame.
9. Once you've got your antenna cabling sorted, you can reattach the rear spare tyre to the vehicle.
10. That's it – you're done!

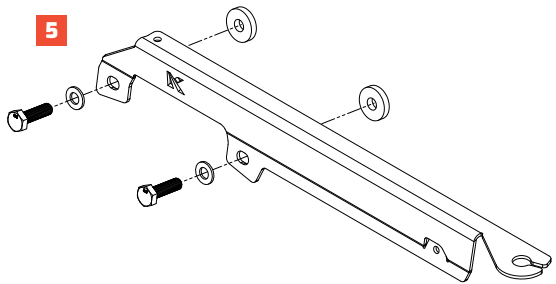



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.