




FITTING INSTRUCTIONS FOR

Air Compressor and Switch Bracket

SKU	COMPATIBILITY	TO SUIT
KS1088	Toyota Prado 150	ARB Brushed & Brushless Air Compressor

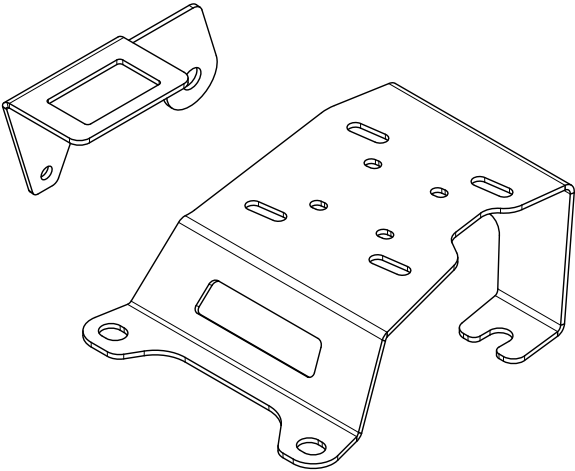

Included contents			
QTY	COMPONENT	QTY	COMPONENT
1	Air Compressor Bracket	5	M6 x 16 Flanged Bolt
1	Air Compressor Switch Bracket	4	M6 x 18 x 1.5 Flat Washer
1	Cable Tie	4	M6 Flanged Nut
3	M8 Flanged Nut	1	M5 x 12 Flat Flanged Bolt
		1	M5 Flat Flanged Nut

**Time** 30 minutes / Half a beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or **info@kaon.com.au**



Bolt Torque


DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Air Compressor Installation

1. Secure the ARB mounting plate from your air compressor kit to the KAON compressor mounting bracket using the supplied M6 hardware. The brushless compressor plate is shown here, but our mounting bracket is also compatible with the brushed compressor. Adjust the position of the bracket on the mounting plate on the bracket as required, then tighten the hardware until secure.

If you are running a brushed air compressor, you will need to attach the compressor to the assembled base plate and mounting bracket, before you proceed with installation. If you are running a brushless compressor, you may reattach the compressor at a later point for easier access in the engine bay.

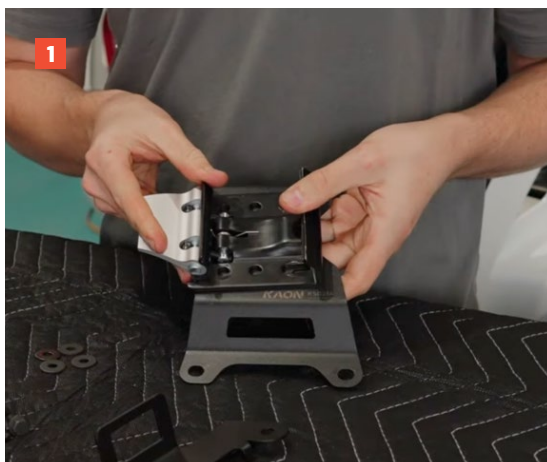

Air Compressor Installation



2. Identify the three mounting points pictured in the engine bay. Loosely secure a supplied M8 nut to the rearmost bolt.
3. Slide the slotted opening at the rear of the mounting bracket on to the bolt, sandwiching it between the M8 nut and the vehicle. Feed the other openings over the remaining two exposed bolts, and secure with M8 nuts. Tighten all nuts until secure.

If you are running a brushless air compressor, you may now reattach it to the base plate.

4. Relocate the factory plug to the left of the air compressor pictured. We have supplied a cable tie so you can attach it to the wire loom directly beneath it.
5. If you are running the brushed air compressor, attach the relay to the switch bracket on the pictured mounting point using the M5 hardware before proceeding.

Attach the switch bracket to the mounting point, using a supplied M6 bolt. The small folded edge of the bracket should sit in the opening on the left, and help to stabilise the bracket. Tighten the M6 bolt until secure.

6. That's it – you're done! Now is the time to wire up your air compressor. Follow ARB's instructions to complete the installation, including connecting the air compressor fittings (ensuring the air fitting is oriented as pictured), and finalising the wiring and switch routing.

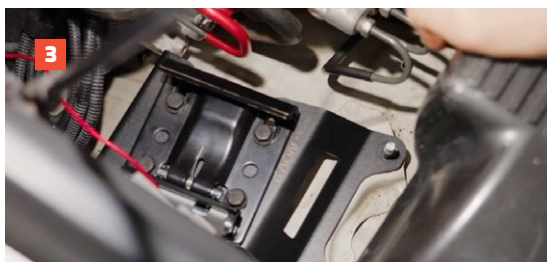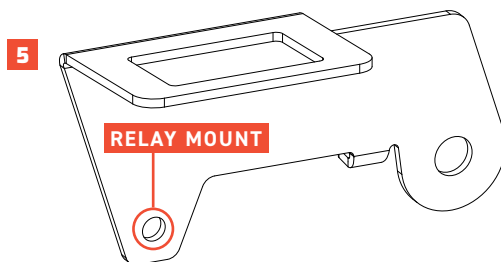



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.