
FITTING INSTRUCTIONS FOR

Standalone Rear Roof Shelf

SKU	COMPATIBILITY
KS0564	***Jeep Wrangler JK***

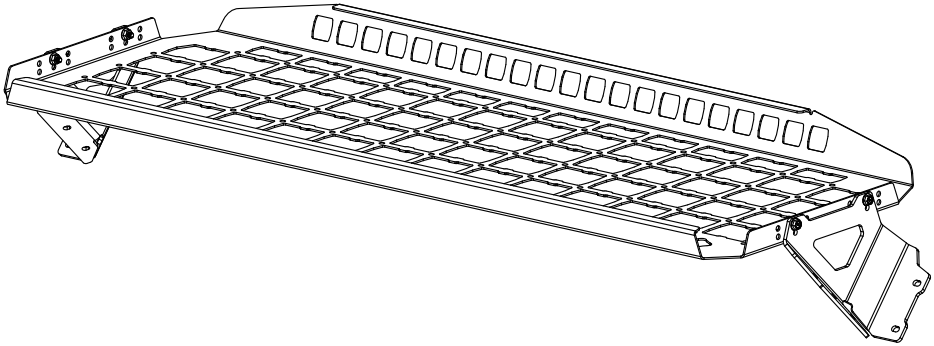

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Rear Roof Shelf	8	M6 x 16 Flanged Hex Bolt
2	Mounting Brackets	4	M6 Flanged Nut
		4	M6 X 18 X 1.6 DIN Flat Washer

Time	15mins / Few swigs of beer


Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

G8.8 Bolt Torque (Non-Lubricated)					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

Let's get to work.

Preparation

1. Open up the velcro sections on each side of the roll cage cover to reveal the captive mounting points.
2. Before commencing the install, decide if you want to mount your shelf in the upper or lower position. If you have purchased two shelves, skip to page 4 to install them simultaneously.

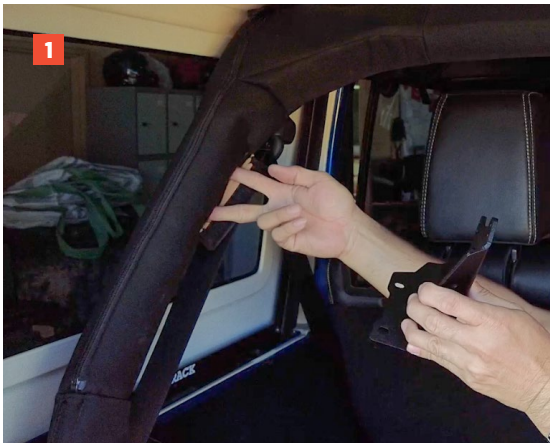



Installation

1. **For the upper mounting position:** secure the mounting bracket to the roll bar using the provided M6 bolts and washers, in the orientation pictured.
2. **For the lower mounting position:** secure the mounting bracket to the roll bar using the provided M6 bolts and washers, in the orientation pictured.
3. Position the shelf and attach to the mounting brackets using M6 flanged bolts and nuts.
4. Once the shelf is in the desired position, tighten all bolts securely.
5. That's it! Your new shelf is able to hold a recommended maximum load of 10kg.

   It's also got twin bottle openers on each side, and the bracket can be used to secure extinguishers or other accessories.







Dual Shelf Installation

1. **To install two shelves in the upper and lower positions simultaneously:** sandwich the mounting brackets and secure to the roll bar using the provided M6 bolts and washers, as pictured.
2. Position the upper shelf first, and attach to the mounting brackets using M6 flanged bolts and nuts.
3. Position the lower shelf and attach to the mounting brackets using M6 flanged bolts and nuts.
4. Once the shelves are in the desired positions, tighten all bolts securely.
5. That's it! Your new shelves are each able to hold a recommended maximum load of 10kg.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.