
FITTING INSTRUCTIONS FOR

Standalone Rear Roof Shelf

SKU	COMPATIBILITY
KS0640	***Toyota Prado 150***

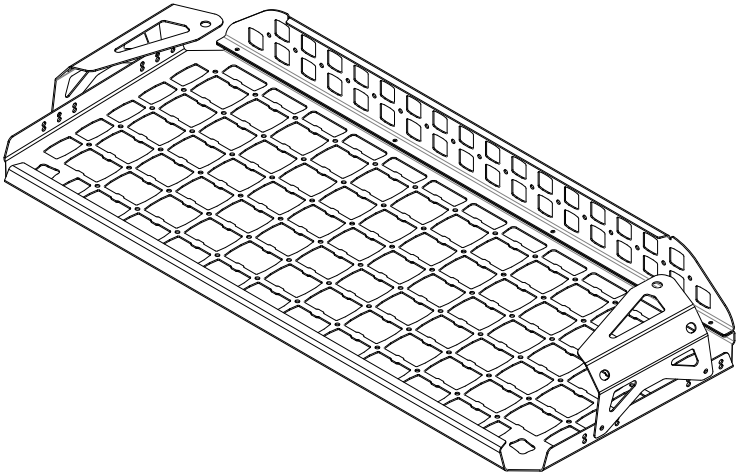

Included contents


QTY	COMPONENT	QTY	COMPONENT
1	Rear Roof Shelf	4	M5 x 12 Flanged Hex Bolts
1	Rear Fence	4	M5 Flanged Nuts
2	Handle Brackets	4	M6 x 16 Flanged Bolts
		4	M6 Flanged Nuts

Time 30 minutes / Half a beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

It all works together.

All our storage products work together, but there is a certain order to installing.
Let's work out the best order for your setup, shall we?

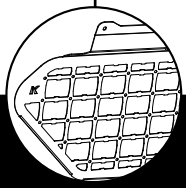

Are you installing a Side Molle Panel?

YES


Assemble the Molle Panel as per it's instructions. Now's the time to mount any additional accessories to the Molle as well.

Are you installing other KAON Storage Products?

NO

Complete the Molle Panel as per it's instructions.

NO

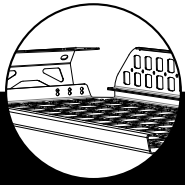

Are you installing a Standalone Shelf?

YES


Follow the Shelf fitting guide, and if relevant, the Side Molle option for your setup. Complete the Shelf & Molle install.


Are you installing other KAON Storage Products?

NO

That's it, you're done!

YES

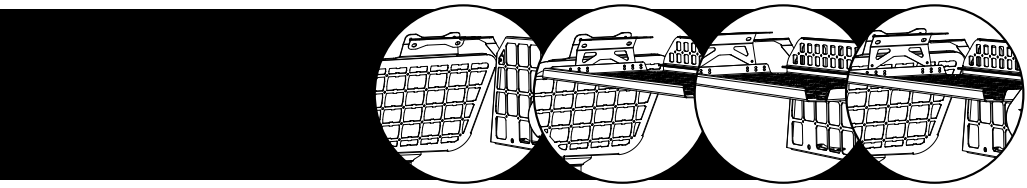

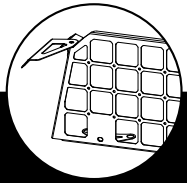

Are you installing a Light Cargo Barrier?

NO

YES

The last piece of the puzzle, complete your install by following the Light Cargo Barrier fitting guide.

Are you installing other KAON Storage Products?

YES

NO

That's it, you're done!

YES

With the foundation in place, it's time to mount any other accessories, such as a Cargo Divider, Travel Buddy, etc. Have fun making it your own.

With your setup order sorted, let's get to the good part: installing. →

Let’s get to work.

Preparing the Vehicle

1. Pry open the plastic covers on the rear grab handles with a small flatblade screwdriver or trim tool.
2. Use a 10mm socket to remove the rear handles. Set aside.









Assembling the Shelf

3. Attach the rear fence to the shelf using M5 nuts and bolts.
4. Tighten to secure.

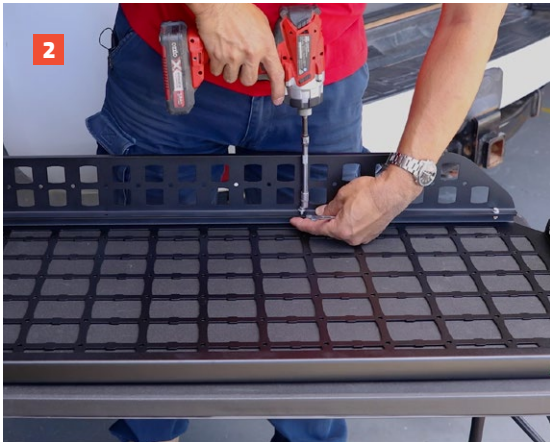

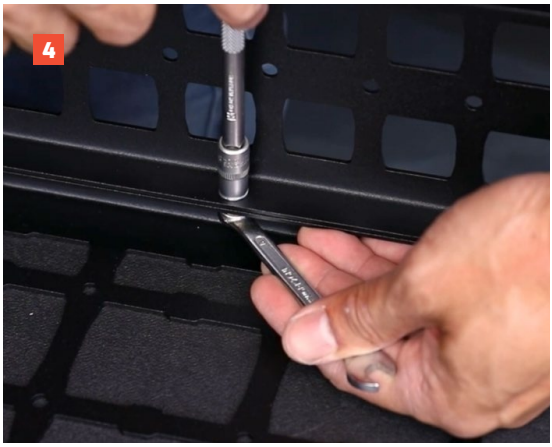

Installing the Brackets

To install the Standalone Shelf with or without a Light Cargo Barrier:


5. Attach the handle brackets using M6 flanged bolts, and reattach the handles. Ensure the nutsert is at the top, towards the front of the vehicle, as pictured.
6. Tighten to secure.

To install with the Side Molle Panels:

7. Ensure you have the correct molle panel for each side, with the 'K' positioned at the back of the vehicle.
8. Sandwich the Standalone Shelf handle brackets over the Molle Panel top mounts. Ensure the nutsert is at the top, towards the front of the vehicle, as pictured.
9. Secure the bolts. You can opt to retain the factory bolts and reinstall the grab handle over the top, or, the molle panel includes washers which can be used instead of the factory hardware.
10. Install the Side Molle Panel lower mount bracket using it's included M6x50 bolt.
11. Check the spacing and position of the Side Molle Panel, and tighten all bots to secure.
12. Tighten to secure.





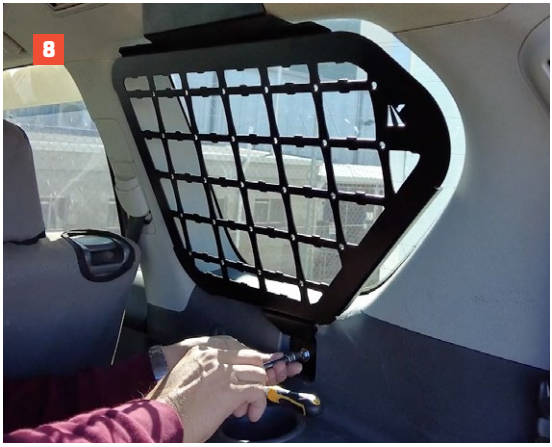


Installing the Shelf

13. With the brackets up, it's time to install the shelf itself. Whilst this can be done on your own, you may find it easier to ask a mate for help.
14. Position the shelf and use the M6 bolts and nuts to install the shelf to the bracket. There are a couple of positions for adjustment in your shelf positioning.
15. With the shelf position confirmed, tighten all the bolts.
16. That's it! Your new shelf is able to hold a recommended maximum load of 10kg. It also has some handy hooks to hang bags, and twin bottle openers on each side.

If you're adding a Light Cargo Barrier:

17. Follow steps 10-15 in the Light Cargo Barrier instructions to assemble and install.



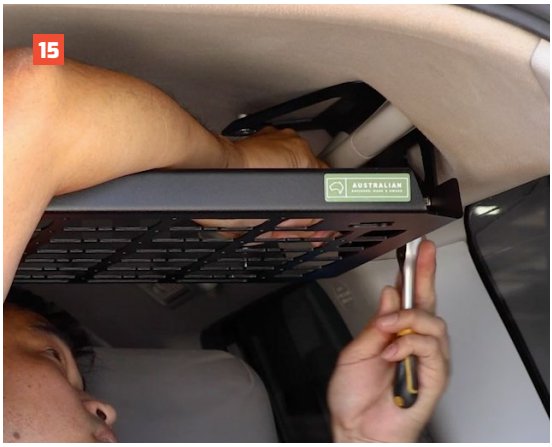



NOTICE

We cannot confirm compatible fitment of this shelf with child restraints, due to the number of possible variations. Whilst it may work with your configuration, we recommend the use of a seat belt protector where any contact occurs between any seat belt or restraint and the shelf.

G8.8 Bolt Torque (Non-Lubricated)

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.