FITTING INSTRUCTIONS FOR


Stealth StarPort Starlink Mount

SKU

KS0727

COMPATIBILITY

ARB BASE Rack

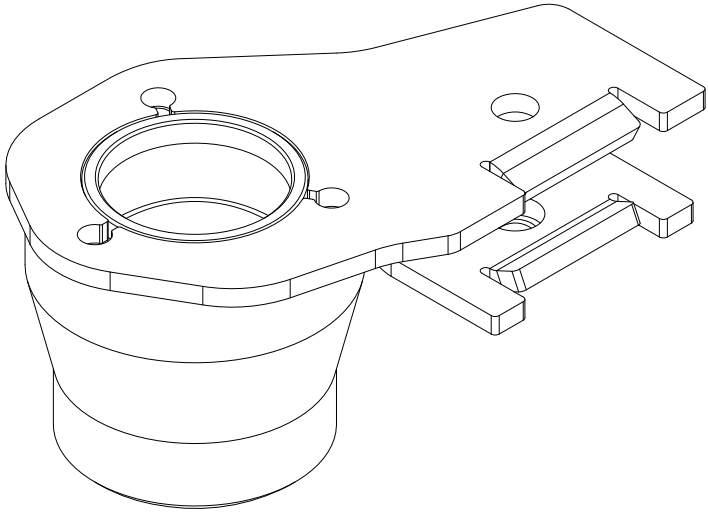

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Stealth Bracket	3	M6 x 16 Button Head Socket Screw
1	Clamping Bracket	1	M8 x 17 x 1.2 Washer
1	Starport Bracket	1	M8 x 35 Button Head Socket Screw

Time 10 minutes / Few sips of beer

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

G8.8 Bolt Torque (Non-Lubricated)					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

Let's get to work.

Preparation

1. Before bolting anything together, loosely fit the stealth bracket over the StarPort bracket. Holding them together, roughly determine the position of where you will mount your Starlink on the roof rack.

   When installed, the Starlink release button is on on the opposite side to a notch located inside the StarPort bracket. It's recommended the StarPort bracket be positioned so the notch sits inwards, so that the release button is easily accessible.




Installation

2. With location determined, attach the StarPort bracket to the Stealth bracket using the supplied three M6 bolts, ensuring you are mindful of the notch location, as mentioned in step one.
3. Using the supplied M8 bolt and washer, pass this through the bolt hole on the top of the Stealth bracket and thread through to the smaller clamp bracket. Screw in by only a few threads.
4. Slide the assembled mount over the dovetail on the side of your base rack slats, and move it to the desired location on the roof rack. Loosely secure until the mount holds in place.
5. Insert your Starlink into the installed mount to verify that it fits and doesn't foul on other accessories or items. Once confirmed, tighten the bolts fully.
6. That's it, you're done! You can now enjoy easy setup for your Starlink, in an elevated and secure spot.





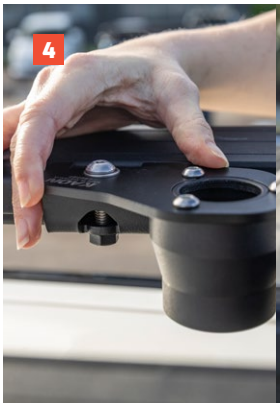



NOTICE

This mount is only designed for use whilst the vehicle is stationary. Please ensure the Starlink dish is removed while the vehicle is in transit.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.