KAON

Flip-Up Number Plate Mounting Bracket

PART NUMBER	COMPATIBILITY
KS0069	*All Vehicles*
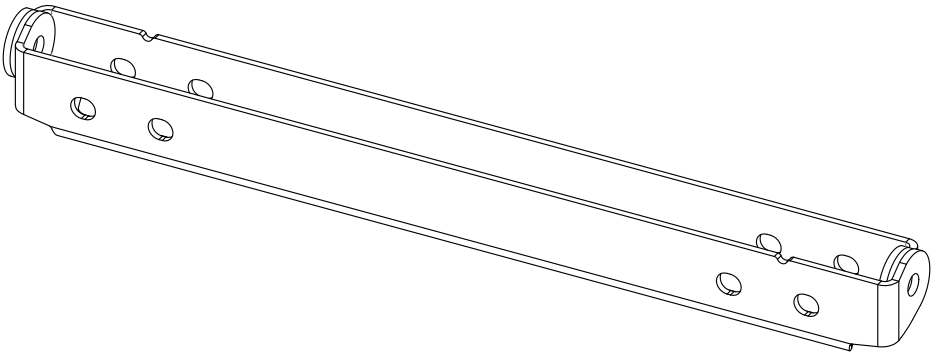
Included contents

QTY	COMPONENT
1	Number Plate Bracket Assembly (2pce)
2	M6 x 16 Socket Head Cap Screws
2	M6 Nyloc Nuts
2	M6 DIN Washers
2	M5 x 12 Flanged Bolts
2	M5 Flanged Nuts

Time | 20 min / Few swigs of beer

Note: the bracket is designed to suit numer plates with 165mm mounting holes.

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

Bolt Torque					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Preparation

1. Assemble the bracket using the M6 screws, nuts and washers. Ensure the notches sit on opposite ends of the assembly, refer to the image 1 below.

2. Adjust the resistance of the hinge by tightening the nyloc nut.

3. Remove the number plate from your vehicle, and retain the fasteners.

Installation

1. Attach the number plate bracket to the vehicle using the fasteners that were originally holding the number plate.

2. Attach the number plate to the bracket using the provided M5 bolts and nuts.

3. Adjust the hinge so that it is firm enough to hold the number plate in place when flipped up.

4. Ta-da! Your number plate is now water-crossing friendly.

Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au