FITTING INSTRUCTIONS FOR

Front Steer Guard

SKU	COMPATIBILITY
KS0244	***Nissan Patrol Y61 GU***

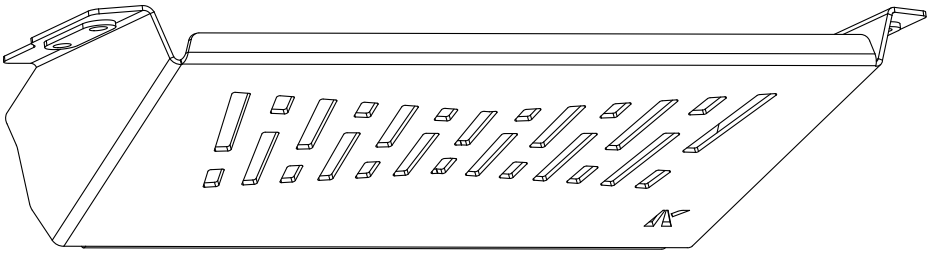

Included contents

QTY	COMPONENT
1	Steer Guard
4	M14x35 Hex Head Bolts G8.8
2	Dual Hole Washers

Time 15 mins / Few sips of beer

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Preparation

1. Clean the mounting surfaces of any dust or debris.

Installation

1. Thread the M14 bolts through the dual hole washers.
2. Hold the Steer Guard in position, and loosely secure each side, using the captive nuts in the chassis rail.
3. Adjust position if required before torquing all bolts to 112m to secure. That's it, you're ready to go!

Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.