FITTING INSTRUCTIONS FOR

Rear Side Pocket

SKU

KS0952

COMPATIBILITY

Toyota Prado 250, Lexus GX 550

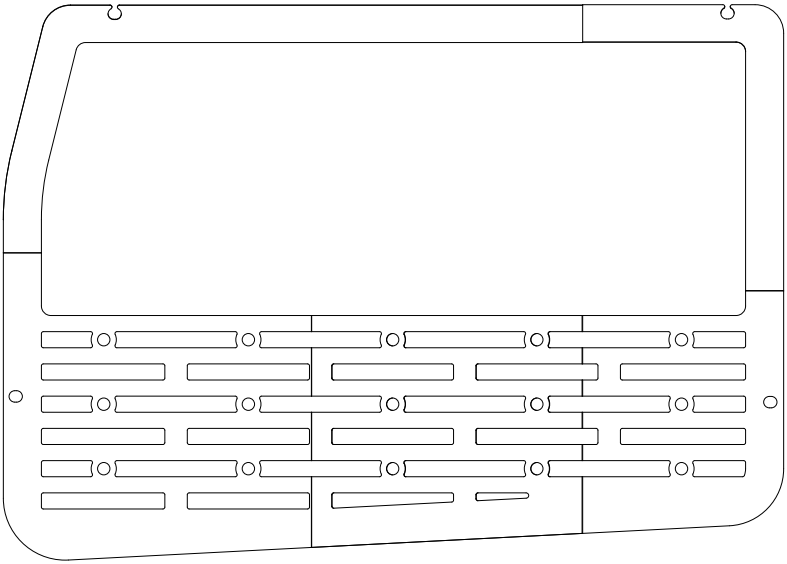

Included contents

QTY	COMPONENT
1	Rear Side Pocket
2	Small Clip
2	Large Clip
4	Self Tapping Screw

Time 10 minutes / Few sips of beer

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

G8.8 Bolt Torque (Non-Lubricated)					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

Let's get to work.

Installation

1. Remove the factory trim.
2. It's now time to install the supplied plugs. You will notice there is two different sizes, as pictured.

   Install the small plugs in the top two openings, and the large plugs in the bottom two openings.



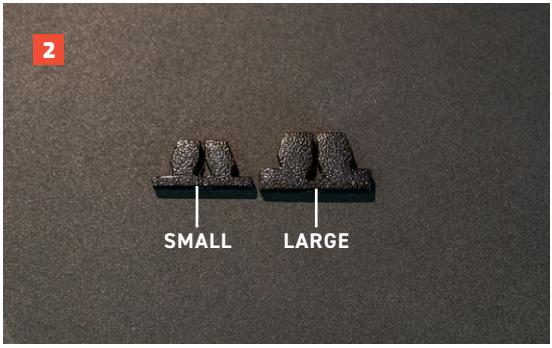



Installation cont.

3. Place the Rear Side Pocket in position, ensuring that the openings are aligned with those on the plugs. Fasten with the supplied screws and take care to not over-tighten.

   Please note: a stubby screwdriver may be required to access some screws.

4. That's it – you're done! You've now got a handy storage spot in the boot for tools and small gear.









Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.