



FITTING INSTRUCTIONS FOR


# Shower Slide Mount

SKU

**KS1009**

COMPATIBILITY

**Rhino-Rack, ROLA, Yakima, Thule**

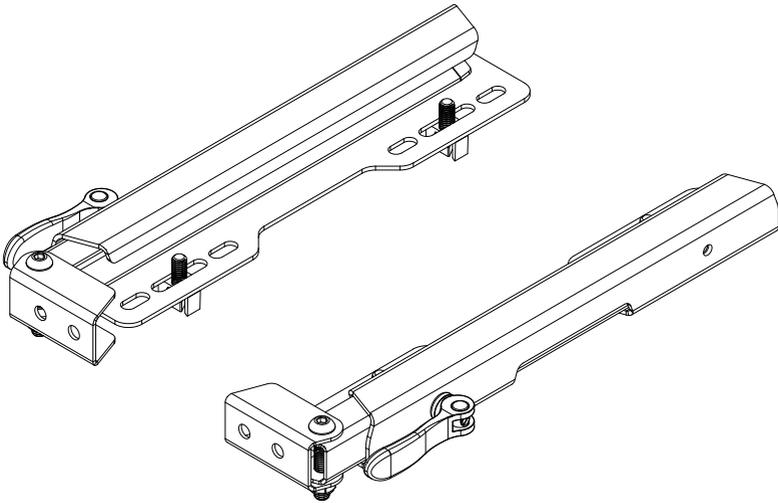

## Included contents

QTY	COMPONENT	QTY	COMPONENT
2	Shower Slide Mount (LHS & RHS)	4	M8 x 20 Tee Bolt
4	SwitchBolt Tee Bolt	4	M8 Nyloc Nut
4	SwitchBolt Retainer	4	M8 x 24 x 2.0 DIN Washer



**Time**

30 minutes / Half a beer


For further information contact KAON on **07 3180 1470** or [info@kaon.com.au](mailto:info@kaon.com.au)

# Which hardware you'll need.


We've made sure to source all the hardware you'll need for your specific type of roof rack, so you can get your shower tent up as hassle-free as possible.

The following fastening hardware will vary, based on which roof rack you are mounting to.

## Rhino-Rack / Yakima

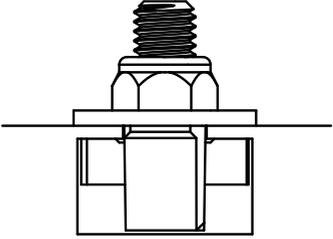QTY	COMPONENT	
4	SwitchBolt Tee Bolt	
4	SwitchBolt Retainer	
4	M8 Nyloc Nut	
4	M8 x 24 x 2.0 DIN Washer	

## ROLA / Thule

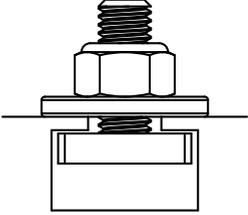QTY	COMPONENT	
4	M8 Nyloc Nut	
4	M8 x 24 x 2.0 DIN Washer	
4	M8 x 20 x 20 T Bolt	

With your hardware confirmed, let's get to the good part: installing. →

---

This page has been left intentionally blank.

## G8.8 Bolt Torque (Non-Lubricated)

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm


# Let's get to work.

## Preparation

1. It's best if we get the mount attached to the shower tent first. Due to the sheer number of shower tent variations, we can't supply the hardware for this. So if you don't have the required hardware on hand, a trip to the shops may be in order.

Most shower tents have two channels, so determine which one to use depending on your desired height and setup needs, and attach the to the mount as pictured.

2. If you would like to make any adjustment to the tightness of the cam levers, now is the time as they will be difficult to access once on the roof. Use a spanner to hold the M6 nut still while rotating the lever itself to adjust. Ensure that you don't over-tighten and it's still possible to open and close the cam lever without difficulty.

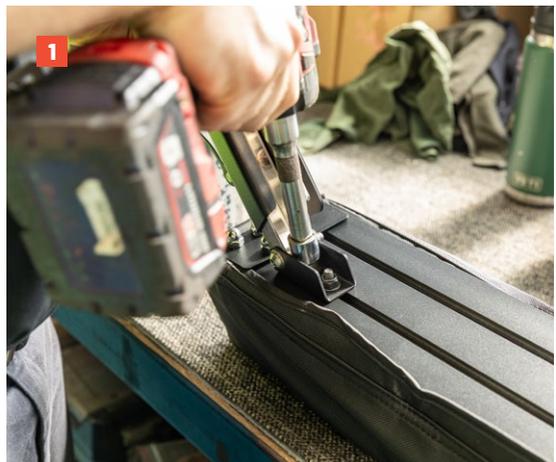

## Installation

3. Mockup the position of the shower tent on the rack to determine the rough positioning, and which channels you'll be mounting to.


4. **If you are installing on a Rhino-Rack, Yakima or relevant Cross Bar rack:**

Place two SwitchBolt Tee Bolts in each channel of the rack, sitting roughly in the position of each mount. Twist each bolt so that it sits flush against the sides of the channel, as pictured. Secure the bolt's position with a Retainer over the top.

**If installing on ROLA, Thule or relevant Cross Bar rack:**

Place two Tee Bolts in each channel of the rack, sitting roughly in the position of each mount.

5. Align the mounts over the hardware from the previous step, place in position on the rack and loosely secure using the supplied M8 nut and washer.

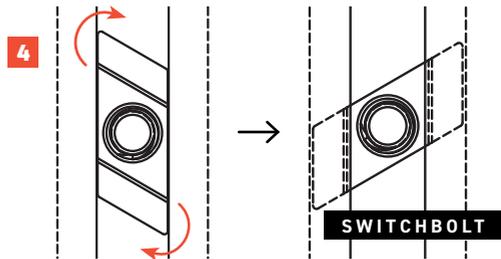

## Installation cont.

6. With the Shower Slide loosely mounted, ensure that the hinging bolt is not fouling on the roof rack, and that both brackets are running parallel to each other. Adjust the position if necessary.
7. With the position of the mounts confirmed, tighten the hardware.
8. That's it - you're done!  
To use the Shower Slide, simply open the cam lever on each side and slide out the extension. Close the lever again to lock the position.



---

This page has been left intentionally blank.



## **Local Knowledge & Assistance**

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

**For further information call 07 3180 1470 or email [info@kaon.com.au](mailto:info@kaon.com.au)**

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.